

Atlanta Kitchen Range Parts List

Note that the quantities listed here below are the standard amounts that are found in each unit and not the number of items you need to order.

REPAIR PARTS LIST (KITCHEN RANGE)

ITEM	QTY.	DESCRIPTION	PART NO.
1	4	COVER	200024
2	2	COVER, SMALL	200067
3	1	FRONT GRATE	200125
4	1	SPRING COVER	200126
5	1	LIFTER SHAKER	200160
6	1	BOTTOM FLUE STRIP	200230
7	2	CUT CENTER	200348
8	2	SHORT CENTER	200349
9	1	OVEN DOOR HANDLE	200506
10	1	SOOT DOOR	200670
11	1	DRAFT DOOR SLIDE	201059
12	1	DUMP GRATE	201074
13	4	FOOT	201111
14	1	FRONT EXTREME BOTTOM	201372
15	1	REAR EXTREME BOTTOM	201373
16	1	OPEN SIDE UPPER CTR. SEC.	201374
17	1	OPEN SIDE LOWER CTR. SEC.	201375
18	1	OPEN SIDE LEFT SECTION	201376
19	1	OPEN SIDE RIGHT SECTION	201377
20	1	FIRE BACK	201399
21	1	FRONT TOP	201400
22	1	RIGHT TOP	201401
23	1	LEFT TOP	201402
24	1	POUCH DOOR	201403
25	2	SHORT BASE	201404
26	2	LONG BASE	201405
27	1	BACK TOP	201406
28	1	RIGHT GRATE REST	201408
29	1	LEFT GRATE REST	201409
30	1	LEFT END LINER	201410
31	1	RIGHT END LINER	201411
32	1	CENTER POST	201412

ITEM	QTY.	DESCRIPTION	PART NO.
33	1	DAMPER HANDLE	201413
34	1	DAMPER	201414
35	1	BACK SHELF	201415
36	1	OVEN DOOR	201420
37	1	FIRE DOOR	201421
38	1	ASH DOOR	201422
39	1	FRONT	201429
40	1	FRONT PLATE	201425
41	1	BACK PLATE	201426
42	1	TOP PLATE	201427
43	1	BOTTOM PLATE	201428
44	1	BACK	201431
45	1	FLUE PLATE	201432
46	2	FIRE & ASH DOOR HANDLE	201434
47	1	BLIND SIDE LEFT SECTION	201523
48	1	BLIND SIDE CENTER SECTION	201524
49	1	BLIND SIDE RIGHT SECTION	201525
50	1	FLUE EXTENSION	202028
51	1	HALF COLLAR	202029
52	1	OVEN RACK	149200
53	1	OVEN DOOR PANEL	302010
54	1	OVEN DOOR LINING	302012
55	1	SOOT RAKE	149155
56	1	DAMPER KNOB	202725
57	1	OVEN DOOR SPRING	149144
58	1	ASH PAN ASSEMBLY	401006
59	2	ASH GUARD	302018
60	1	OVEN DOOR CATCH	149130
61	1	DROP HANDLE	149100
*	1	½ PT. CAN STOVE CEMENT	154100
*	1	OWNER'S MANUAL	110530

*NOT SHOWN