

Vermont Castings Reliance 2340 Part List

RELIANCE 2340

denotes dead item

ITEM #	PART #	DESCRIPTION	ITEM #	PART #	DESCRIPTION
1	130-0026*	Bottom	31	140-0496*	Bottom Shield
2	140-0505*	Left Air Manifold	32	140-0486*	Lower Convection Wall
3	140-0493*	Left Exhaust Passage Cover	33	140-0497*	Lower Left Convection Wall
4	130-0025*	Front Frame	34	140-0494*	Lower Right Convection Wall
5	130-0504*	Right Air Manifold	35	130-0017*	Inner Top
6	140-0492*	Right Exhaust Passage Cover	36	160-0010*	Exhaust Blower (Outsourced Fasco #A082)
7	160-0031*	Burn Pot	37	500-0013	Thermocouple Assembly
8	120-3525*	Burn Pot Gasket (Drawing Available)	38	160-0017	Clevis Pin
9	140-0506*	Top Air Manifold	39	140-0517	Anchor Spring
10	160-0030	Back Log	40	130-0027*	Ash Door
	000-0013*	Log Set	41	160-0040*	Ash Door Hanger
	160-0028*	Top Log	42	130-0024*	Front Door
11	160-0029*	Front Log	43	140-0522	Front Log Holder
12	140-0490	Right Back Log Hook	44	140-0488*	Ash Pan
	140-0491	Left Back Log Hook	45	160-4280	Door Half Hinge
13	140-0498*	Air Wash Passage Cover	46	160-4281	Body Half Hinge
14	140-0528*	Hopper	47	160-0002	Front Door Glass Panel
15	130-0019*	Top	48	120-3556	Front Door Glass Gasket (5')
	120-3534	Silicone Gasket for Glass	49	120-3589	Front Door Gasket Seal (6')
16	160-0001*	Glass Griddle	50	120-3589	Ash Door Gasket Seal (5')
17	140-0502*	Access Wall	51	700-1012	Glass Retainer
18	140-0495*	Upper Convection Wall	52	140-0415	Striker Plate
19	140-0503*	Lower Access Wall	53	160-0625	Door Latch
20	120-4816	Electrical Power Cord	54	500-4238*	Handle Faucet Stub w/ Soc Set Screw
21	160-0011*	Fuse Holder	55	160-0664	Wooden handle Only
22	500-0014	Circuit Board (F851AB)	56	120-1310	1/4-20 x 3" Handle Screw
23	160-0039	Auger Motor	57	160-0032*	Convection Fan (5" Square Flat Pack Fan)
24	160-0033	Feed Unit	58	120-4030*	Cotter Pin #21 (Hair Spring)
25	120-3526	Feed Unit gasket	59	120-4241	Ball Stud, Gas Spring
26	130-0018*	Air Deflector	60	120-1848*	Gas Spring (Outsourced 215-785-4466 p/n SPD-6299)
27	130-0014*	Firebox	61	130-0012*	Ash Lip
28	130-0015*	Upper Manifold	62	160-0034*	Air Inlet Tube
29	140-0499*	Center Exhaust Passage Cover	63	120-3396*	Hose Clamp
30	130-0016*	Lower Manifold			

ITEMS NOT SHOWN

Body Parts

- 130-0023* Outer Side
- 140-0489* Feed Unit Heat Shield
- 160-0036* Noise Absorbers 6" x 6"
- 160-0618* Top Hinge Plate

Feed Unit Parts

- 160-0046* Auger
- 160-0048* Pusher Block
- 160-0057* Pusher Block Access Door
- 160-0055 Bearing Agitator Shaft
- 160-0049 Retrofit Yoke (Arm)

Handle & Door Parts

- 140-0516* Striker Plate
- 160-0025* Burn Pot Scraper
- 140-0485* Shim

Electrical Parts

- 160-0012 Snapstat
- 140-0518* Snapstat Cover
- 500-0003* Control Panel Assembly
- 140-0487* Control Panel Shield
- 120-4970 15A, 125V Receptacle

Fan & Fan Parts

- 160-0037* Fan Rheostat Cable Assembly
- 500-0010* Convection Cord Set
- 160-0035* Foot Pad
- 140-0500* Upper Exhaust Fan Bracket
- 140-0501* Lower Exhaust Fan Bracket
- 120-1881 Rubber Grommet (4-each convection fan)

ENAMEL CAST PARTS ARE NO LONGER AVAILABLE FOR THE RELIANCE PELLET STOVE

RELIANCE 2340 HARDWARE

120-0894	¼ -20 x ½" Phillips Round Head Screw (4-exhaust fan, 2-lower convection walls to the bottom, 4-bottom shield to bottom)	120-1704	10-16 x ½" Hex Head Washer (thermocouple to exhaust fan)
120-0848	¼ -20 x 2" Black Phillips Flat Head Screw (airwash cover to firebox)	120-2058	#10 x ½" Phillips Pan Head Sheet Metal Screw (4-pc board to hopper, 4-upper to lower convection wall, 2-snapstat cover, 2-access wall to hopper, upper exhaust fan bracket to exhaust fan, 2-receptacle to lower access wall, 2-lower access wall to bottom shield, upper exhaust fan bracket, 4 access wall to bottom shield, 6-lower access wall to access wall)
120-0865	¼ -20 x ¾" Phillips Flat Head Screw (2-back log hooks, bottom of front frame to fb)		
120-0896	¼ -20 x ¾" Phillips Round Head Screw (4-inner top to sides)		
120-0904	¼ -20 x 1¼" Phillips Flat Head Screw (4-burn pot to fireplace)	120-4214	¼ -20 x 1½" Threaded Rod (bottom to left & right side assemblies)
120-0985	10-24 x ¾" Phillips Pan Head Screw (2-control panel assembly)	120-3212	¼ -20 SS Hex Nut (2-back log hooks, 2-each side to bottom, 2-air wash passage cover, 8-burn pot (4 inside/4 outside firebox), 4-feed unit to firebox)
120-0989	#8 x ¼" Phillips Pan Head Sheet Metal Screw (ground lead)		
120-0993	¼ -20 x ¾" Phillips Pan Head Screw (hopper to inner top, 2-control panel heat shield, 2-spring anchor)	120-3273	8-32 Hex Nut (8-convection fans)
120-0994	10-32 x 3/16" Phillips Pan Head (2-ground leads to convection fan)	120-2461	¼ Star Washer (exhaust fan ground)
120-1244	8-32 x 2½" Slot Round Head (bottom mounting of convection fan)	120-2465	#8 Plain Flat Washer (4-convection fans)
120-1245	8-32 x 1¼" Slot Round Head (top mounting of convection fan)	120-2486	#8 Plain Star Washer (2-convection fan ground, chassis ground lead)
120-1338	¼ -20 x ½" Hex Head Cap Screw (8-door hinge half, 8-body hinge half, 2-striker plates, 2-ashpan support, 2-lower exhaust fan bracket to lower manifold, 2-upper exhaust fan bracket to upper manifold, 2-log holder, 2-top hinge plates)	120-2470	Washer, ¼ Plain Flat (2-left and right exhaust covers)
120-1347	¼ -20 x ½" Hex Head Leveller Bolt (4-legs)	120-2473	Washer, Black ¼" Narrow Flat (16-door & body half hinges, 2-ash lip, 2-firebox to unit, 2-upper to lower exhaust manifold)
120-1373	¼ -20 x ¾" SS Hex Head Cap Screw (3-top air manifold to firebox, 2-left & right exhaust covers)	120-0563	5/16-18 x 5/16 SS Socket (door stub)
120-1376	¼ -20 x 1" Black Hex Head Cap Screw Gr 5 (2-firebox, 2-front frame to firebox, 2-ashlip, 3-lower manifold to bottom, 2-upper manifold)	120-1481	5/16-18 x ½" Hex Head Cap Screw (hanging hole)
		120-1310	¼ -20 x 3" Zinc Slotted Pan Head Screw (1-damper handle)
		120-1394	¼ -20 x 3¼" Hex Head Cap Screw (2-manifolds to bottom)