

Fire Magic Grill C540S Parts List

Item	Description	C430s		C540s	
		Part No.	Qty.	Part No.	Qty.
1.	Stainless cooking grid (set of 2 or 3)	3542-S-2	1	3543-S-3	1
2.	Flavor grid (set of 2 or 3)	3063-S-2	1	3064-S-3	1
3.	Main burner	3042-60	2	3042-60	3
4.	Oven lid	23729-54	1	23733-54	1
5.	Warming rack*	3672S-M	1	3673S-M	1
6.	Grid lifter	3519	1	3519	1
7.	Convertible regulator	PR-4	1	PR-4	1
8.	Valve manifold	24130-28	1	24170-28	1
9.	Control panel	24130-36	1	24170-36	1
10.	Large knob	3015	2	3015	3
11.	Thermometer †	23305	1	23305	1
12.	Ignitor battery holder assy (9v)	24180-38	1	24180-38	1
13.	Drip tray	3084	1	3084	1
14.	Drip tray liner (set of 4)	3557	1	3557	1
15.	Wire harness assembly †	24177-24	1	24177-24	1
16.	Rigid shelf	24-C-01	2	24-C-01	2
17.	Door (left)	24330-29L	1	24370-29L	1
18.	Door (right)	24330-29R	1	24370-29R	1
19.	Caster kit (set of 4)	24-C-35	1	24-C-35	1
20.	Electrode & collector box assy †	3199-45	2	3199-45	3
21.	Ignitor module	3199-44	1	3199-46	1
22.	Natural gas orifice(s) †	3001-44-2	1	3001-44-3	1
23.	Propane gas orifice(s) †	3001-55-2	1	3001-55-3	1
24.	Propane regulator / hose assy. †	5110-07	1	5110-07	1
	or Natural Gas QD hose †	5110-03	1	5110-03	1
25.	Fire Magic® cookbook †	3595	1	3595	1

\* If equipped

† Not shown