	and the second	Pellet Stove – Exploded View Diagram	
NUMBER	PART DESCRIPTION]
1	Door (Part # CA-19A)		NOTE ON PART INVESTOR
2	Door Gasket (Part # AC-DGKC)		NOTE ON PART NUMBERS:
3	Glass with Gasket (Part # AC-G9)		This diagram is a basic
4	Impingement Plate*		England's Stove Works
5	Burn Pot		pellet unit diagram. Your model
5a	Wear Plate for Burn Pot**		may vary somewhat. See our
6	Burn Pot Gasket		online store at
7	Side Access Panel		www.englanderstoves.com
8	Combustion Blower		or the parts list in your manual
9	3" Blower Adapter		for specific part numbers for
10	Gasket for Combustion Blower		your model stove.
	Part # PU-CBG		If a part is not listed in the manual
11	Pellet Feeder Pot		or on the website, or if you have
12	Digital Control Board		questions, call (800) 245-6489.
13	Convection Blower		and a second
14	Augers: (Top Auger and		
	Bottom Auger)		
15	Block Bearing Gaskets		
16	Block Bearings	0.5	
	Part # PU-UCF204-12	25	
17	3/4" I.D. Shaft Collars		
	Part # PU-2X570		
18	Auger Motors	23	~
19	Rear Access Panel		
20	Hopper Flange Gasket		
	Part # PU-HFG	22	
21	Hopper		00000
22	Hopper Lid Gasket		
~~	Part # PU-HLG	2	0000000
23	Hopper Lid		A 0000
23	Vacuum Shut Down Switch(es)		1
25	Hopper Lid Latches		A P V
25	Brass Louvers		
20			
27	(Certain models only)		50 · · · · ·
21	Cartridge Heater (Igniter) Assemb Part # PU-CHA Q -	1 20	10
	Part # PU-CHA 8 -		0 00 0 10
		A Ch	2 17
Alata I	7		A /
	mpingement		16
) hangs flush	24	
on back	Inv		~ _ 15
firebox, a		A A	14
centered			
the burn	pot. 4 N I		
	- / /	Marth 199	
		Mar Pill	
	2-1 1	****** -27	
	- / /	194 (10
1		A	12
1		5a 3 16 3	
	a a la		
		At Star	
		A CONTRACT	
		26	
		26	
		26	

IMPORTANT! READ AND FOLLOW **ALL** INSTALLATION AND MAINTENANCE INSTRUCTIONS, INCLUDING CLEANING THE UNIT AS SPECIFIED, AND REPLACING GASKETS ANNUALLY, AND PARTS AS NEEDED.

ENGLANDER IS NOT RESPONSIBLE FOR ANY DAMAGE OR INJURY INCURRED DUE TO NEGLECT, OR DUE TO UNSAFE INSTALLATION OR USAGE OF THIS PRODUCT. CALL TECHNICAL SUPPORT WITH ANY QUESTIONS.

REPLACEMENT PARTS LIST

Part No	Description	
AC-GGK	Glass Gasket Kit (gasket only, no glass)	
AC-DGKC	Door Gasket Kit	
AC-G9	9"x9" Glass with Gasket	
AC-SHN	Nickel Door Spring Handle	
AC-MBSP	Hi-Temperature Black Spray Paint	
PU-047040	1 RPM Auger Motor Assembly	
PU-BP18	Burn Pot Assembly	
PU-BP18WP	Wear Plate (fits inside burn pot)	
PU-076002B	U-076002B Combustion (Exhaust) Blower – includes 3" adapter	
PU-4C447	Convection (Room Air) Blower	
PU-AF6T Top Auger Shaft		
PU-AF11B	Bottom Auger Shaft	
PU-62-40-151-3	Hopper Lid Latch	
PU-UCF204-12	Auger Bearing	
PU-2X570	¾" Locking Collar	
CU-VS	Vacuum Shut-Down Switch	
PU-VH	Vacuum Hose	
PU-CBMG	Combustion Blower & Motor Gasket	
PU-BPG	Burn Pot Gasket	
PU-ABGN	Auger Bearing Gasket	
PU-HLG	Hopper Lid Gasket	
PU-CHA	Cartridge Heater (Igniter) Assembly	
PU-CBF6	6 AMP Control Board Fuse	
AC-HLSB	Hopper Lid Safety Switch	
AC-HP	Hinge Pin – rivet for cast door	
PU-SSTCW	Thermocouple Wire (only included on top mounted control board)	
IP-25PDVC Top Baffle (inside firebox)		
PU-SSCBHS	J-SSCBHS Heat Sensor for Control Board (for Top Mount models)	
PU-CB14	Top Mounted Control Board (for Top Mount models)	
AC-CMB	Control Board Mounting Box (included with top mounted control board)	
PU-CB19	Side Mounted Control Board (for Side Mount models)	