

Atlanta Woodsman 24/ Nordic 27 Parts List

Note that the quantities listed here below are the standard amounts that are found in each unit and not the number of items you need to order.

Ref#	Description	Part#	or
1	Top	3800	203800
2	Upper Front Panel	3801	203801
3	Upper Side Panel	3802	203802
4	Flue Plate	3803	203803
5	Body Top	3804	203804
6	Side	3805	203805
7	Back	3806	203806
8	Front	3807	203807
9	Door	3808	203808
10	Bottom	3810	203810
11	Side Liner	3811	203811
12	Legs, Long (9")	3813	203813
13	Door Handle	6.024-158	149-113
14	Draft Register	3815	203815
15	Legs, Short (6")	3821	203821
16	Adjustable Damper Blade	3817	203817
17	Hex Head Bolt	6.011-805	101-960
18	Door Knob	6.022-212	147-330
19	Hinge Pin	6.013-111	102-404
20	Hex Nut ½ - 13	6.011-023	
21	Blade Control Rod	6.024-153	171-138
22	Blade Control Knob	6.022-214	147-335
23	Hex Nut 10-24	6.011-021CD	102-002
24	Cotter Pin	6.014-262	102-755
25	Stove Pipe ¼ Joint 6"	6.140-130	149-830