

Part Number	Description
Burner Assemblies	
AA-12-00010	Valve Assembly NG - Manual (1994 - 1996)
AA-12-00011	Valve Assembly LP - Manual (1994 - 1996)
AA-12-00012	Valve Assembly NG - Thermostat (1994 - 1996)
AA-12-00013	Valve Assembly LP - Thermostat (1994 - 1996)
05-02-00229	Main gas valve NG - manual on/off valve (1994) - see remarks
05-02-00232	Main gas valve LP - manual on/off valve (1994) - see remarks
05-02-00234	Main gas valve NG - modulating valve w/copper tube (1994) - numbers on dial
05-02-00235	Main gas valve LP - modulating valve w/copper tube (1994) - numbers on dial
05-02-00231	Gas Valve Plug (must order 2 for above valves)
05-02-00230	NG Regulator for above valve
05-02-00233	LP Regulator for above valve
05-07-00063	Thermocouple
05-01-00151	Interrupter
05-04-00018	Pilot - NG (1994 - 1996)
05-04-00019	Pilot - LP (1994 - 1996)
65-14-00040	Main orifice NG #40 (1994 - 1996)
65-14-00052	Main orifice LP #52 (1994 - 1996)
HA-17-00042	Pilot gas line (1994 - 1996)
HA-17-00043	Main burner gas line (1994 - 1996)
HA-18-00010	Burner pan weldment (1994 - 1996)
HA-18-00004	Burner tube weldment (1994 - 1996)
Blowers	
AA-12-00016	Variable speed automatic blower kit (1994 - 1996)
15-02-00042	Blower with motor (1994 - 1996) (Squirrel cage 7" long x 1 3/4" dia)
10-01-00046	Rheostat
05-01-00157	Thermo disc
05-01-00191	Magnetic Thermo-disc bracket assembly
Logs	
35-01-00170	Coal bed & log set (1994 - 1996)
35-01-00177	Rear log with branch (1994 - 1996)
35-01-00176	Arched front log w/branch & ember set (1994 - 1996)
HA-17-00048	Front log stand (1994 - 1996)
35-01-00239	Glowing Inswool
Miscellaneous Items	
65-06-00303	Neo-ceram glass
HA-17-00046	Upper window gasket
HA-17-00047	Lower window gasket
65-06-00011	Glass spring
HA-17-00019	Upper glass spring
HA-17-00028	Glass spring mount - left
HA-17-00029	Glass spring mount - right
HA-17-00045	Grill Clip
05-01-00154	Flue switch
65-06-01049	Black Touch up paint
65-06-00149	Piezo igniter
65-06-00311	Piezo igniter cable (24 ")