


MAIN ASSEMBLY

Part #	Description	Part #	Description
1) 506-086	Top Insulation Plate	21) 910-330	Fan Speed Control
2) 506-074	Top Insulation	22) 904-586	Knob - Speed Control
3) 506-513	Flue Collar Outer Assembly	23) 910-142	Thermodisc - Fan Auto ON/OFF
4) 556-095	Flue Collar Gasket	24) 946-000	Round Duct Adaptor
5) 506-000	Exhaust Gasket	25) 910-367	Box - Plastic Switch Receptacle
6) *	Flue Collar Inner Assembly	26) 910-412	Fan Speed Controller
7) 596-042F	Top Relief Plate	27) 910-417	Knob - White
8) 476-023	Relief Gasket - Door Top	28) 910-366	Switch Cover Plate - White
10) 820-389	Thermodisc Bracket	29) 946-006	Grill Plate - White
911-012	Ignition Module	30) 946-005	Wall Adaptor Plate - White
12) 948-259	Spring Handle Lever	31) 946-002	Round to Oval Adaptor
13) 948-025	Spring Door Extension	32) 946-001	Oval Duct Adaptor
14) 940-362/P	Ceramic Glass	33) 946-007	Angle Bracket
15) 506-083	Door Frame	34) 946-517/P	Fan Assembly - Heat Wave
16) *	Outerbox Assembly	35) 946-004	Junction Box
17) *	Firebox Assembly	36)	Lower access panel
18) 506-917	Fan Assembly	37)	Mesh Guard
19) 910-215/P	Fan Motor (120 Volts)	506-959	Optional Accent Light
432-966	Fan Switch Assy (120 Volts)	36) 919-162	Manual
20) 910-813	Power Cord (120 Volts)		

\* Not available as a replacement part.

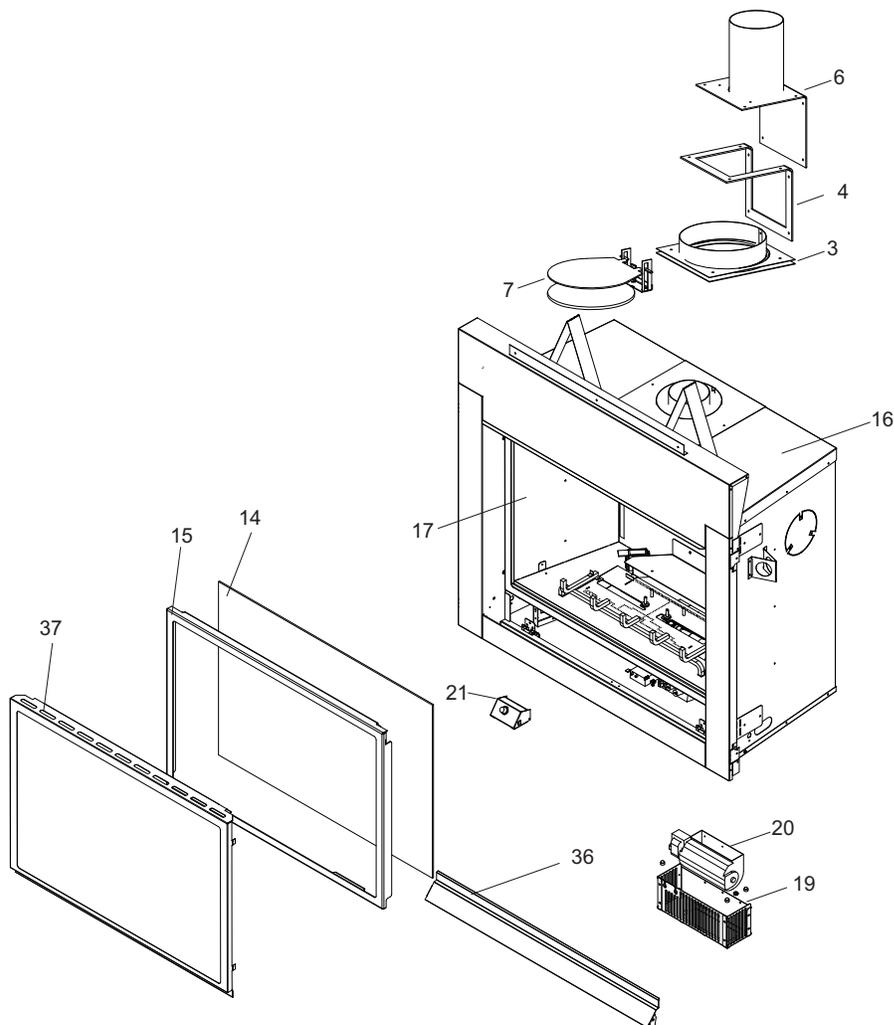

## BURNER ASSEMBLY

Part #	Description	Part #	Description
1) 506-070	Rear Log Tray	904-660	Orifice #30 NG
506-525	B41XTCE Burner Assembly NG	904-431	Orifice #49 LP
506-530	B41XTCE Burner Assembly LP	506-574 E/P	Valve Assembly - NG
4) 506-531	B41XTCE Grate Assembly	506-576 E/P	Valve Assembly - LP
6) 911-004	Valve NG SIT 886	506-003	Valve Assembly Gasket
911-005	Valve LP SIT 886	15) 506-062	Base Tray
7) 506-072	Valve Shield	506-930	Log Set
8) 506-055	Valve Mounting		
9) 506-055	Valve Tray Plate		
10) 506-075	Air Deflector		
11) 380-013	Pilot Holder Extruded		
12) 911-006	Pilot Assembly - NG		
911-007	Pilot Assembly - LP		
	Flame Sensor		
	Igniter		

