


MAIN ASSEMBLY

Part #	Description	Part #	Description
1	506-086 Top Insulation Plate	17	* Firebox Assembly
2	506-074 Top Insulation	18	509-917 Fan Assembly
3	506-513 Flue Collar Outer Assembly	19	910-215/P Fan Motor (120 Volts)
4	556-095 Flue Collar Gasket		
5	506-000 Exhaust Gasket	20	911-159 Power Cord 120V
6	* Flue Collar Inner Assembly	37	508-559 Mesh Guard
7	596-042F Top Relief Plate		506-959 Optional Accent Light
8	476-023 Relief Gasket - Door Top		910-997 Light Bulb
			506-057 Flue Restrictor
10	820-389 Thermodisc Bracket		502-061 Pilot Shield
	911-012 Ignition Module		508-010 Calcium Silicate Board
			919-375 Manual
12	948-259 Spring Handle Lever		
13	948-025 Spring Door Extension		
14	940-383/P Ceramic Glass		
15	506-083 Door Frame		
16	* Outer box Assembly		

* Not available as a replacement part.

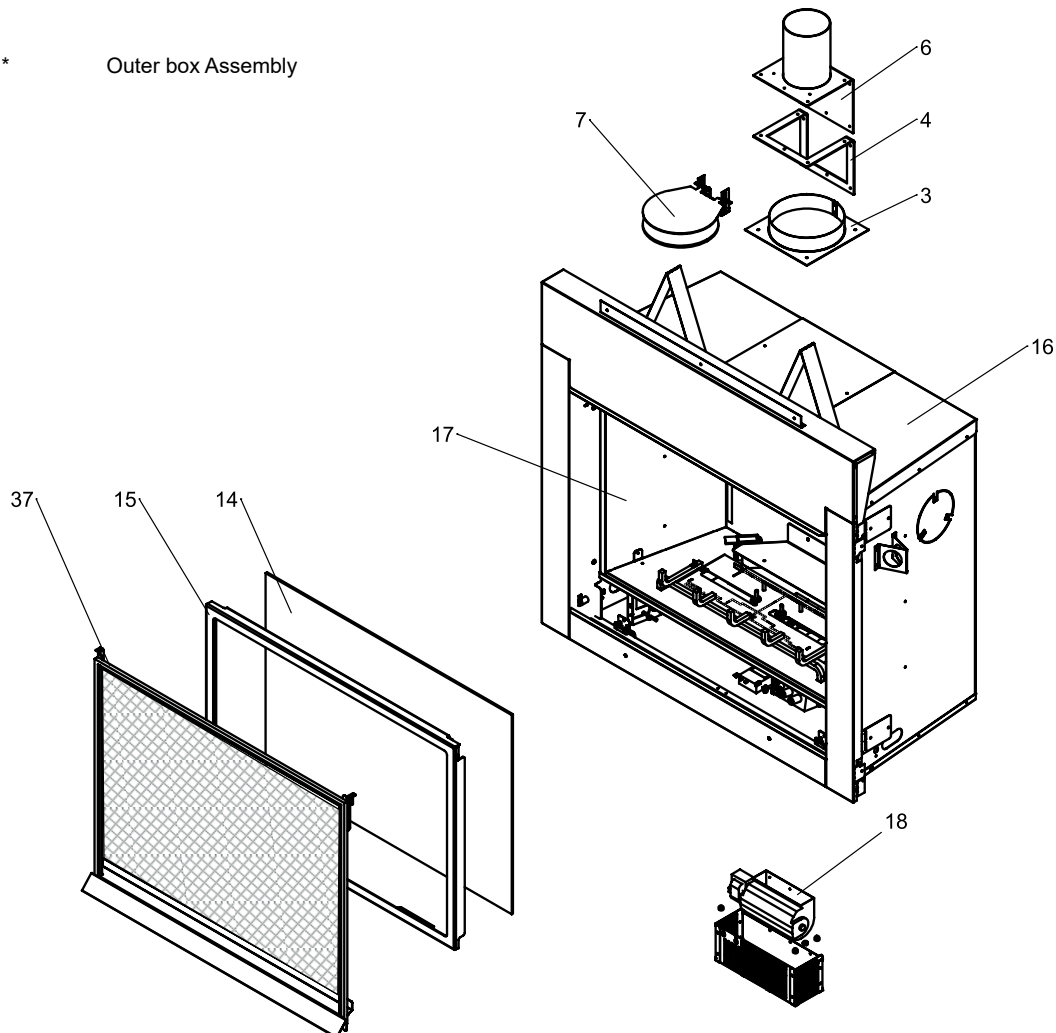

BURNER ASSEMBLY

Part #	Description	Part #	Description
1	506-070 Rear Log Tray	15	506-062 Base Tray
2	506-525 B41XTCE Burner Assembly NG	911-012	DFC board
2	506-530 B41XTCE Burner Assembly LP	911-013	Valve Wiring Harness
	506-574 E/P Valve Assembly - NG	911-032	Remote Wiring Harness
	506-576 E/P Valve Assembly - LP	910-432	Pilot Tube w/nuts
	506-003 Valve Assembly Gasket	911-030	Fan Control Module
	904-660 Orifice #30 NG	911-228/P	Remote Receiver
	904-431 Orifice #49 LP	910-592	Remote Transmitter GTMF
4	506-531 B41XTCE Grate Assembly	506-901	Brick Panel - Rustic Brown
6	911-084 Valve NG SIT 885	506-902	Brick Panel - Old Town Red
7	506-072 Valve Shield	506-904	Brick Panel - Castlestone
8	Valve mounting	506-905	Brick Panel - Charcoal
9	506-055 Valve Tray Plate	506-908	Enamel Panels
10	506-075 Air Deflector	506-930	Log Set
11	380-013 Pilot Holder Extruded		
12	911-006 Pilot Assembly - NG		
	911-007 Pilot Assembly - LP		
	911-037 Flame Sensor		
	911-038 Flame Electrode		
	910-100 Pilot Orifice NG		
	910-101 Pilot Orifice LP		
	911-137 Pilot Clip		
	911-039 Pilot Hood		

