

WIRING DIAGRAMS

NOTE: This unit is equipped with a heat sensor thermdisc which will prevent the blower from operating until the unit reaches the correct temperature.

ELECTRONIC MODE

NOTE:
DISCARD BROWN WIRE- 911-240

920-641

Diagram 21.1

WIRING DIAGRAMS

(Do not cut the ground terminal off under any circumstances.)

Fan must always operate with this unit.

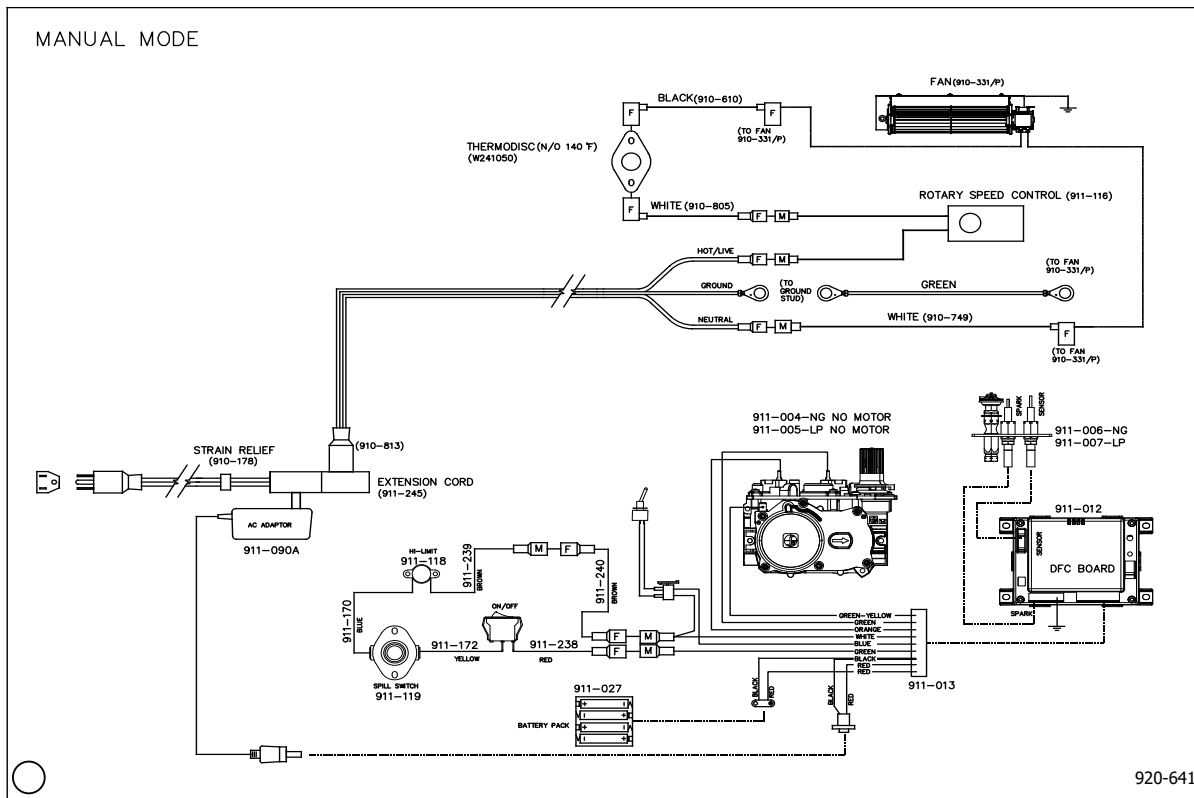


Diagram 21.2

1. Remove wire labelled 911-240 in diagram above for GTM Remote and thermostat installation.
2. Remote and thermostat must be wired in series.