


MAIN ASSEMBLY


Part #	Description
1) 340-038	Fan Access Plate
2) 340-103	Gasket - Fan Access Plate
3) 320-517/P	Fan Assembly 120 V
910-331/P	Fan Motor 120 V
5) 910-750	Power Cord
910-752	Wire Harness (Faceplate)
910-692	Wire Fan to Power Cord
910-737	Wire Valve to Spill Switch
7) 910-142	Fan Auto On/Off Thermodisc
8) *	Thermodisc Bracket
9) 320-070	Fan Switch Cover
13) *	Baffle Plate
17) *	Wire Holder Clip
18) *	Strain Relief
19) *	Grommet for Power Cord
340-924	Flush Louvers (Set) - Black/Gold
340-922	Flush Louvers (Set) - Black
340-926	Flush Louvers (Set) - Black/Steel
21) *	Top Flush Louver
23) *	Bottom Flush Louver
340-901	Brick Panel Set - Standard Brown
340-902	Brick Panel Set - Standard Red
33) *	Brick Panel - Right
34) *	Brick Panel - Left
35) *	Brick Panel - Back
36) *	Brick Clip
37) 340-094	Trim Brick Front
340-043	Base Brick Panel (3pc)
340-528	Base Brick Panel (3pc)
43) *	Stove Top
45) *	Adaptor Stop
46) *	Adaptor Holding Brkt - Left
47) *	Adaptor Holding Brkt - Right
48) 340-523	Flue Adaptor Assembly
49) 340-099	Thermal Insulation
50) *	Insulation Hold Down Bracket
51) *	Louver Hold Down - Top
918-513	Manual

* Not available as a replacement part.

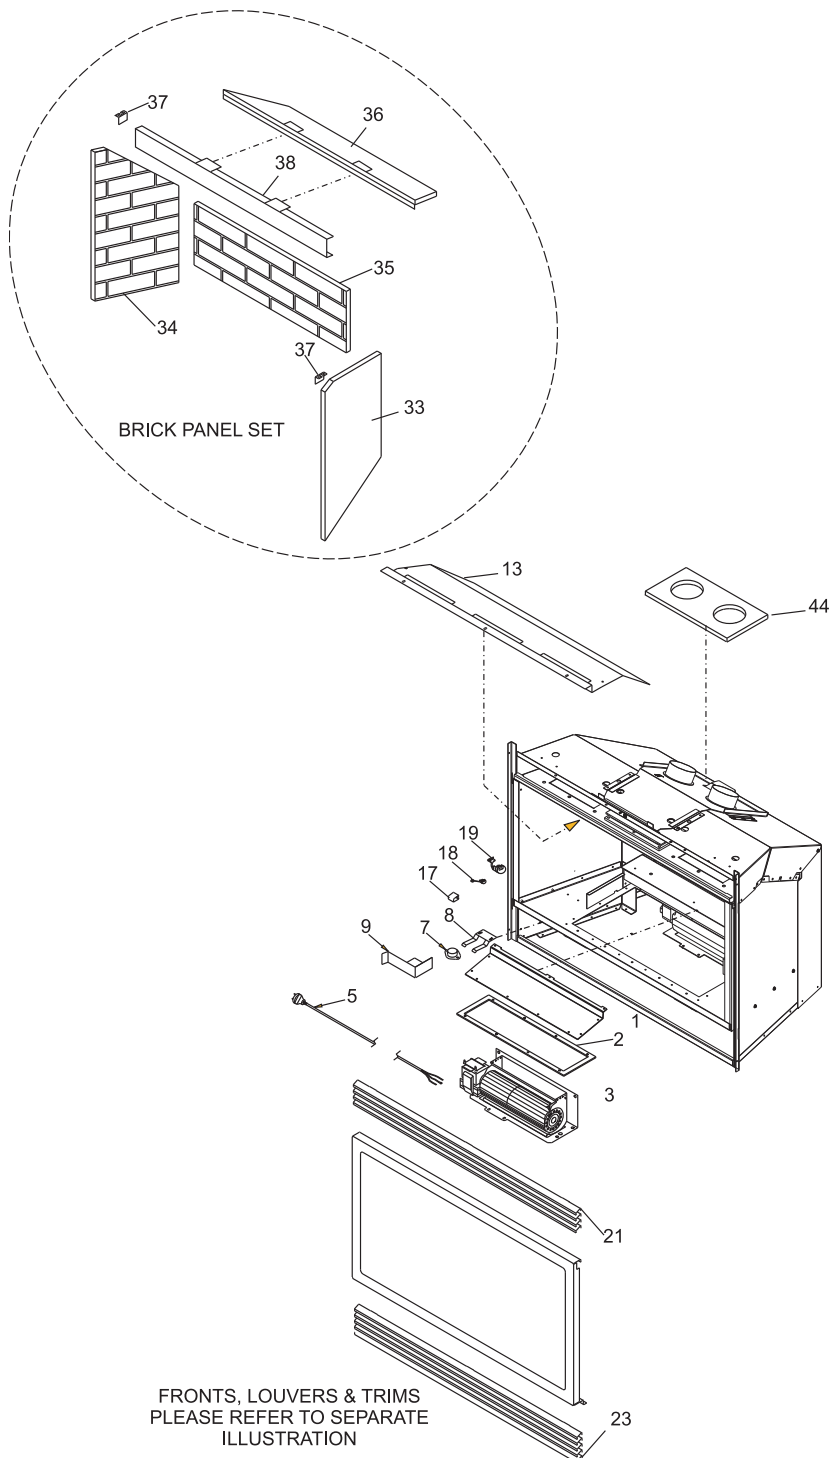

BURNER & LOG ASSEMBLY

Part #	Description
52) 340-104	Gasket - Valve Tray
340-574/P	Valve Assembly - NG
340-576/P	Valve Assembly - LP
56) 910-190	Piezo Ignitor and Nut
57) 910-478	Valve - S.I.T. - Natural Gas / Propane
59) *	Valve Tray
910-034	Pilot Assy-3 Flame Conv. - NG
66) 910-038	Pilot Assy-3 Flame-S.I.T.-NG
910-039	Pilot Assy - 3 Flame - S.I.T. - LP
67) 904-690	Orifice #31 - NG
904-641	Orifice #50 - LP
936-170	Orifice Gasket
68) W340470	Pilot assembly gasket
910-386	Thermocouple
910-341	Thermopile
910-432	Pilot Tube
910-096	Pilot Hood 3 way
910-030	Electrode
910-036	Pilot Orifice NG
910-037	Pilot Orifice LP
79) 948-433	Burner Assy - NG/LP
82) 340-047	Burner Grate
340-930	Complete Log Set
*	Bottom Log
*	Center Top Log
*	Front Log
*	Left Log
*	Right Log
*	Top Left Log
*	Rear Log
*	Top Right Log

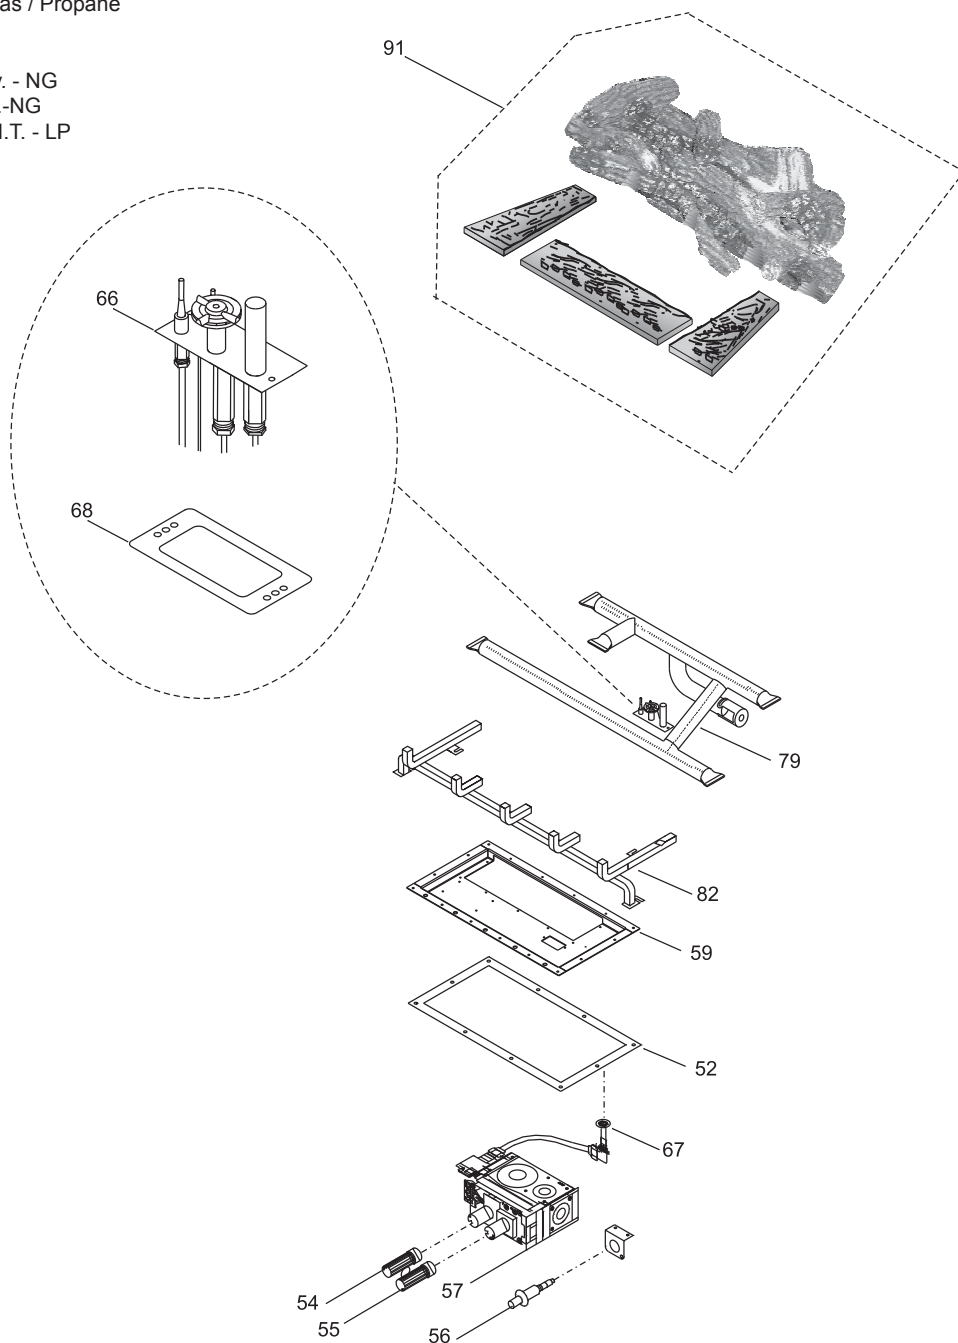


* Not available as a replacement part.

PARTS LIST


FULL SCREEN FRONT

Part #	Description
83) *	Top Frame
84) 340-910	Full Screen Door - Black
85) *	Full Screen Left Door
86) *	Full Screen Right Door
87) *	Bottom Frame
88) *	Screw #8 x 1/2 Self Tapping
89) 910-199	Wire Clip Holder
90) 948-042	Hinge Spring

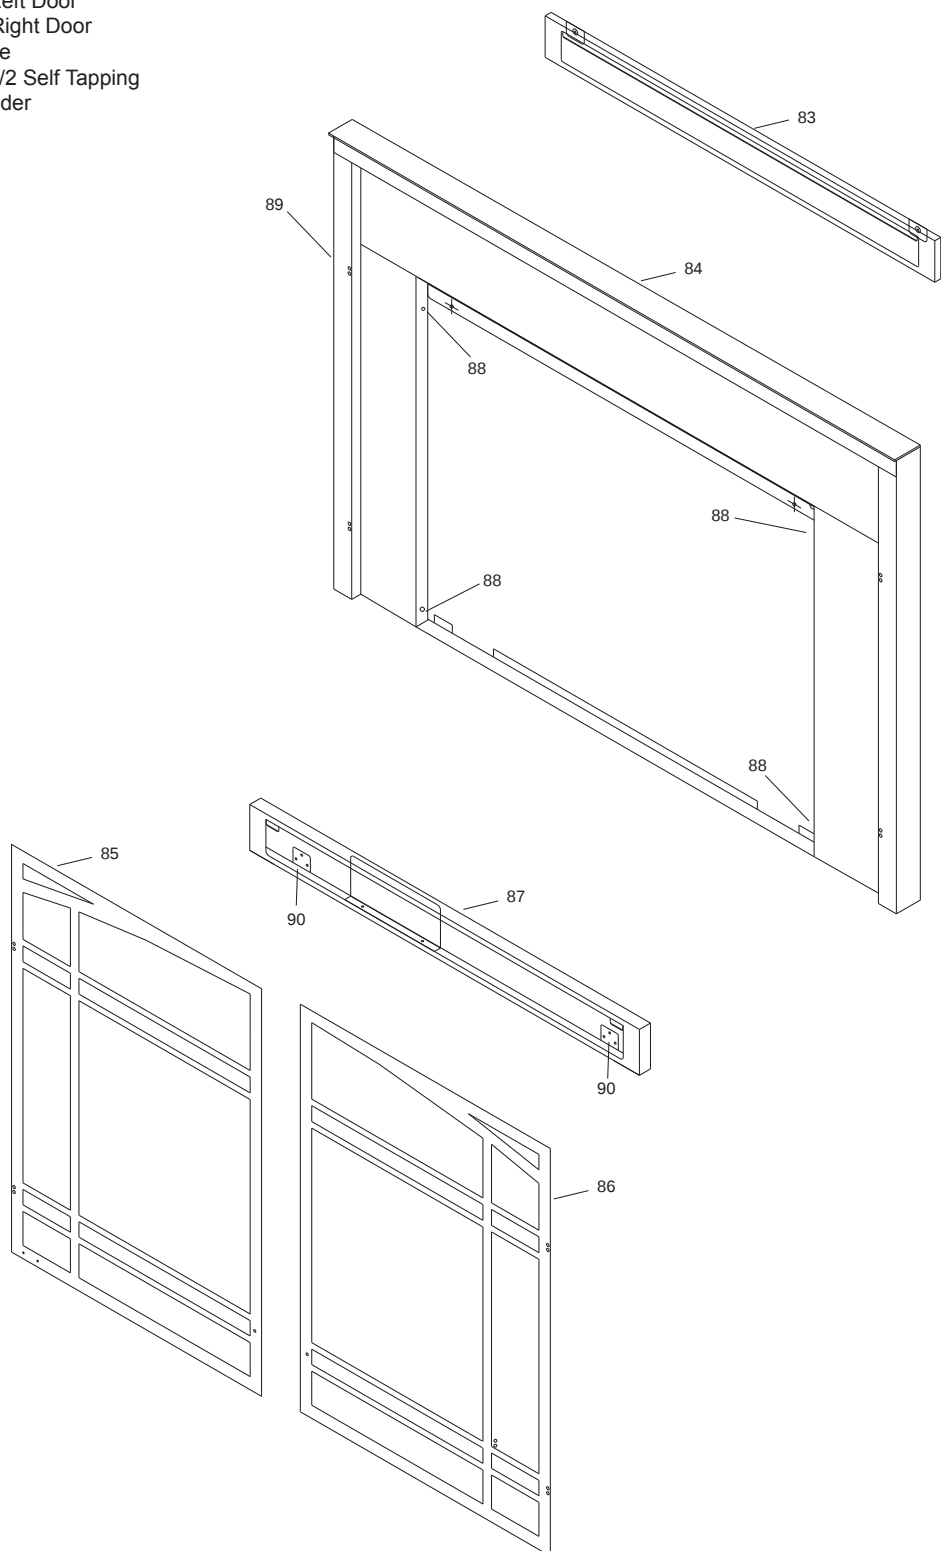

FACEPLATES, TRIMS AND HEARTHES

Part #	Description	Part #	Description	
340-918	Faceplates and Trim (Complete) w/ Black Trim	172)	320-940	Hearth Trim - 1"
340-919	Oversized Faceplate	176)	320-942	Hearth Trim - 2"
74) 904-569	Fan Speed Control Knob	180)	320-944	Hearth Trim - 4"
91) *	Faceplate Side - Right	184)	320-946	Hearth Trim - 6"
92) *	Faceplate - Top	186)	904-586	Speed Control Knob c/w Spring Clip
93) *	Faceplate Side - Left Assy	190)	*	Screw #8 x 1/2" Black Self-tapping
340-532	Trim Set Packaged - Black	191)	*	Screw #8 x 1/2" Brass Plated Self-tapping
340-533	Oversized Trim Set Packaged - Black	199)	948-216	Regency® Logo
94) *	Trim Side - Right	* Not available as a replacement part.		
95) *	Trim - Top			
96) *	Trim Side - Left Assy			
97) 910-246	Burner ON/OFF Switch			
98) 910-330	Fan Speed Control 120 V			
99) *	Faceplate Filler			

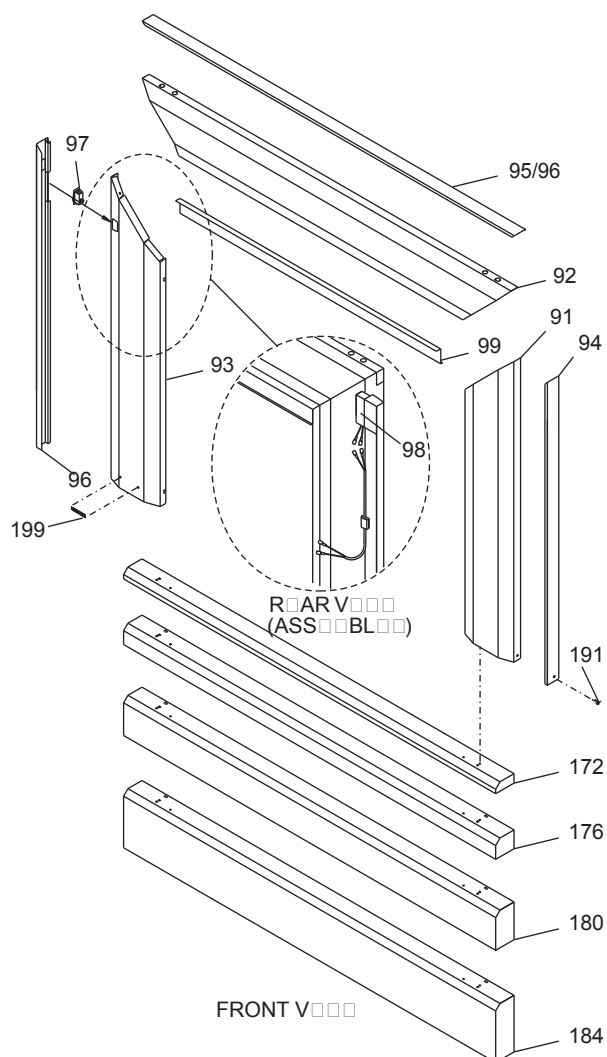

LOW PROFILE FACEPLATE

Part #	Description
1) *	Backplate Assembly
2) *	Bottom Louver
3) *	Right mounting bracket
4) *	Left mounting bracket
5) *	Front Frame

