

## WIRING DIAGRAM WITHOUT THERMOSTAT

### WARNING: Electrical Grounding Instructions

This appliance is equipped with a three pronged (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.


This heater does not require a 120V A.C. supply for operation but highly recommended. In case of a power failure, the remote control/thermostat will continue to operate.

**Note:** The optional fan and standard lights do require 120 volt power for it to operate.

#### Note:

4 AA Batteries must be installed into the back up battery compartment however for this unit to operate when power is lost. See battery back up instructions in this manual The fan and or lights will not operate during a power outage.

**CAUTION:** Ensure that the wires do not touch a hot surface and are away from sharp edges.

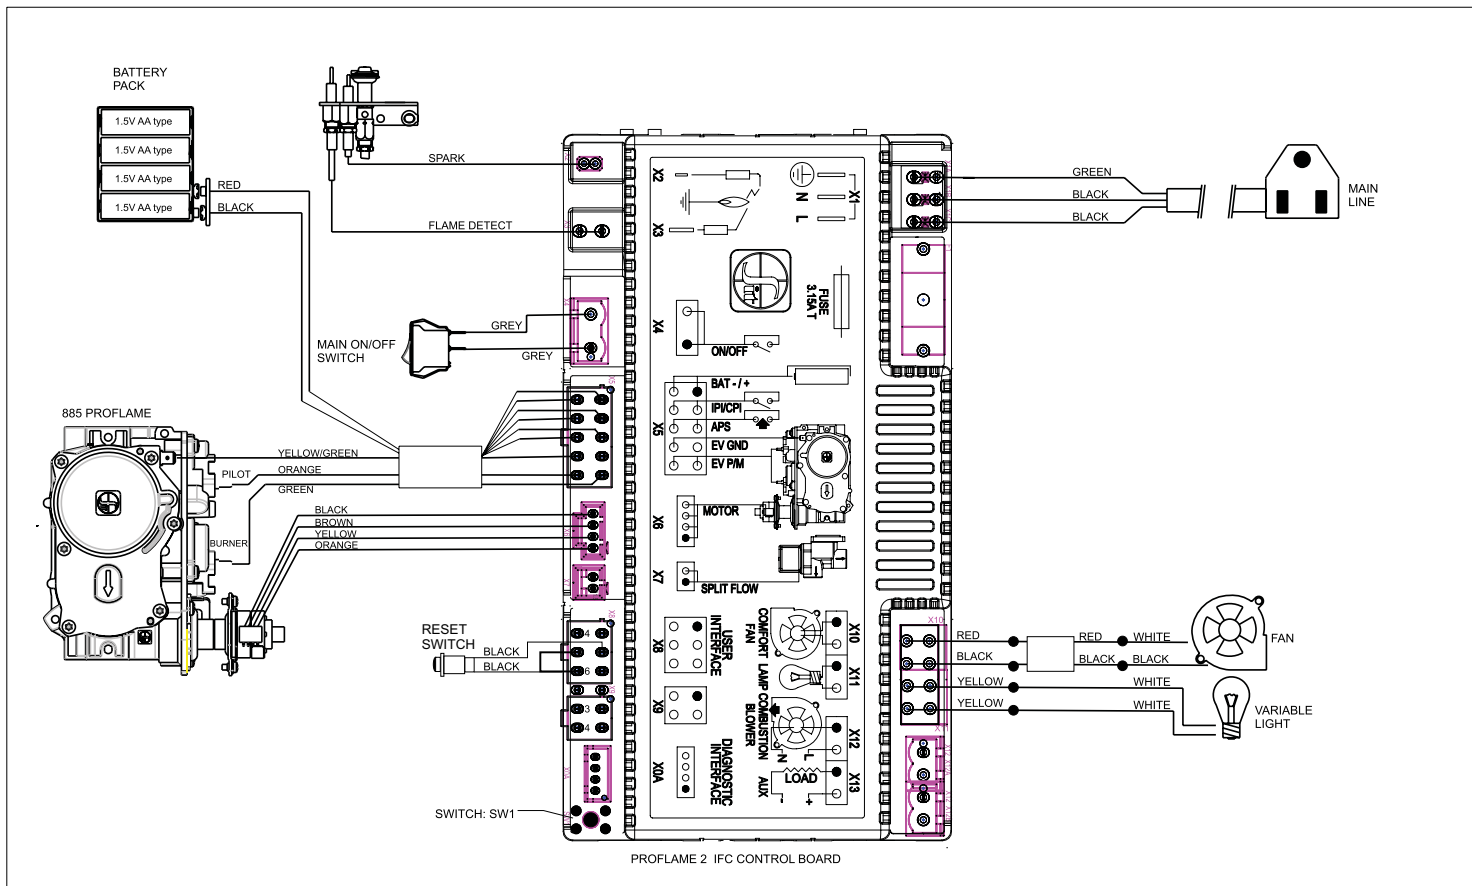

WIRING DIAGRAM WITH OPTIONAL THERMOSTAT

