


PARTS LIST

MAIN ASSEMBLY

Part #	Description		
1) 910-074	Spark Generator Switch c/w Wire	904-658	Inlet Gas Flex Line SS
2) 586-050	DC Spark Mounting Bracket	430-011	Flue Collar Gasket
910-073	Spark Generator Battery Holder	596-047F	Relief plate door
910-078	Battery AA	596-048	Plate Relief Gasket
910-363	White Wall Switch	596-089	Valve Tray Gasket
910-366	White Switch Plate Wire	430-011	Inner Flue Collar Gasket
		586-017F	Flue Restrictor Plate
		586-016F	Gas line cover
		596-068	Top nailing strip
3) 596-008	Bottom Cover NG / LP	596-045	Side nailing strip
		596 072	Bottom nailing strip
4) 596-525	Burner Assembly -NG		
596-530	Burner Assembly-LP	940-361/P	Flush Glass / c/w gasket
5) 596-574/P	Valve Assembly -NG	586-029	Flush Glass Frame (shown on next page)
596-576/P	Valve Assembly-LP		
6) 910-568	Valve 820		
7) 910-008	Pilot Assembly - NG	910-882	Wire (Valve to Burner ON/OFF)
910-009	Pilot Assembly - LP		
8) 904-593	Orifice # 40 (NG)	918-817	Manual
904-345	Orifice # 53 (LP)		
9) 948-484	Slide Hinge		

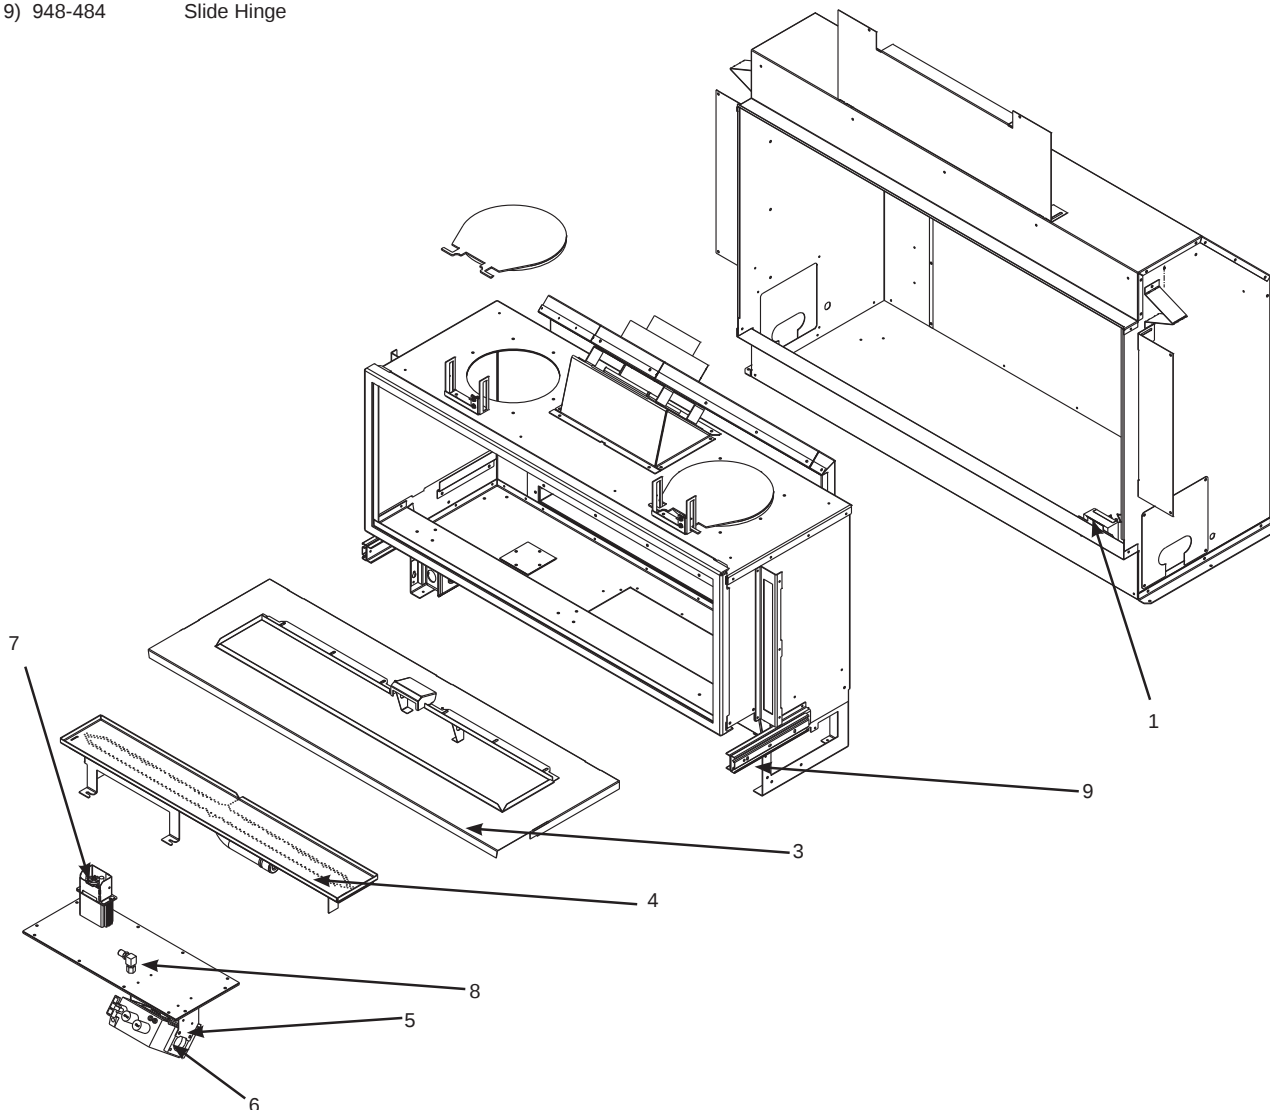

ACCESSORIES

Part #	Description
10) 596-907	Reflective Stainless Steel Inner Panels
596-908	Black Enamel Inner Panels
11) 586-914	Faceplate Black
586-916	Faceplate Sunset Bronze
586-917	Faceplate Brushed Stainless
946-671	Cobalt Blue Glass Crystals
946-672	Natural River Pebbles
946-673	White River Pebbles
946-674	Ceramic Spa Stones
946-680	GT Proflame Remote Control
946-681	GTM Proflame Remote Control
946-683	GTM NG Modulator
946-684	GTM LP Modulator
910-574	GTM Wire Harness
910-576	Cover Wall Mount (white)
910-572	Receiver GTM SIT w/Batt & Cover

