


installation

WIRING DIAGRAM

This heater does not require a 120V A.C. supply for operation but it is highly recommended to install the supplied AC adaptor to eliminate the need for batteries. In case of a power failure, the remote control will continue to operate if batteries are installed in the receiver. However, a 120V A.C. power supply is needed for the AC adaptor.

(Do not cut the ground terminal off under any circumstances.)

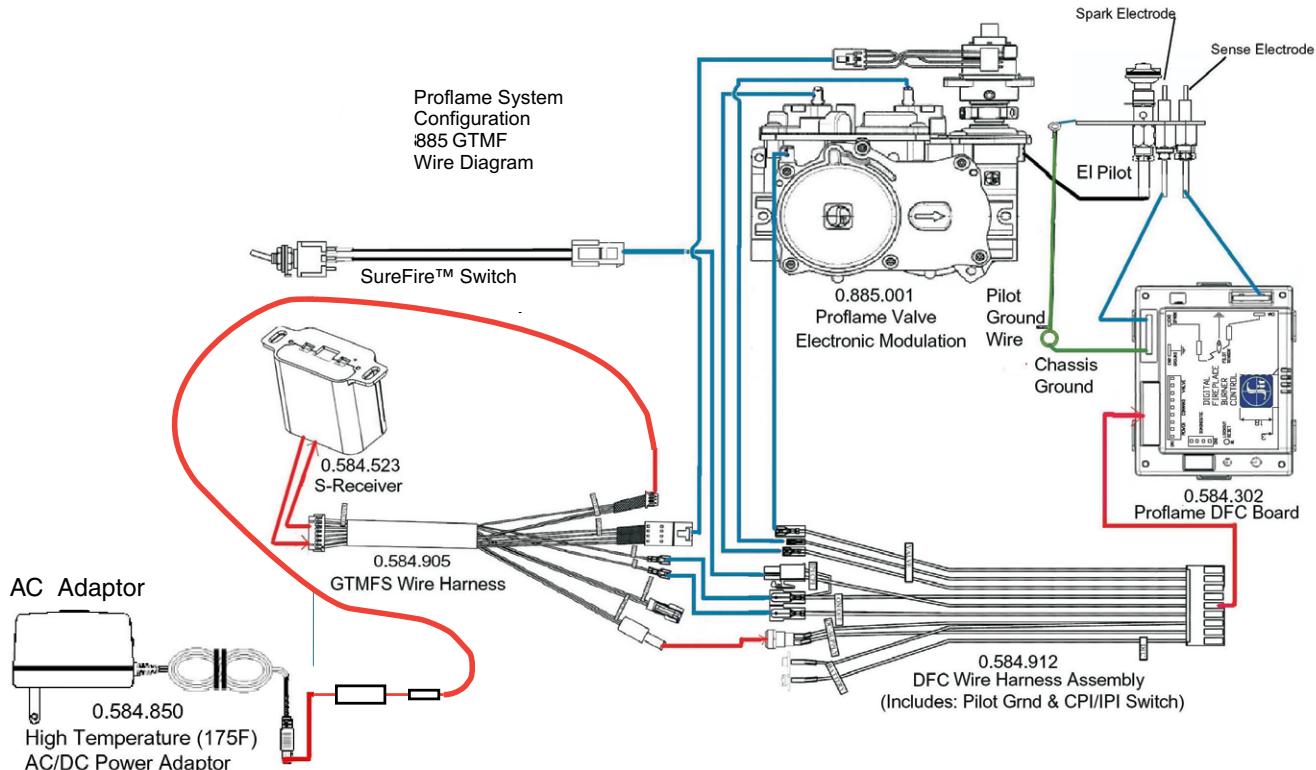

Caution: Ensure that the wires do not touch any hot surfaces and are away from sharp edges.

CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.