


Part #	Description
1) 910-074	Spark Generator Switch c/w Wire
2) 476-032	DC Spark Mounting Bracket
910-073	Spark Generator Battery Holder
910-078	Battery AA
910-363	White Wall Switch
910-366	White Switch Plate Wire
3) 476-004	Bottom Cover (False Tray) NG
476-100	Bottom Cover (False Tray) LP
4) 476-525	Burner Assembly -NG
476-530	Burner Assembly-LP
5) 476-574/P	Valve Assembly -NG
476-576/P	Valve Assembly-LP
6) 910-568	Valve 820
7) 910-008	Pilot Assembly - NG
910-009	Pilot Assembly - LP
8) 904-660	Orifice # 30 (NG)
904-431	Orifice # 49 (LP)
904-658	Inlet Gas Flex Line SS
9) 476-101	Burner Extenders (LP unit only)
476-042f	Top/Side Nailing Strips
370-055	Flue Collar Gasket
476-023	Plate Relief Gasket
476-055	Valve Tray Gasket
521-035	Inner Flue Collar Gasket
940-359/P	Flush Glass
476-011	Flush Glass
910-882	Wire (Valve to Burner ON/OFF)
948-409	Flue Collar
948-415	Lifting Handle
918-751	Manual

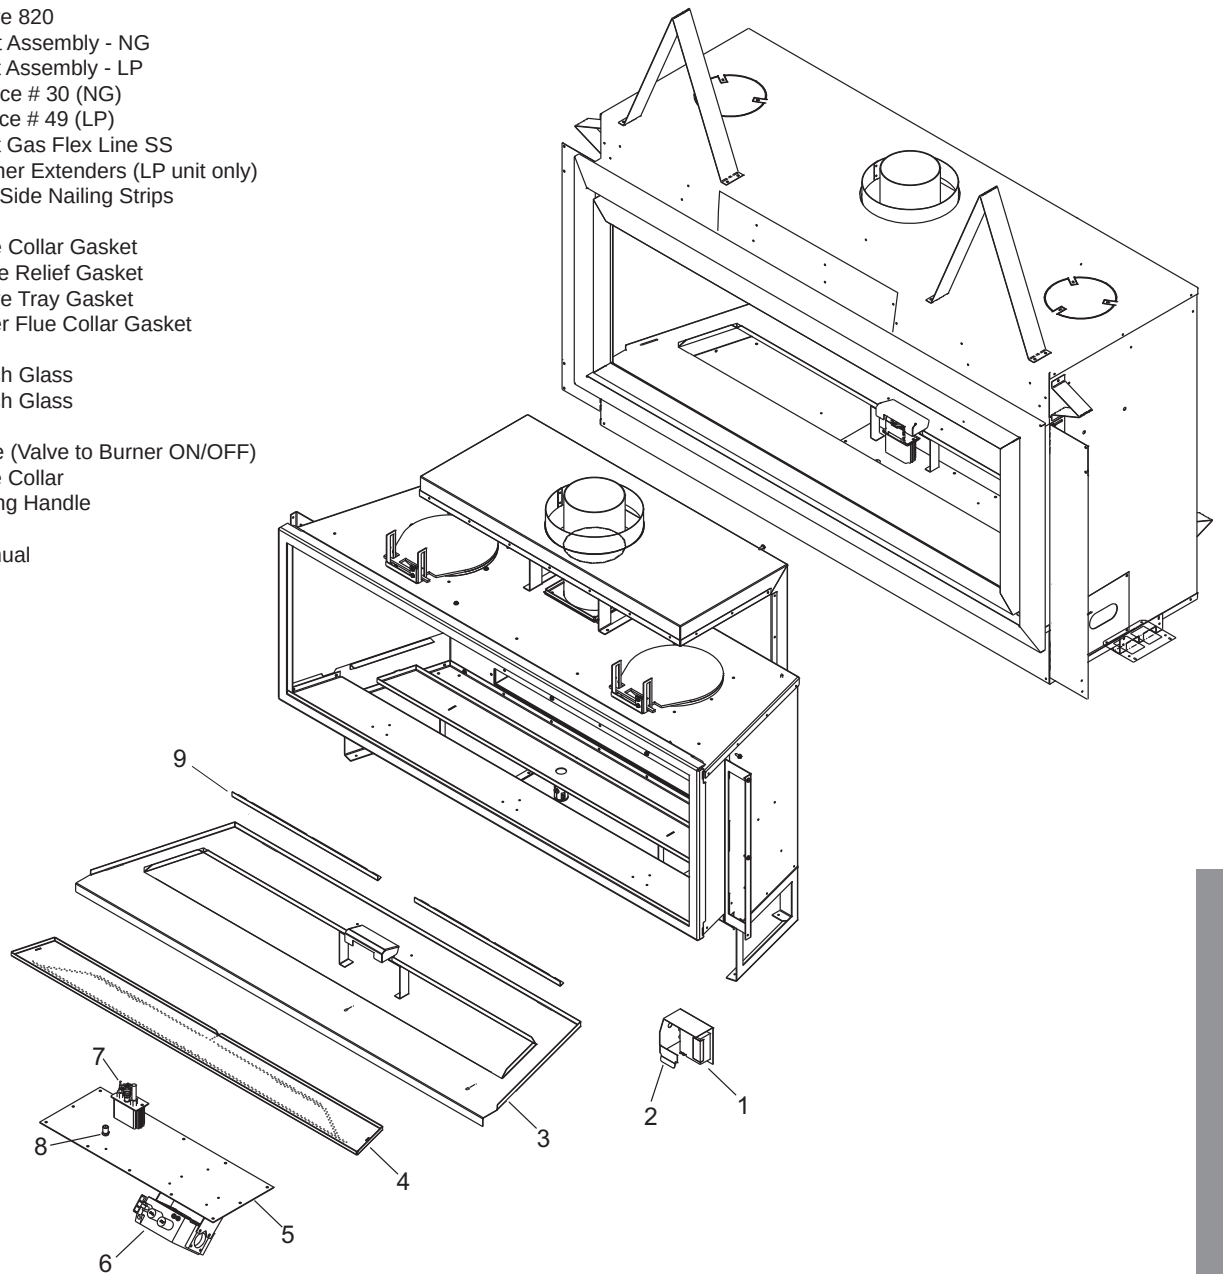

PARTS LIST

ACCESSORIES

Part #	Description
30) 476-907	Reflective Stainless Steel Panels
476-908	Black Enamel Inner Panels
31) 476-924	Faceplate & Door Frame Overlay - Black
476-927	Faceplate & Door Frame Overlay - Stainless Steel
476-926	Faceplate & Door Frame Overlay - Sunset Bronze
946-671	Cobalt Blue Glass Crystals
946-672	Natural River Pebbles
946-673	White River Pebbles
946-674	Stones
476-930	Log Set
946-680	GT Proflame Remote Control
910-576	Cover Wall Mount
910-572	Receiver GTM SIT w/Batt & Cover

