


MAIN ASSEMBLY

Part #	Description	Part #	Description
1) 476-151	Bottom Cover (False Tray) NG	7) 476-101	Burner Extenders (LP unit only)
476-152	Bottom Cover (False Tray) LP	476-042f	LH / RH Nailing Strips
2) 476-525	Burner Assembly -NG	8) 476-915	Optional Fan
476-530	Burner Assembly-LP		
3) 476-574E/P	Valve Assembly -NG	9) 946--705	Power Vent Kit
476-576E/P	Valve Assembly-LP	911-045	Pressure Switch
		911-046	Exhaust Fan 115V
4) 911-004	886 SIT Valve - NG		
911-005	886 SIT Valve - LP	370-055	Flue Collar Gasket
5) 911-006	Pilot Assembly - NG	476-023	Plate Relief Gasket
911-007	Pilot Assembly - LP	476-055	Valve Tray Gasket
		521-035	Inner Flue Collar Gasket
910-363	White Wall Switch		
910-366	White Switch Plate Wire	940-359/P	Flush Glass
6) 904-660	Burner Orifice # 30 (NG)	476-011	Flush Door
904-431	Burner Orifice # 49 (LP)		
904-658	Inlet Gas Flex Line SS	911-019	Wire (Valve to Burner ON/OFF)
		948-409	Flue Collar
		476-080	Lifting Handle
		918-947	Manual

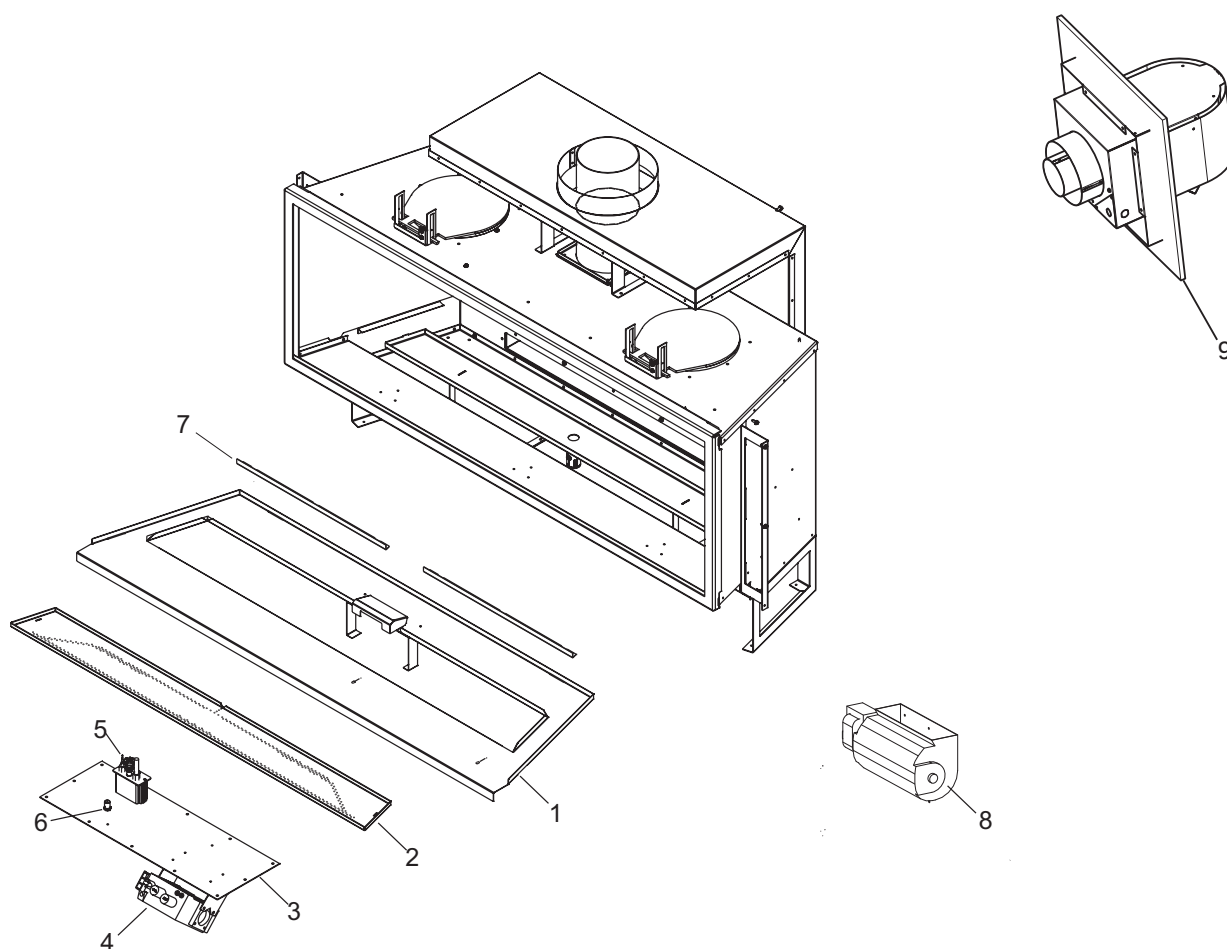

PARTS LIST

ACCESSORIES

Part #	Description
30) 476-907	Reflective Stainless Steel Panels
476-908	Black Enamel Inner Panels
31) 476-924	Faceplate & Door Frame Overlay - Black
476-927	Faceplate & Door Frame Overlay - Stainless Steel
476-926	Faceplate & Door Frame Overlay - Sunset Bronze
946-671	Cobalt Blue Glass Crystals
946-672	Natural River Pebbles
946-673	White River Pebbles
946-674	Stones
476-930	Log Set
946-690	GT remote
946-691	GTM remote
946-692	GTMF remote
910-576	Cover Wall Mount
910-572	Receiver GTM SIT w/ Batt & Cover

