

Wiring Diagrams




This heater does not require a 120V A.C. supply for operation. However, a 120V A.C. power supply is needed for the fan/blower operation.

Caution: Ensure that the wires do not touch any hot surfaces and are away from sharp edges.



CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

WARNING: Electrical Grounding Instructions
This appliance is equipped with a three pronged (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.

Note: Batteries are required in both remote receiver (4 x AA Batteries) & remote hand held (3 x AAA batteries) in order to operate appliance using the remote control.

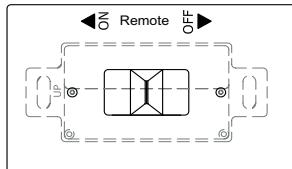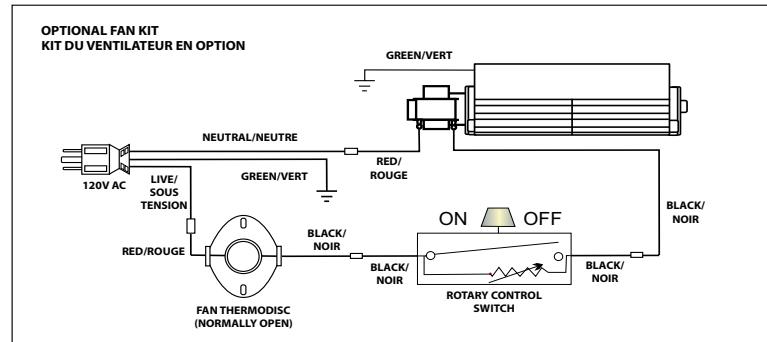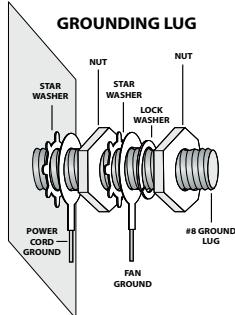

RECEIVER HEARTH MOUNT
MONTAGE DU RÉCEPTEUR

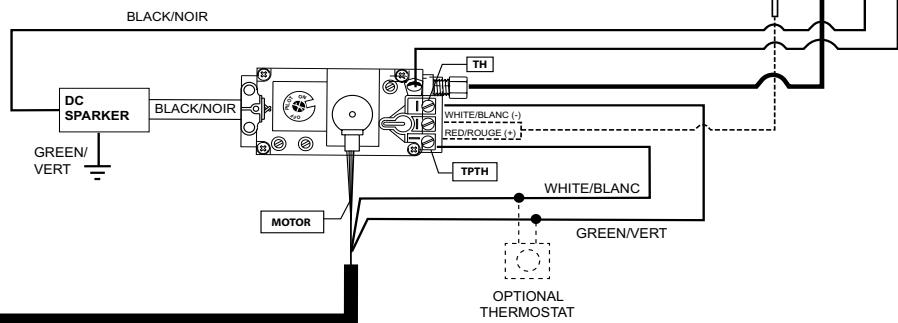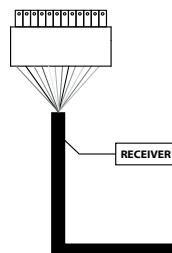

920-635

IMPORTANT: Thermopile leads must be attached to the gas valve as follows:

- Red lead (Positive) to the TP/TH terminal
- White lead (Negative) to the TP terminal