


WIRING DIAGRAM

This heater does not require a 120V A.C. supply for operation. In case of a power failure, the burner switch and the optional remote control/thermostat will continue to operate. However, a 120V A.C. power supply is needed for the fan/blower operation.

(Do not cut the ground terminal off under any circumstances.)

PROFLAME REMOTE SYSTEM GTM (L390E / HZI390E)

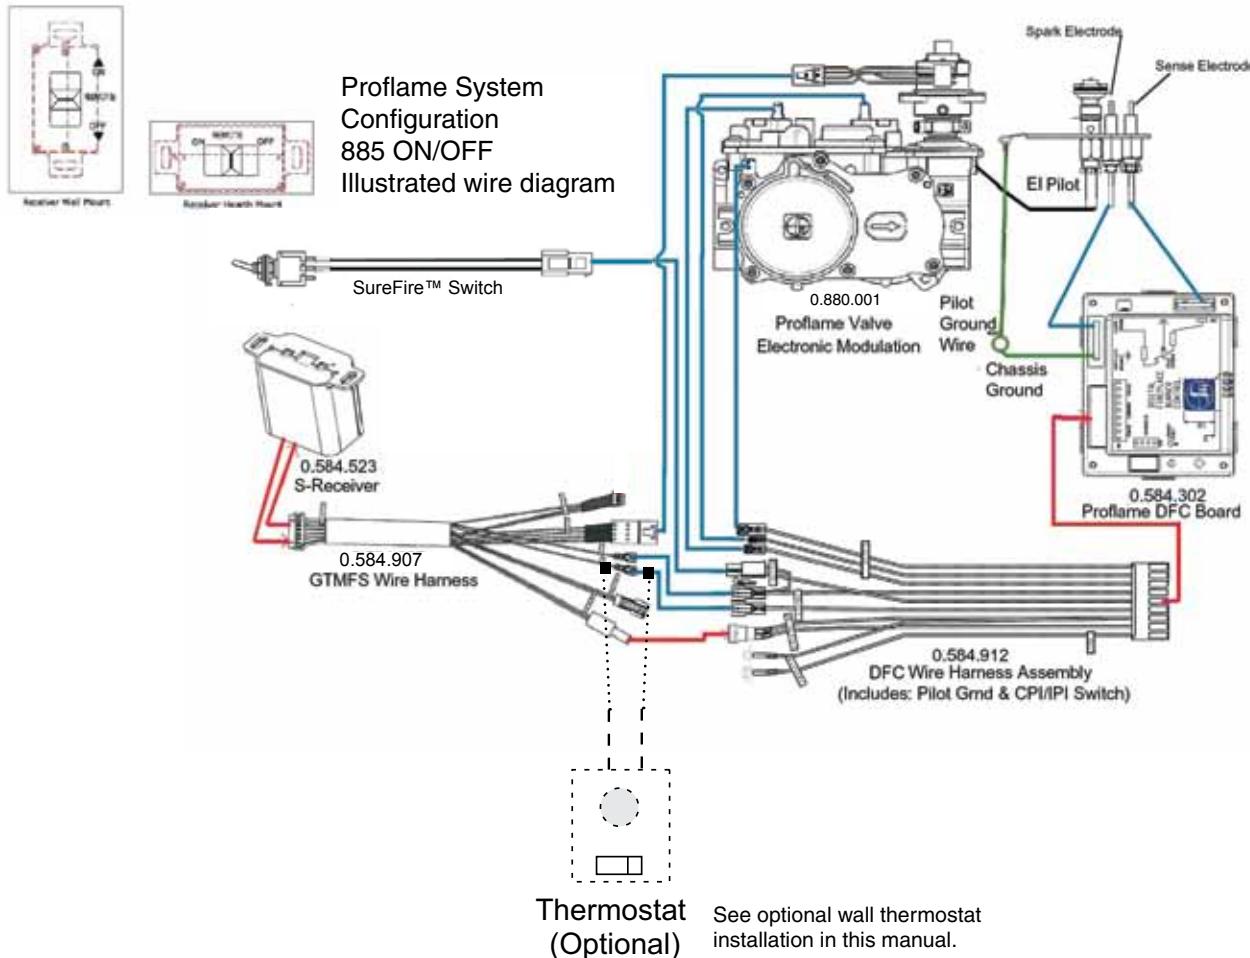

GTM REMOTE SYSTEM - IMPORTANT: The AA batteries in the receiver operate the unit. If the batteries become weak, they will need to be replaced with quality AA alkaline batteries. The unit will not operate without AA batteries.

CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

Caution: Ensure that the wires do not touch any hot surfaces and are away from sharp edges.