
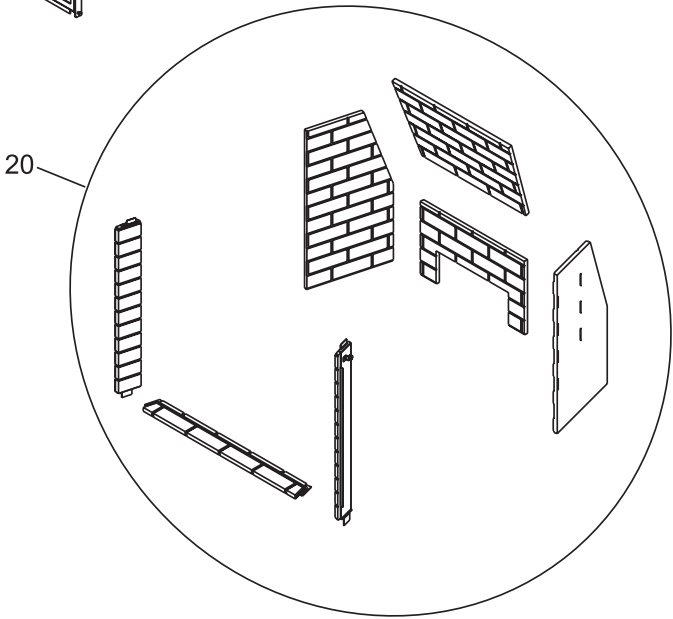
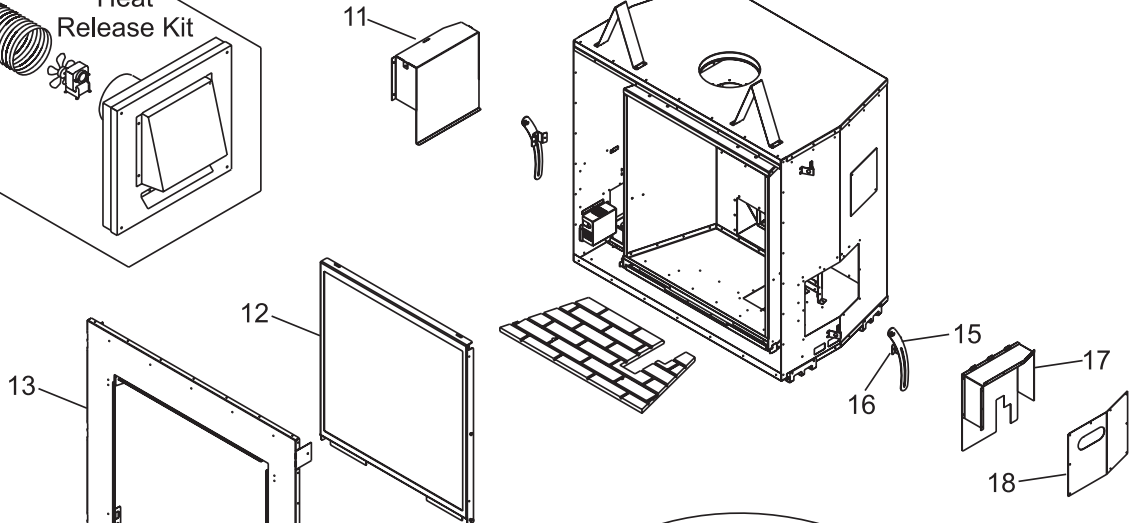
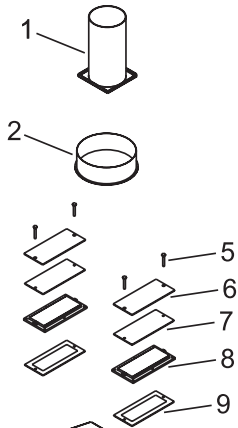
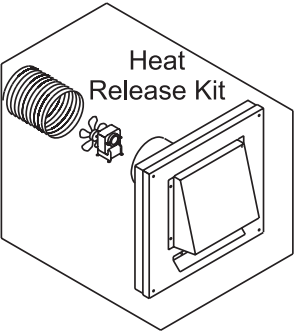


MAIN ASSEMBLY

Part #	Description
1) 521-527	Flue Collar Inner Assembly
2) 502-008	Flue Collar Outer
5) 904-732	Cap Screws 1/4" x 2-3/4"
6) W260280	Gasket Top Relief Plate
7) 770-066F	Top Relief Plate
8) 942-117	Top Relief Frame
9) W260260	Top Relief Frame Gasket
11) 521-064	Heat Shield ECS
12) 521-540	Door Frame Assembly with Glass
940-351/P	Glass
13) 521-013	One Piece Faceplate
15) 521-021F	Control Arm
16) 521-019	Bracket Control Arm
17) 521-065	Heat Shield Valve
18) 521-024	Gas Line Screen Plate
20) 521-901	Brick Panel Set - Standard Brown
521-902	Brick Panel Set - Standard Red
*	Left Side Panel (Interior)
*	Top Panel (Interior)
*	Back Panel (Interior)
*	Right Side Panel (Interior)
*	Right Side Panel (Exterior)
*	Base Panel (Exterior)
*	Left Side Panel (Exterior)
946-556	Heat Wave Kit
946-570	Heat Release Kit
521-969	LP Converison Kit
918-568	Manual

* Not available as a replacement part.

PARTS LIST

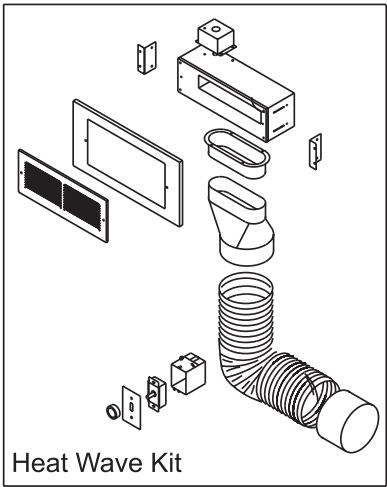

BURNER & LOG ASSEMBLY

Part #	Description
30) 521-015	Bracket Log Tray
31) 521-016	Log Tray
32) 521-042	Deflector Log Tray
35) 948-455	Burner Rear NG/LP
36) 948-454	Burner Front NG/LP
37) 521-050	Grate
40) 521-063	Bracket Log Position
41) 502-061	Pilot Shield
42) 380-013	Pilot Holder
43) W840470	Gasket Pilot Assembly
46) 521-007	Valve Tray
47) 521-025	Valve Bracket
48) 910-460	Valve NG 825 SIT Electric
521-574/P	Valve Assembly - NG
521-576/P	Valve Assembly - LP
910-008	Pilot Assembly - NG
910-009	Pilot Assembly - LP
904-617	Orifice #34
904-622	Orifice #48
910-937	Valve Solenoid
910-929	Control Module
910-931	Power Module
910-930	FireWizard™ Remote Control
918-582	Manual FireWizard™

