


PARTS LIST

MAIN ASSEMBLY

Part #	Description
1) 521-527	Flue Collar Inner Assembly
2) 502-008	Flue Collar Outer
5) 904-751	Cap Screws 1/4" x 4-1/2"
6) W260280	Gasket Top Relief Plate
7) 770-066F	Top Relief Plate
8) 942-117	Top Relief Frame
9) W260260	Top Relief Frame Gasket
11) 521-528	Base Brick Panel
12) 521-540	Door Frame Assembly with Glass
940-351/P	Glass
13) 521-013	One Piece Faceplate
15) 521-079	Valve Heat Shield
16) 910-950	Control Box with Igniter & Battery Backup IPI
910-075	Backup Battery
17) 521-075	Outer Control Box Cover
20) 521-901	Brick Panel Set - Standard Brown
521-902	Brick Panel Set - Standard Red
*	Left Side Panel (Interior)
*	Top Panel (Interior)
*	Back Panel (Interior)
*	Right Side Panel (Interior)
*	Right Side Panel (Exterior)
*	Base Panel (Exterior)
*	Left Side Panel (Exterior)

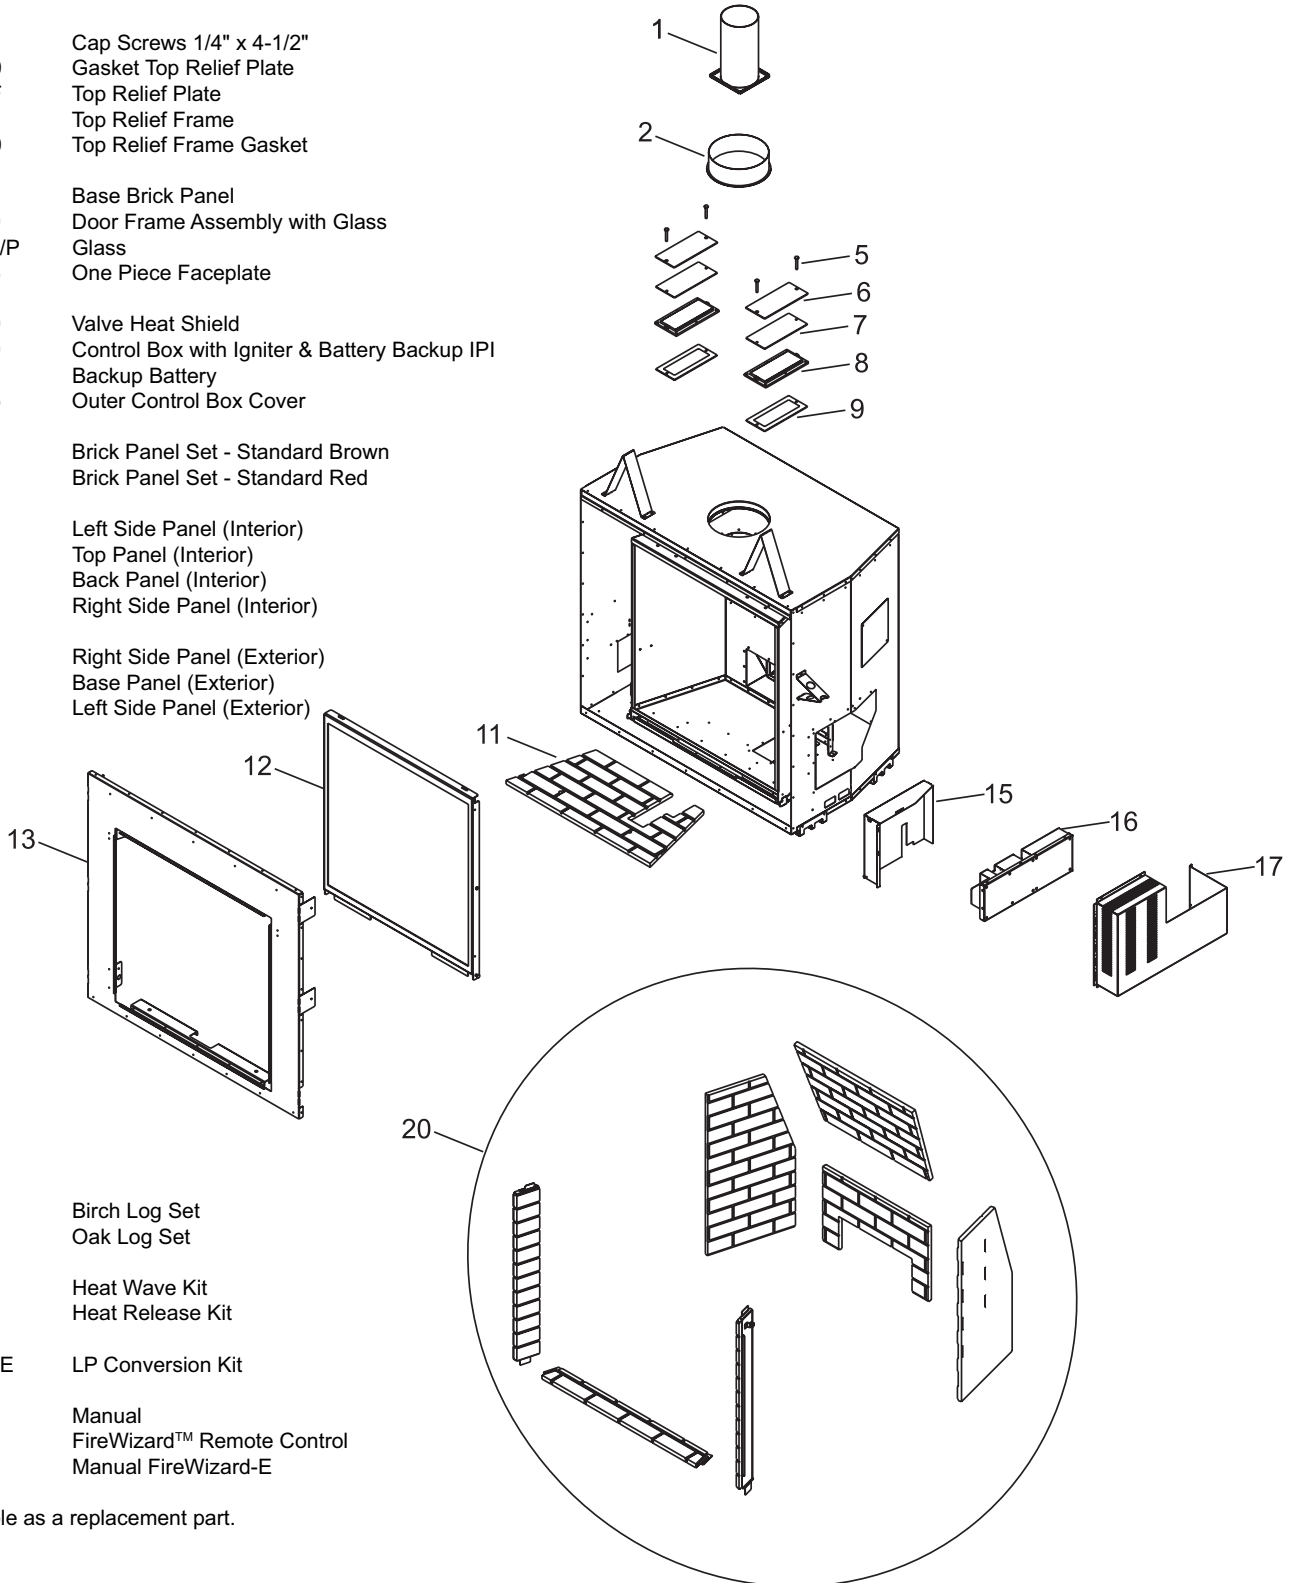

521-930	Birch Log Set
521-935	Oak Log Set
946-556	Heat Wave Kit
946-570	Heat Release Kit
521-969E	LP Conversion Kit
918-621	Manual
910-960	FireWizard™ Remote Control
918-619	Manual FireWizard-E

* Not available as a replacement part.

BURNER & LOG ASSEMBLY

Part #	Description
30) 521-015	Bracket Log Tray
31) 521-016	Log Tray
32) 521-042	Deflector Log Tray
35) 948-455	Burner Rear NG/LP
36) 948-454	Burner Front NG/LP
37) 521-050	Grate
40) 521-063	Bracket Log Position
41) 502-061	Pilot Shield
42) 380-013	Pilot Holder
43) W840470	Gasket Pilot Assembly
46) 521-007	Valve Tray
521-034	Valve Tray Gasket
47) 521-025	Valve Bracket
48) 910-480	Valve 845 SIT Electric
521-574E/P	Valve Assembly - NG
521-576E/P	Valve Assembly - LP
910-952	Pilot Assembly - NG
910-953	Pilot Assembly - LP
904-617	NG - Orifice #34
904-622	NG - Orifice #48
904-241	LP - Orifice #56
904-345	LP - Orifice #53
910-937	Valve Solenoid

