
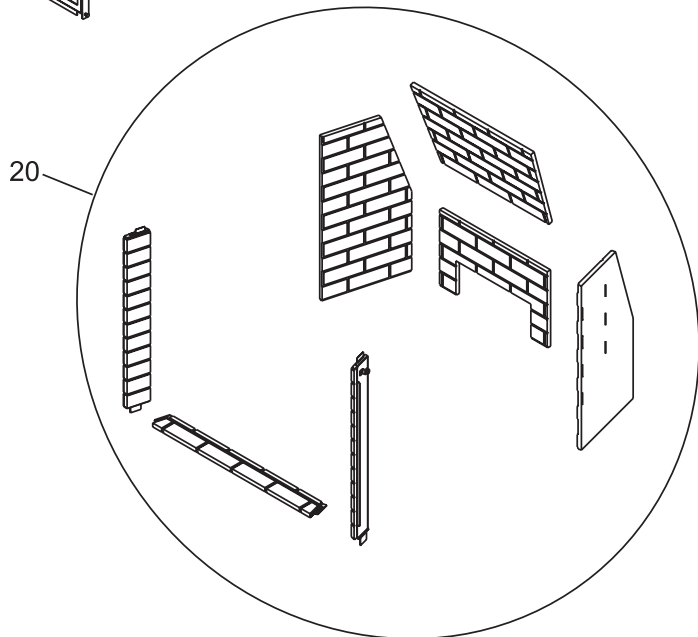
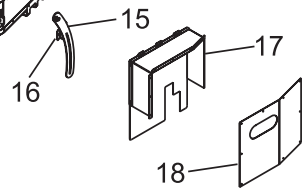
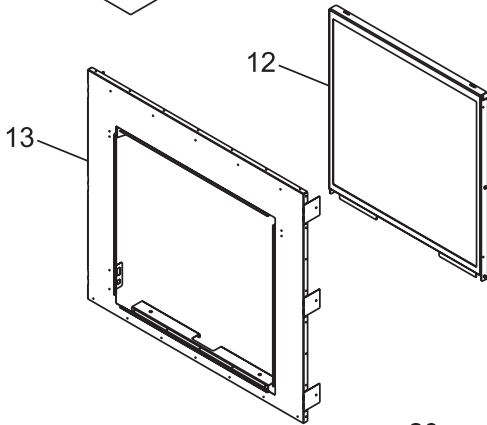
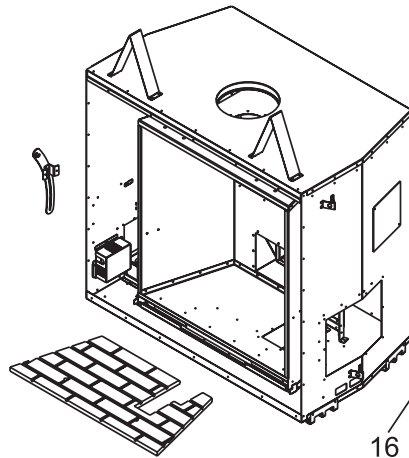
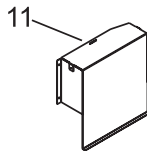
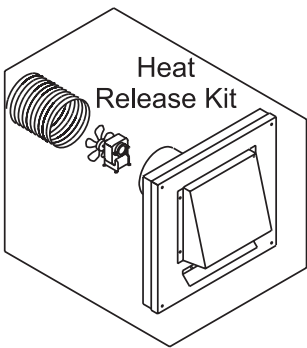
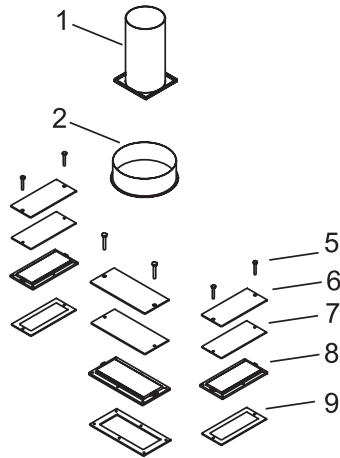


MAIN ASSEMBLY

Part #	Description
1) 521-527	Flue Collar Inner Assembly
2) 502-008	Flue Collar Outer
5) 904-751	Capscrew 1/4 x 4-1/2
6) W260280	Gasket Top Relief Plate
7) 770-066F	Top Relief Plate
8) 942-117	Top Relief Frame
9) W260260	Top Relief Frame Gasket
11) 546-064	Heat Shield ECS
12) 546-540	Door Frame Assembly with Glass
940-354/P	Glass
13) 546-013	One Piece Faceplate
15) 521-021F	Control Arm
16) 521-019	Bracket Control Arm
17) 546-070	Heat Shield Valve
18) 521-024	Gas Line Screen Plate
20) 546-901	Brick Panel Set - Standard Brown
546-902	Brick Panel Set - Standard Red
*	Left Side Panel (Interior)
*	Top Panel (Interior)
*	Back Panel (Interior)
*	Right Side Panel (Interior)
*	Right Side Panel (Exterior)
*	Base Panel (Exterior)
*	Left Side Panel (Exterior)
946-556	Heat Wave Kit
946-570	Heat Release Kit
546-969	LP Converison Kit
918-610	Manual

* Not available as a replacement part.

PARTS LIST

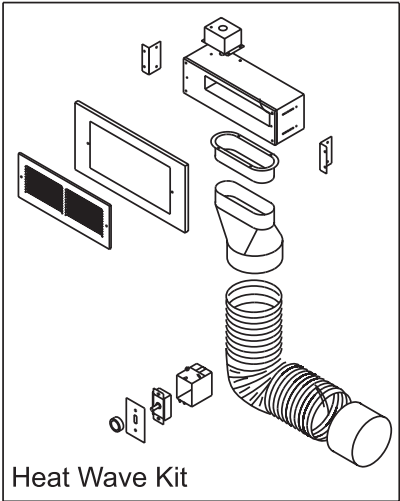

BURNER & LOG ASSEMBLY

Part #	Description	Part #	Description
30) 521-015	Bracket Log Tray	910-937	Valve Solenoid
31) 546-016	Log Tray	910-929	Control Module
32) 546-042	Deflector Log Tray	910-931	Power Module
35) 948-459	Burner Rear NG/LP	910-930	FireWizard™ Remote Control
36) 948-458	Burner Front NG/LP	918-582	Manual FireWizard™
37) 546-050	Grate		
41) 502-061	Pilot Shield		
42) 380-013	Pilot Holder		
43) W840470	Gasket Pilot Assembly		
46) 521-007	Valve Tray		
47) 546-025	Valve Bracket		
48) 910-460	Valve NG 825 SIT Electric		
910-461	Valve LP 825 SIT Electric		
546-574/P	Valve Assembly - NG		
546-576/P	Valve Assembly - LP		
910-008	Pilot Assembly - NG		
910-009	Pilot Assembly - LP		
904-617	NG - Orifice #30		
904-622	NG - Orifice #47		
904-241	LP - Orifice #56		
904-641	LP - Orifice #50		

