
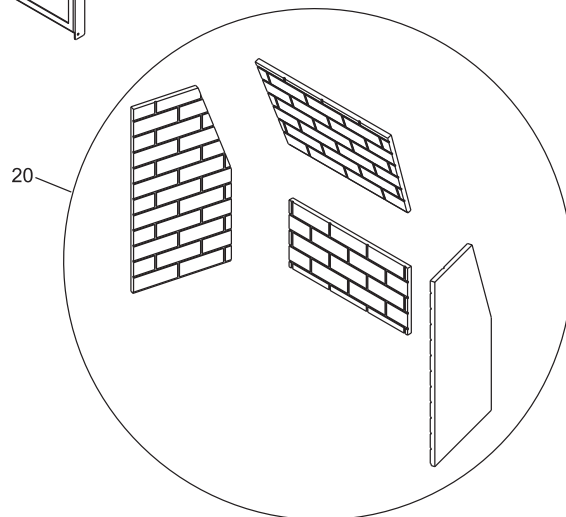
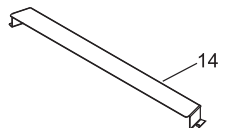
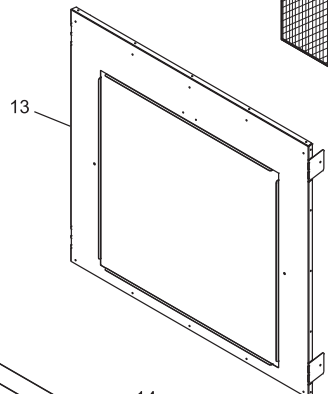
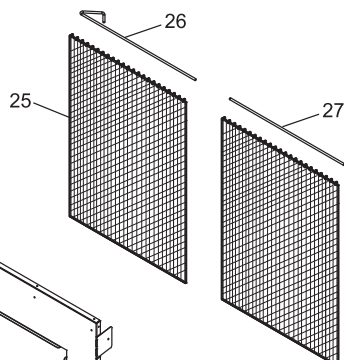
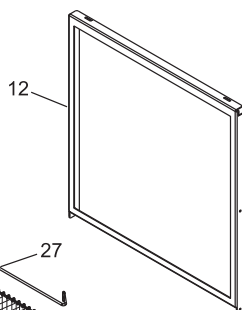
 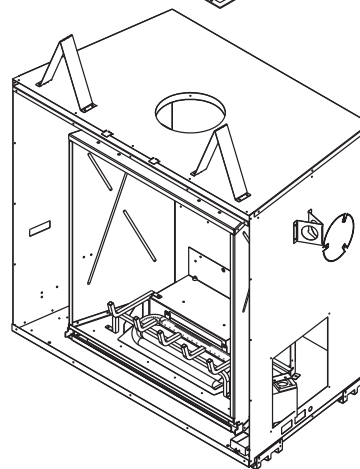

 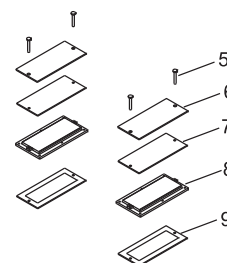

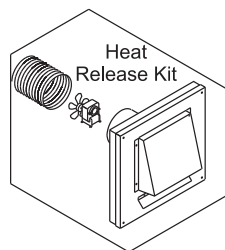


MAIN ASSEMBLY

Part #	Description	Part #	Description
1) 521-527	Flue Collar Inner Assembly	25) 547-038	Black Mini Mesh
2) 502-008	Flue Collar Outer	26) 547-029	Left Side Rod
		27) 547-030	Right Side Rod
5) 904-751	Capscrew 1/4 x 4-1/2	547-930	Log Set
6) W260280	Gasket Top Relief Plate	946-669	Platinum Embers
7) 770-066F	Top Relief Plate		
8) 942-117	Top Relief Frame	910-570	GTM Remote Control
9) W260260	Top Relief Frame Gasket	910-576	Cover Wall Mount
		910-572	Receiver GTM SIT w/Batt & Cover
12) 547-539	Door Frame Assembly, no Glass		
940-354/P	Glass	946-556	Heat Wave Kit
13) 547-013	One Piece Faceplate	946-570	Heat Release Kit
14) 547-027	Front Cover Plate		
		547-969	LP Converison Kit
15) 522-036F	Control Arm		
16) 522-039	Bracket Control Arm	918-726	Manual
18) 522-024F	Gas Line Screen Plate		
20) 547-901	Brick Panel Set - Standard Brown		
547-902	Brick Panel Set - Standard Red		
*	Left Side Panel		
*	Top Panel		
*	Back Panel		
*	Right Side Panel		

* Not available as a replacement part.

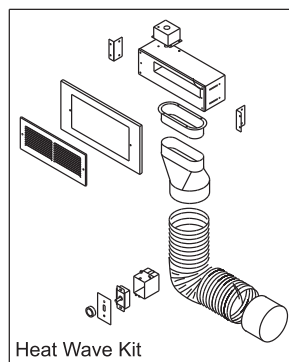

BURNER & LOG ASSEMBLY

Part #	Description
31) 547-016	Log Tray
33) 547-015	Ember Tray
34) 522-017F	Ember Plate
35) 948-466	Burner Tube
37) 547-050	Grate
42) 502-065	Pilot Holder
43) W840470	Gasket Pilot Assembly
46) 547-007	Valve Tray
47) 547-025	Valve Bracket
48) 910-578	Valve NG 829 SIT

547-574/P Valve Assembly - NG
547-576/P Valve Assembly - LP

910-008 Pilot Assembly - NG
910-009 Pilot Assembly - LP
904-660 NG - Orifice #30
904-431 LP - Orifice #49

910-073 Spark Generator Battery Holder
910-074 Spark Generator Switch c/w Wire

