 


parts list

MAIN ASSEMBLY

Part #	Description	Part #	Description
1	948-045 Chain	41	782-917 Fan Kit
2	948-025 Spring	42	910-331/P Fan Motor (120 V)
7	910-428 Duplex Receptacle	50	510-994 Rigid Pipe Adaptor
8	910-429 Box - Receptacle		
9	910-430 Cover - Receptacle	88	946-556 Heat Wave Duct Kit (Optional)
10	904-687 Clamp Connector	89	946-004 Junction Box
14	510-026 Hinge Bracket - Left/Right	90	946-000 Round Duct Adaptor
15	948-253 Door Handle	91	946-002 Round to Oval Adaptor
20	510-033 Top Nailing Strip	92	946-001 Oval Duct Adaptor
22	510-153 Baffle Plate	93	946-007 Angle Bracket
23	510-011F Standoff - Top	94	946-517/P Fan Assembly - Heat Wave
24	511-044 Standoff - Side/Back	95	946-006 Grill Plate - White
		96	946-005 Wall Adaptor
	780-901 Brick Panel Set - Standard	97	910-417 Knob-White
	780-902 Brick Panel Set	98	910-366 Switch Cover Plate
	- Standard Red	100	910-367 Box-Plastic Switch Receptacle
	780-903 Brick Panel Set	102	946-010 Flexible Air Duct
	- Herringbone Brown		946-038 Insulation 6" Dia. x 24"
33	* Brick Panel - Back	107	946-570 Heat Release Duct Kit -Optional
34	* Brick Panel - Left		
35	* Brick Panel - Right	108	910-165 Fan (120 V)
	511-031 Brick Clips (each)	109	946-000 Flexible Air Release Duct
	782-908 Enamel Panels (Set)		
		919-969	Manual
		782-977	Conversion Kit - NG to LP

*Not available as a replacement part.




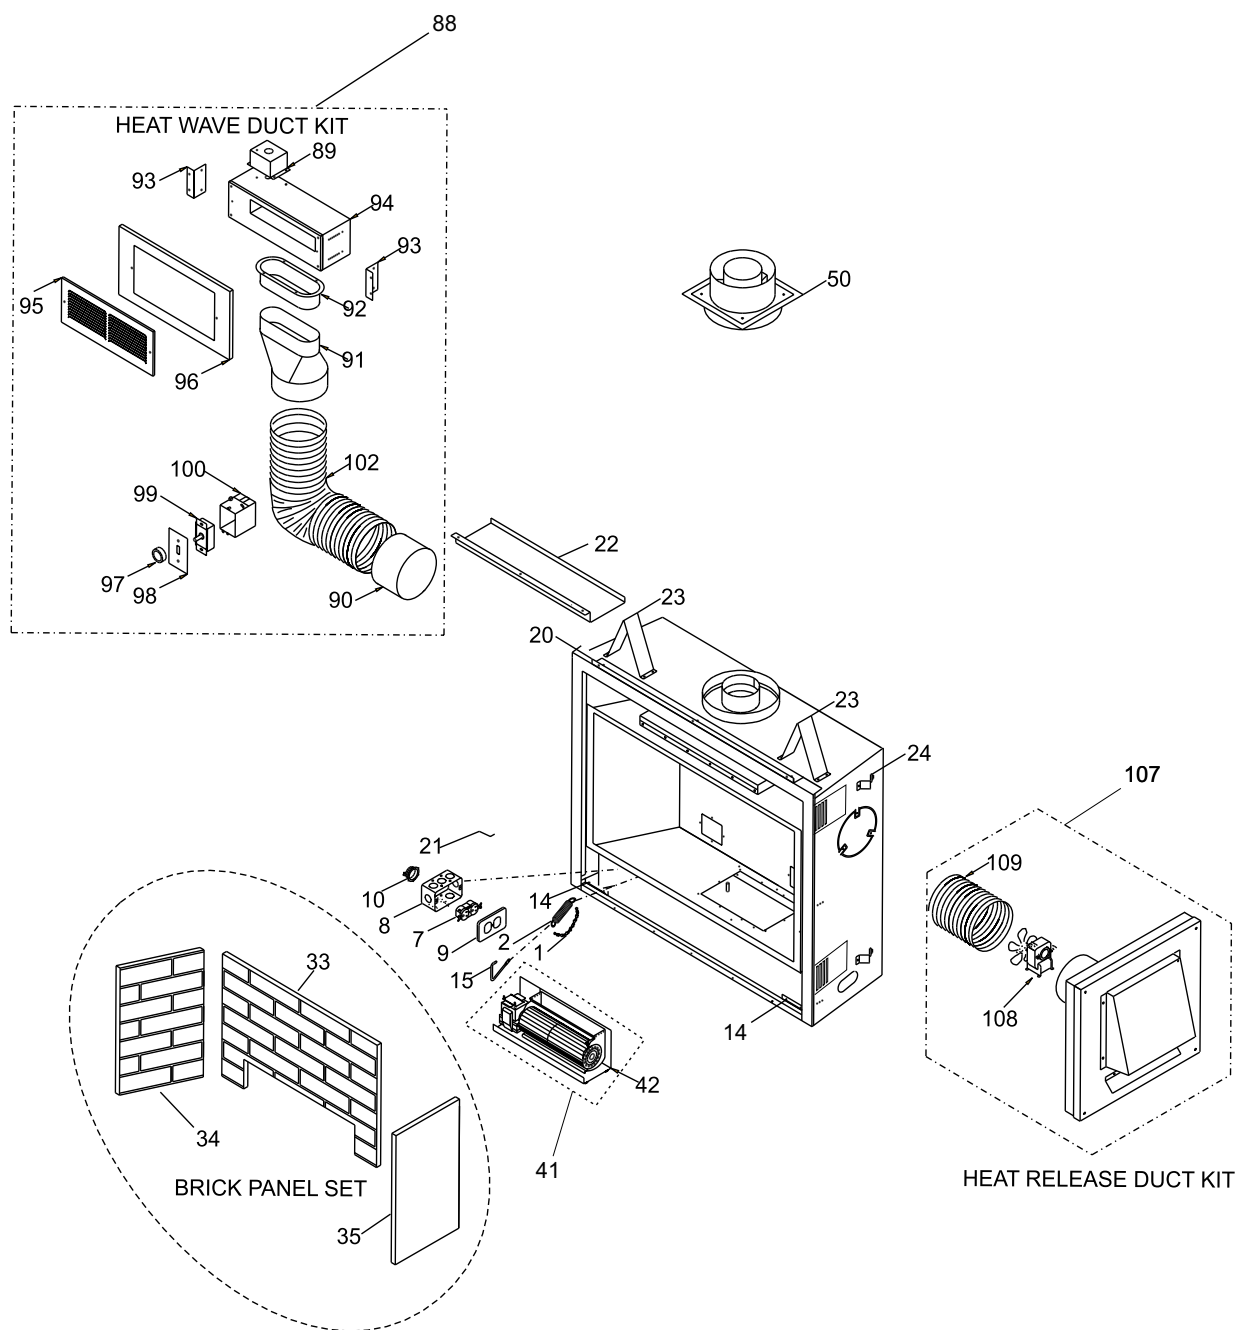


parts list

BURNER ASSEMBLY & LOG SET


Part #	Description
53. 780-021	Gasket - Valve Access Plate
59. 792-774/P	Valve Assy - Natural Gas
59. 792-776/P	Valve Assy - Propane
60. 911-084	Valve - S.I.T. - NG 885 SIT IPI 0.885.001
911-085	Valve - S.I.T. - LP 885 SIT IPI 0.885.002
66. 911-276	Pilot Assy IPI NG 2 Flame
911-277	Pilot Assy IPI LP 2 Flame
67. 904-240	#37 Burner Orifice - Natural Gas
904-390	#52 Burner Orifice - Propane
936-170	Orifice Gasket
70. 911-010	Stepper Motor NG for 885/886 SIT 0.907.013
911-011	Stepper Motor LP for 885/886 SIT 0.907.012
911-175	Remote handheld (GTMF)
911-127	Battery Compartment Door
910-036	Pilot Orifice STI NG #51 977.165
910-037	Pilot Orifice STI LP #30 977.167
911-039	Pilot Hood
910-432	Pilot Tube w/nuts
792-977	Conversion Kit LP
68. W840470	Pilot Assembly Gasket
79. 791-535	Burner Assy - NG/LP
82. 511-030	Burner Grate Assy
83. 780-520	Rear Log Support Bracket
85. 780-930	Log Set (Complete) (Oak)
911-037	Flame Sensor
911-038	Spark Electrode
911-187	Remote Battery Box
911-127	Remote Battery Compartment Door
911-175	GTMF Remote Control Handheld
911-192	120 Volt Power Cord
911-266/P	IFC Proflame Control Module
911-257	Fan 2 Pin Wire Harness
911-173	Valve Wiring Harness
911-181	Battery Box Wiring Harness
911-193	Connector with Jumper Wire
363-154	IFC Metal Cover - Base
363-155	IFC Metal Cover - Top
911-210	External Antenna IFC
910-428	Duplex Receptacle
910-429	Box - Receptacle
910-430	Cover - Receptacle
904-687	Clamp Connector
910-331/P	Replacement Blower Motor

    *Not available as a replacement part.

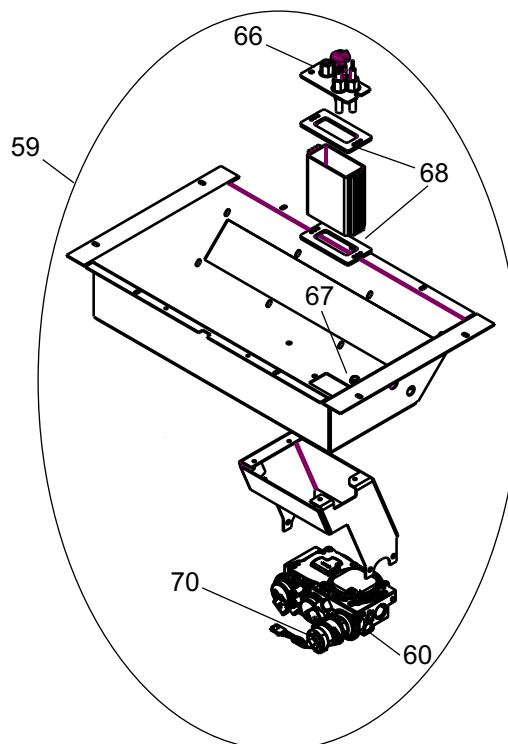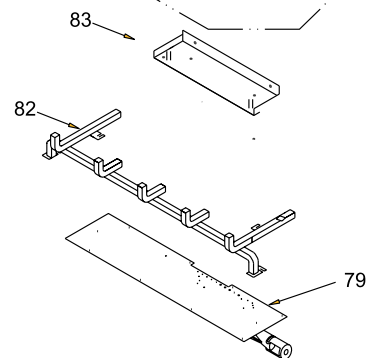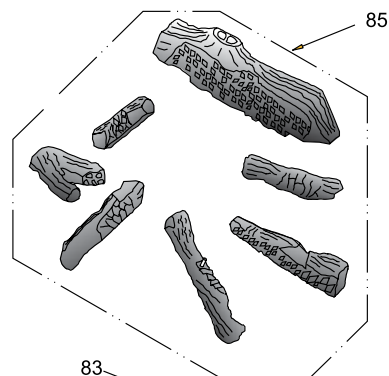

VIGNETTE FACEPLATE AND FINISHING TRIM

	Part #	Description
1	515-922	Vignette Platinum
	515-923	Vignette Black Chrome
	515-924	Vignette Black
	515-926	Vignette Tuscan Sunset
2	515-918	Vignette Door Inlay Black Chrome
	515-919	Vignette Door Inlay Metallic Black
	515-920	Vignette Door Inlay Tuscan Sunset
	515-922	Vignette Front Platinum
*	515-928	Vignette Finishing Trim w/NCB
*		Not Shown

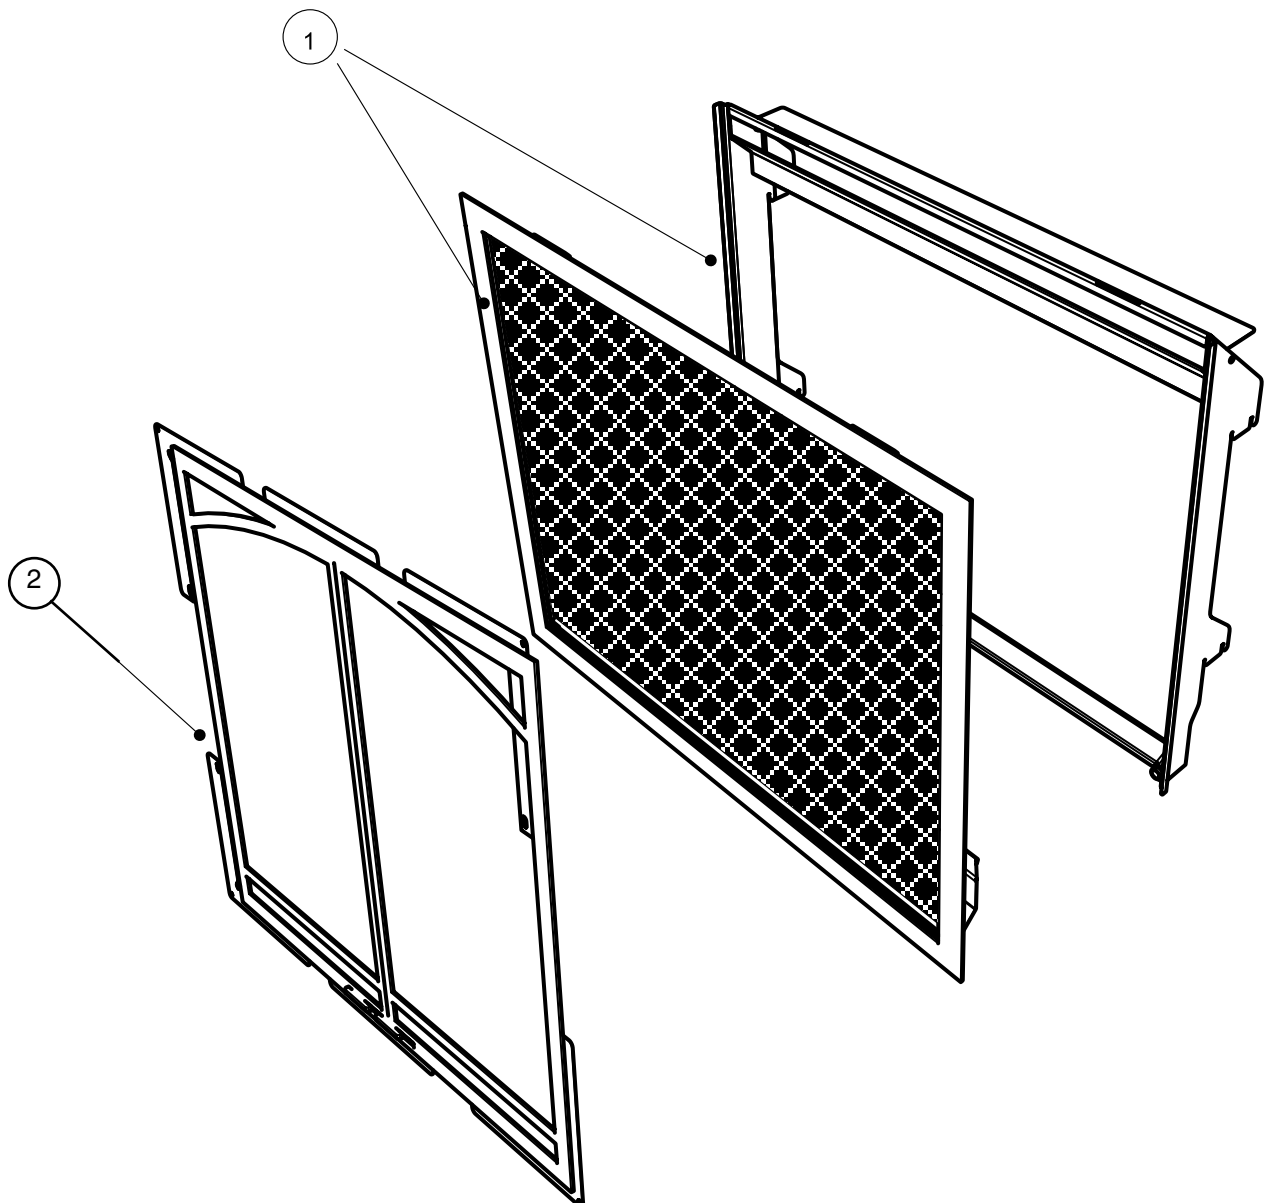 

parts list

SAFETY SCREEN AND LOUVERS

	Part #	Description
1	510-922	Flush louvers black
2	515-929	Safety Screen
3	515-986	3 Sided Finishing Trim
4	948-223	Regency® Logo Plate

