 


PARTS LIST

MAIN ASSEMBLY

Part #	Description
1) 320-009	Fan Access Plate
2) 320-079	Gasket - Fan Access Plate
320-517/P	Fan Assembly 120 V
3) 910-331/P	Fan Motor 120 V
5) 910-750	Power Cord
910-752	Wire Harness (Faceplate)
7) 910-142	Fan Auto On/Off Thermodisc
8) *	Thermodisc Bracket
9) 320-070	Fan Switch Cover
13) *	Baffle Plate
14) 948-045	#12 Jack Chain
15) 948-247	Door Handle
16) 948-025	Door Spring
17) *	Wire Holder Clip
18) *	Strain Relief
19) *	Grommet for Power Cord
320-924	Flush Louvers (Set) - Black/Gold
320-922	Flush Louvers (Set) - Black
320-925	Flush Louvers (Set) - Black/Steel
21) *	Top Flush Louver
23) *	Bottom Flush Louver
320-932	Bay Louvers (Set) - Black/Gold
320-934	Bay Louvers (Set) - Black
320-935	Bay Louvers (Set) - Black/Steel
25) *	Top Bay Louver
27) *	Bottom Bay Louver
320-901	Brick Panel Set - Standard Brown
320-902	Brick Panel Set - Standard Red
320-903	Brick Panel Set - Herringbone Brown
33) *	Brick Panel - Right
34) *	Brick Panel - Left
35) *	Brick Panel - Back
36) 400-090	Brick Clip
40) *	Top Support
41) *	Collar Support
42) 320-077	Collar Gasket
43) *	Stove Top
44) 420-048	Thermal Insulation
45) *	Adaptor Stop
46) *	Adaptor Holding Brkt - Left
47) *	Adaptor Holding Brkt - Right
48) 320-518	Flue Adaptor Assembly
50) *	Insulation Hold Down Bracket
51) *	Louver Hold Down - Top
918-528	Manual

* Not available as a replacement part.

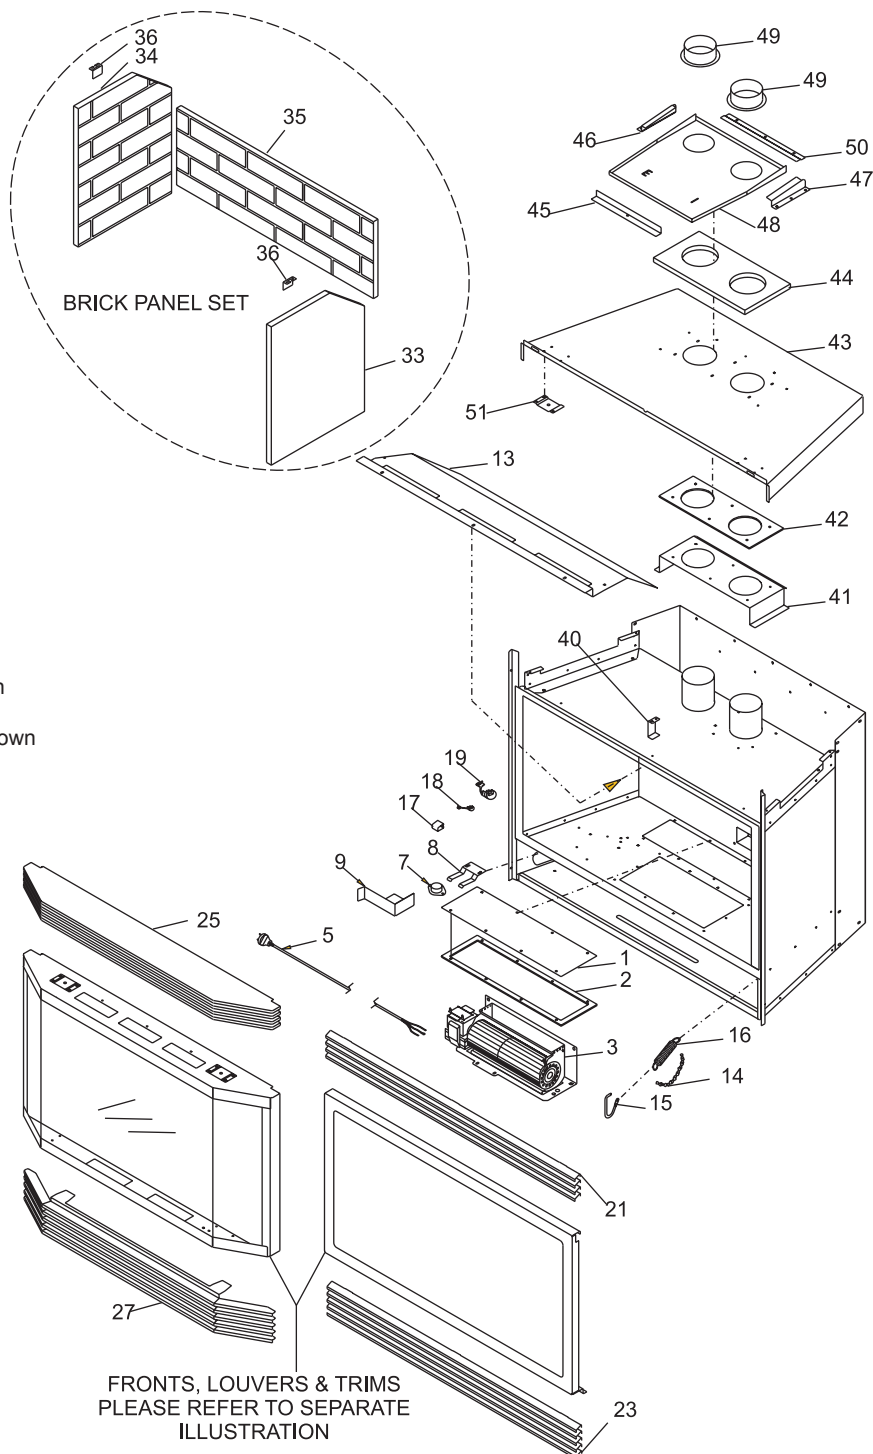

BURNER & LOG ASSEMBLY


Part #	Description
52) 320-078	Gasket - Valve Tray
54) 910-421	Pilot ON/OFF 3" Extension Knob (with Bay Front)
55) 910-422	Flame Hi/Low 3" Extension Knob (with Bay Front)

320-563/P	Valve Assembly - NG
320-564/P	Valve Assembly - LP
56) 910-190	Piezo Ignitor and Nut
57) 910-478	Valve - S.I.T. - NG/LPG
59) *	Valve Tray
66) 910-034	Pilot Assy-3 Flame-S.I.T.-NG
910-035	Pilot Assy - 3 Flame - S.I.T. - LP
67) 904-689	Orifice #33 - NG
904-641	Orifice #50 - LP
936-170	Orifice Gasket

79) 320-550	Burner Assy - NG
320-551	Burner Assy - LP
82) 320-001	Burner Grate
84) 320-034	Log Tray Rear

600-964	Log Set
86) *	Front Log - Right
87) *	Front Log - Left
88) *	Rear Log

 
* Not available as a replacement part.

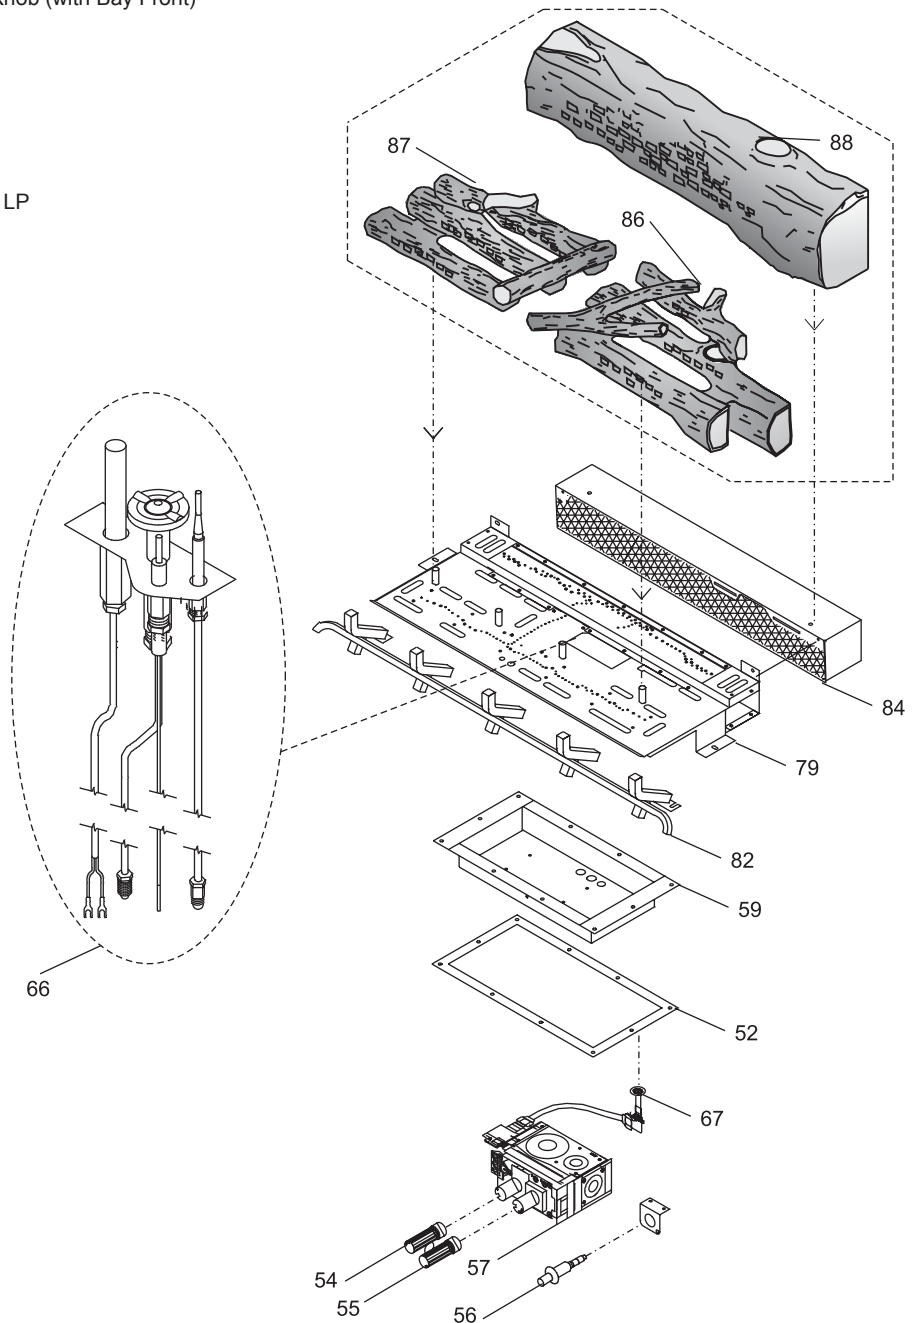

PARTS LIST

FLUSH DOOR AND BAY FRONT ASSEMBLY

Part #	Description	Part #	Description
Bay Front		Flush Front	
320-930	Bay Front Complete	320-530	Flush Door Assy Complete with glass
102) *	Flush Glass Retainer	131) *	Flush Door Frame
106) 940-318/P	Side Glass	135) 940-316/P	Glass - Flush
107) 936-243	Gasket	137) 904-691	U-Clip
108) 940-317/P	Center Glass	139) 936-155	Glass Gasket
		320-943	Double Door Screen Complete
111) *	Door Trim	173) 904-712	U-Clip for Frame
112) 904-196	Magnet 1" Round	174) 511-085	Door Handle
		175) 511-084	Door Latch
910-421	Pilot On/Off 3" Extension Knob	* Not available as a replacement part.	
910-422	Flame Hi/Low 3" Extension Knob		
320-936	Optional Bay Door Trim - Gold		

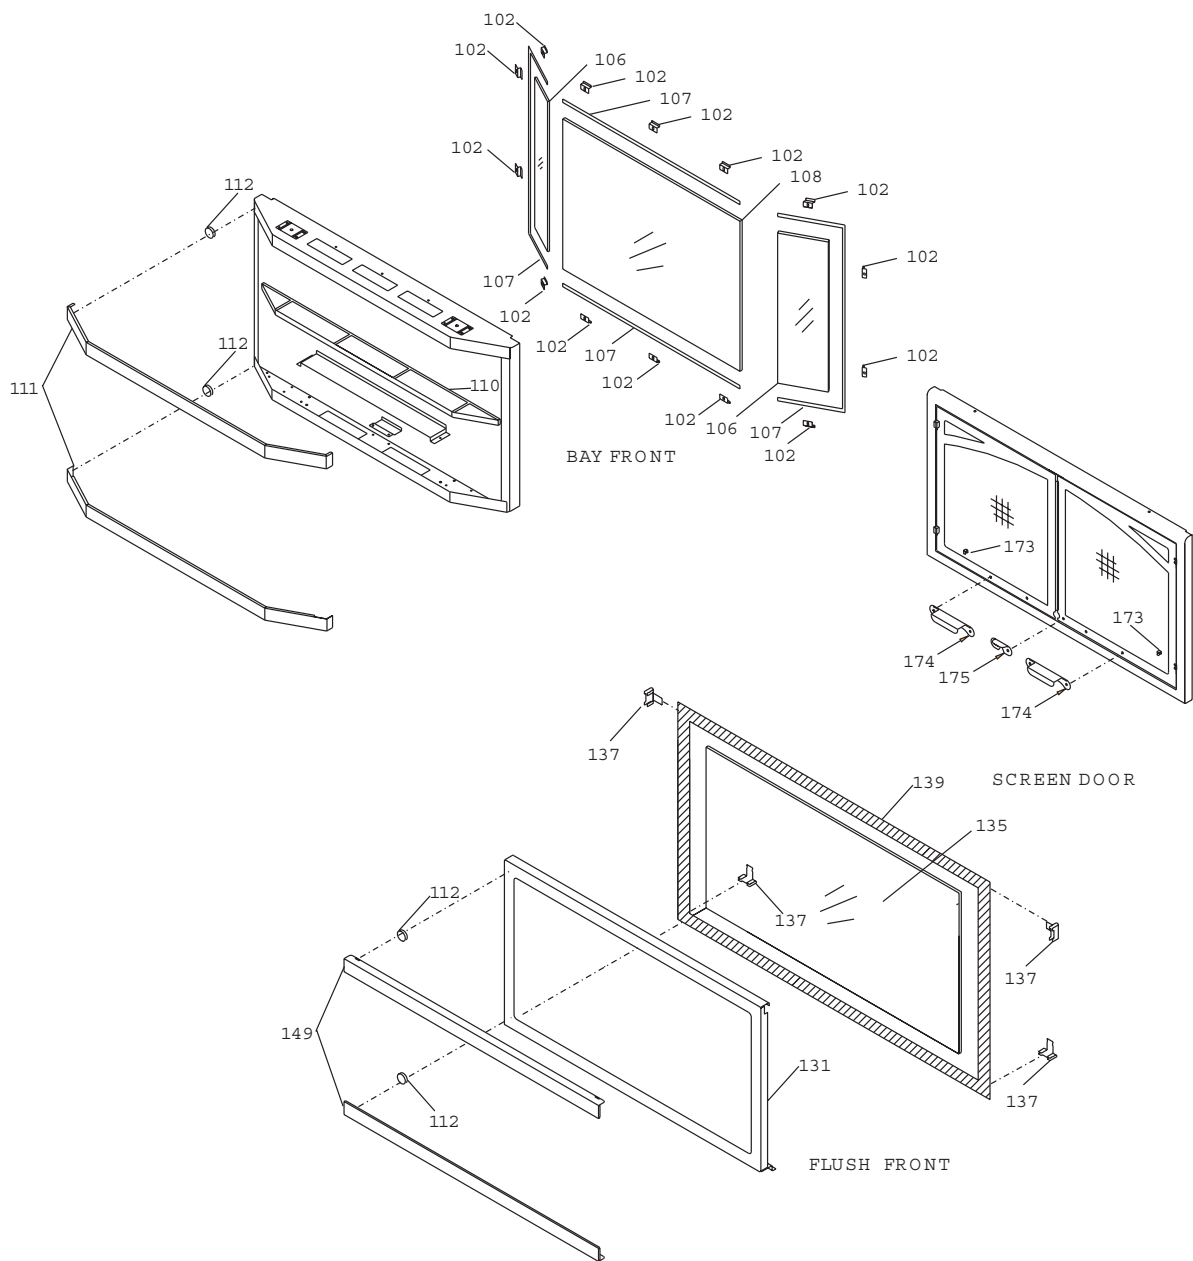 

FACEPLATES, TRIMS, AND HEARTHHS

Part #	Description	Part #	Description	
320-917	Complete Custom Faceplate (Set)	320-933	Molded Faceplate (Complete)	
71) *	Faceplate Side Right - Custom	141) *	Molded Faceplate - Right	
72) *	Faceplate Top - Custom	142) *	Molded Faceplate - Top	
73) *	Faceplate Side Left - Custom	143) *	Molded Faceplate - Left	
320-948	Faceplates and Trim (Complete) with Black Trim	144) *	Mounting Bracket - Right	
74) 904-569	Fan Speed Control Knob	145) *	Filler Bracket	
91) *	Faceplate Side - Right	146) *	Mounting Bracket - Left	
92) *	Faceplate - Top	147) *	Screw #8 - 3/4" Pan Head	
93) *	Faceplate Side - Left Assy			
		172)	320-940	Hearth Trim - 1"
320-553	Trim Set Packaged - Black	176)	320-942	Hearth Trim - 2"
94) *	Trim Side - Right	180)	320-944	Hearth Trim - 4"
95) *	Trim - Top	184)	320-946	Hearth Trim - 6"
96) *	Trim Side - Left Assy	186)	904-586	Speed Control Knob c/w Spring Clip
		190)	*	Screw #8 x 1/2" Black Self-tapping
97) 910-246	Burner ON/OFF Switch	191)	*	Screw #8 x 1/2" Brass Plated Self-tapping
98) 910-330	Fan Speed Control 120 V	199)	948-216	Regency® Logo
99) *	Faceplate Filler			

* Not available as a replacement part.

