


U38E-11 Main Assembly

Part #	Description	Part #	Description
1) 732-929	Safety Screen	30) 750-026	Rear Panel
2) 560-921	Top/Bottom Brush Nickel Louver Assy (Optional)	32) 730-565	Firebox Baffle
560-922	Top/Bottom Black Louver Assy (Optional)	33) 560-535	False Top Assembly
9) 560-055	Fan Access Door	34) 590-273	Flue Attachment Bracket
10) 730-034	Gasket for Fan Access Door	35) 590-930	Ult. 6" Flue Collar (Optional)
730-517/P	Fan Assembly	38) 820-058	Pedestal Base Cover
11) 910-331/P	Fan Motor (120 Volt)	948-223	Logo Plate
12) 911-179	Power Cord IFC Proflame II (120 Volt)	919-973	Manual
15) *	Pedestal Assembly		
16) 730-039	Pedestal Door		
17) 904-257	Pedestal Door Magnet		
18) 732-084	Pedestal Back		
19) 733-011	Front Control Panel Plate		
20) 730-531	Short Side Panel Door Assy (each)		
21) 560-031	Hinge for Side Panel (each)		
23) 904-258	Side Panel Door Magnet (each)		
24) 948-255	Door Latch c/w Hook (each)		

*Not available as a replacement part.

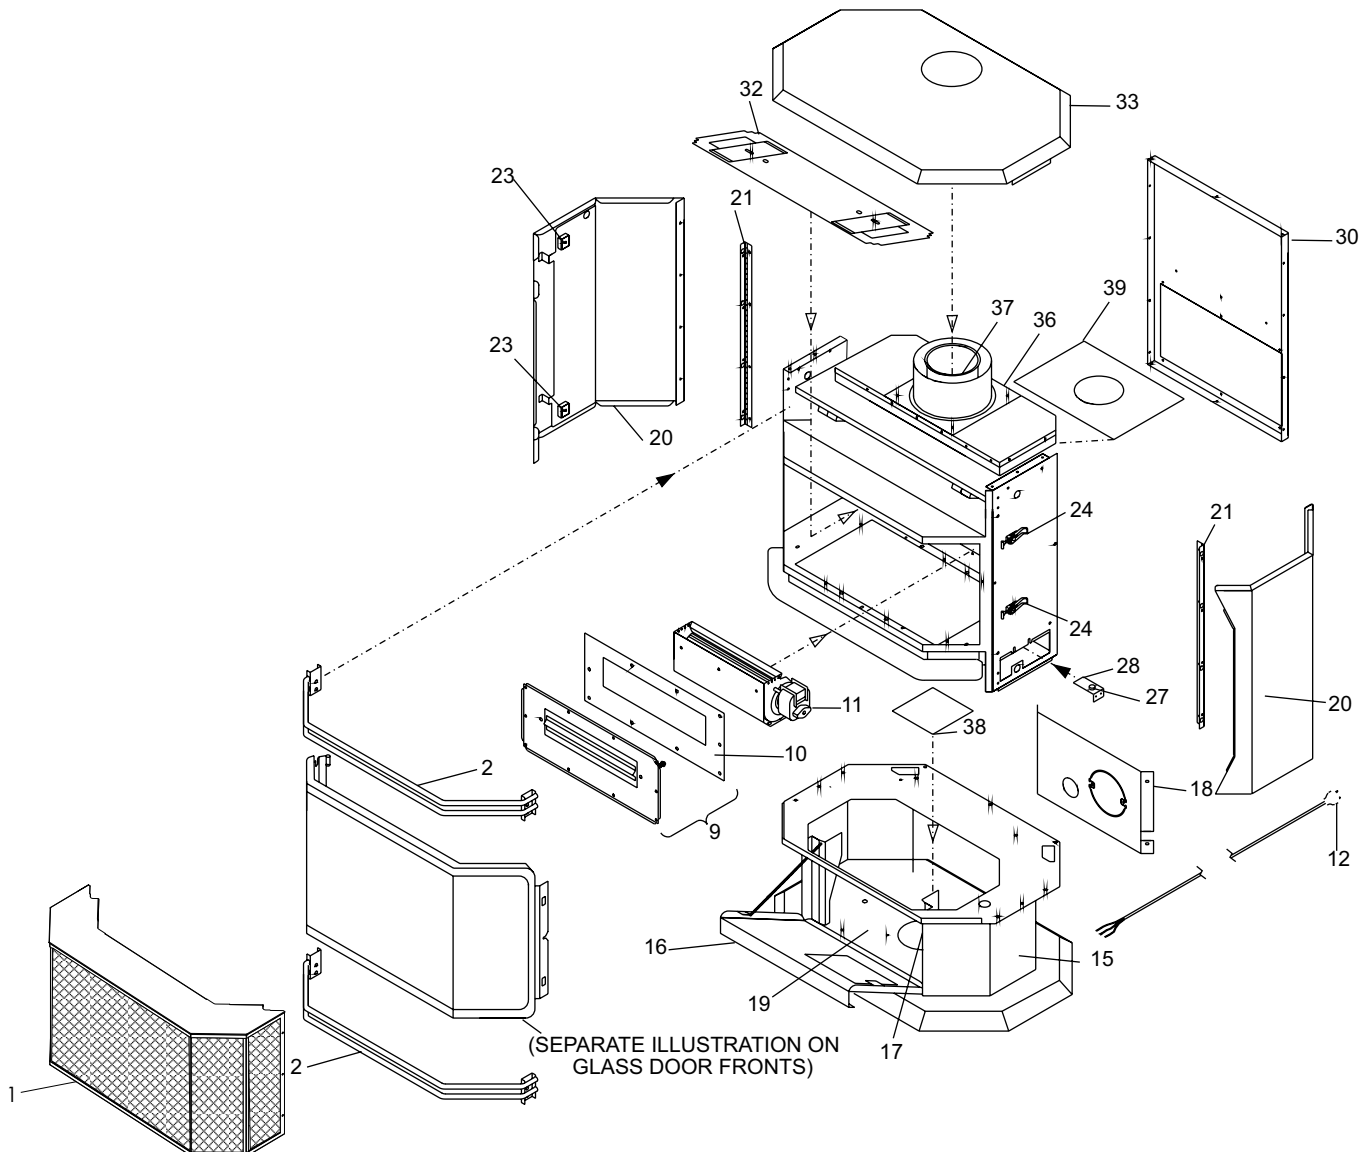


parts list

U38E-11 Burner & Log Assembly

Part #	Description	Part #	Description
59. 753-774/P	Valve Assembly- Natural Gas	910-250	Spill Switch - Manual Reset
753-776/P	Valve Assembly - Propane	910-705	Wire High Temp - Valve End
60. 911-084	Valve NG 885 SIT IPI 0.885.001	910-749	Wire Thermodisc To Switch
911-085	Valve LP 885 SIT IPI 0.885.002	910-802	Wire SIT Valve To Burner On/Off
66. 911-284	Pilot Assy IPI NG 2 Flame 0.199.050911-006	911-173	Wire Harness IFC No CPI Switch 584.924
911-285	Pilot Assy IPI LP 2 Flame	911-178	Wire 2 Pos IFC Burner On/Off
67. 904-688	#32 Orifice - N.G. at 38,000 Btu/h	911-257	Wire 2 Pos IFC Fan
904-240	#37 Orifice - N.G. at 30,000 Btu/h	911-266/P	IFC Board SIT Proflm II 7day PV+5 Sec.FFRT 0.584.625
904-689	#33 Orifice - N.G. at 35,000 Btu/h	911-210	Antenna IFC Shielded Harness 315MHz
904-390	#52 Orifice - Propane at 30,000 Btu/h	911-282	Wire Harness Battery Box Proflame II .584.922
904-641	#50 Orifice - Propane at 38,000 Btu/h	911-342	Black Battery Cover Plate With Switch Black 0.584.801
936-170	Orifice Gasket	100. 911-037	Flame sensor
71. 732-514	Rear Log Bracket	101. 911-038	Flame Electrode
75. 732-930	Log Set Complete - Oak	102. 910-432	Pilot Tube with Nuts
732-931	Log Set Complete - Driftwood		
902-058	Lave (Bag)		
946-669	Platinum Embers (Bag)		
946-708	Embaglow Embers (Bag)		
78. 737-550	Burner Assembly (NG/LP)		
80. 260-565	Air Shutter Gear Assembly - Female		
81. 904-565	Hex Key 3/16" AF		
84. *	Air Shutter Gear Assembly - Male		
85. 911-010	Stepper Motor NG For 885/886 SIT 0.907.013		
911-011	Stepper Motor LP For 885/886 SIT 0.907.012		
911-337/P	Remote Battery Compartment		
911-175	Remote handheld (GTMF)		
910-036	Pilot Orifice LP #51 0.977.165		
910-037	Pilot Orifice NG #30 0.977.167		
911-039	Pilot Hood		
753-977	Conversion Kit LP		
911-093	120 Volt Power Cord (10 foot extension)		
911-137	Pilot Clip		

*Not available as a replacement part.

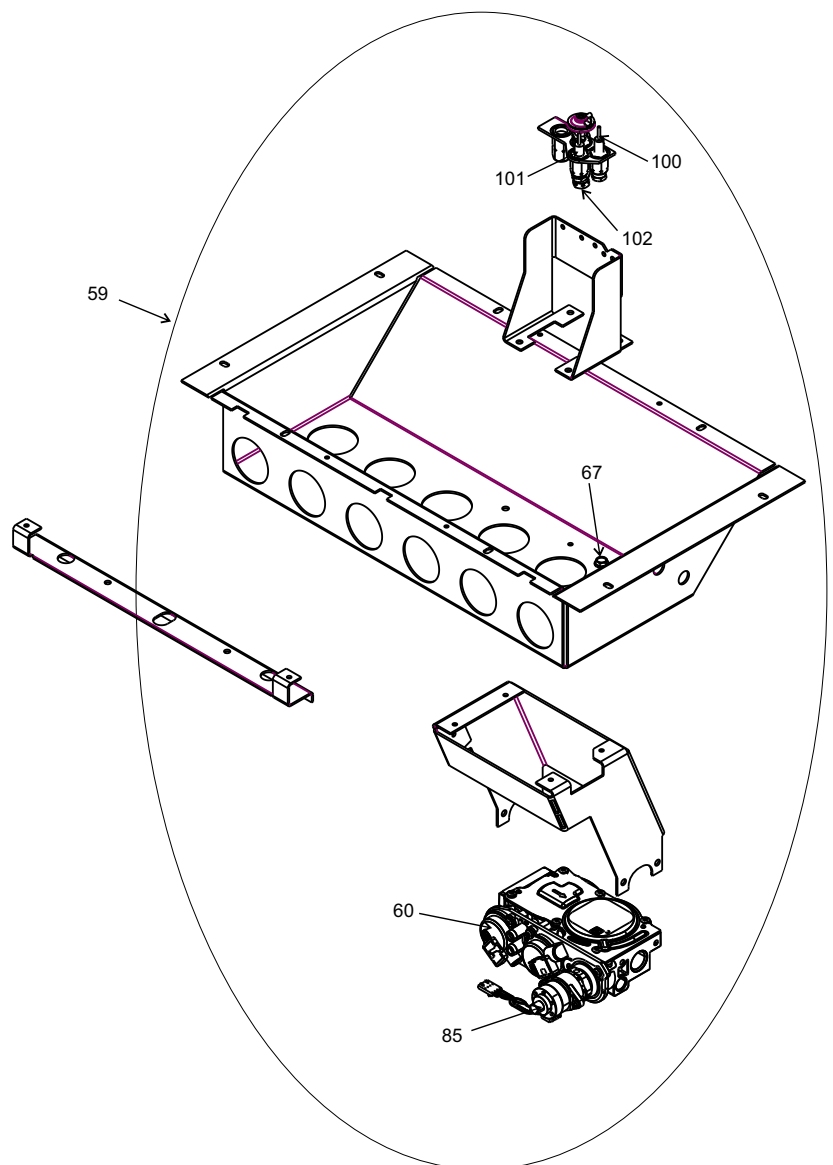

U38E-11 Door Assembly

Part #	Description
732-943	Black Wrap Door - Complete
732-944	Brushed Nickel Wrap Door - Complete
101) 732-570	Door Gasket Kit
105) *	Ceramic Paper
107) 936-243	Glass Gasket
111) *	Door Frame Fibre Paper
208) 940-325/P	Wrap Glass
209) 732-020	Door Mounting Bracket

*Not available as a replacement part.

