

operating instructions

Wiring Diagram without Thermostat


WARNING: Electrical Grounding Instructions

This appliance is equipped with a three pronged (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.

This heater does not require a 120V A.C. supply for operation but highly recommended. In case of a power failure, the remote control/thermostat will continue to operate.

Note: The fan does require 120 volt power for it to operate.

CAUTION: Ensure that the wires do not touch a hot surface and are away from sharp edges.

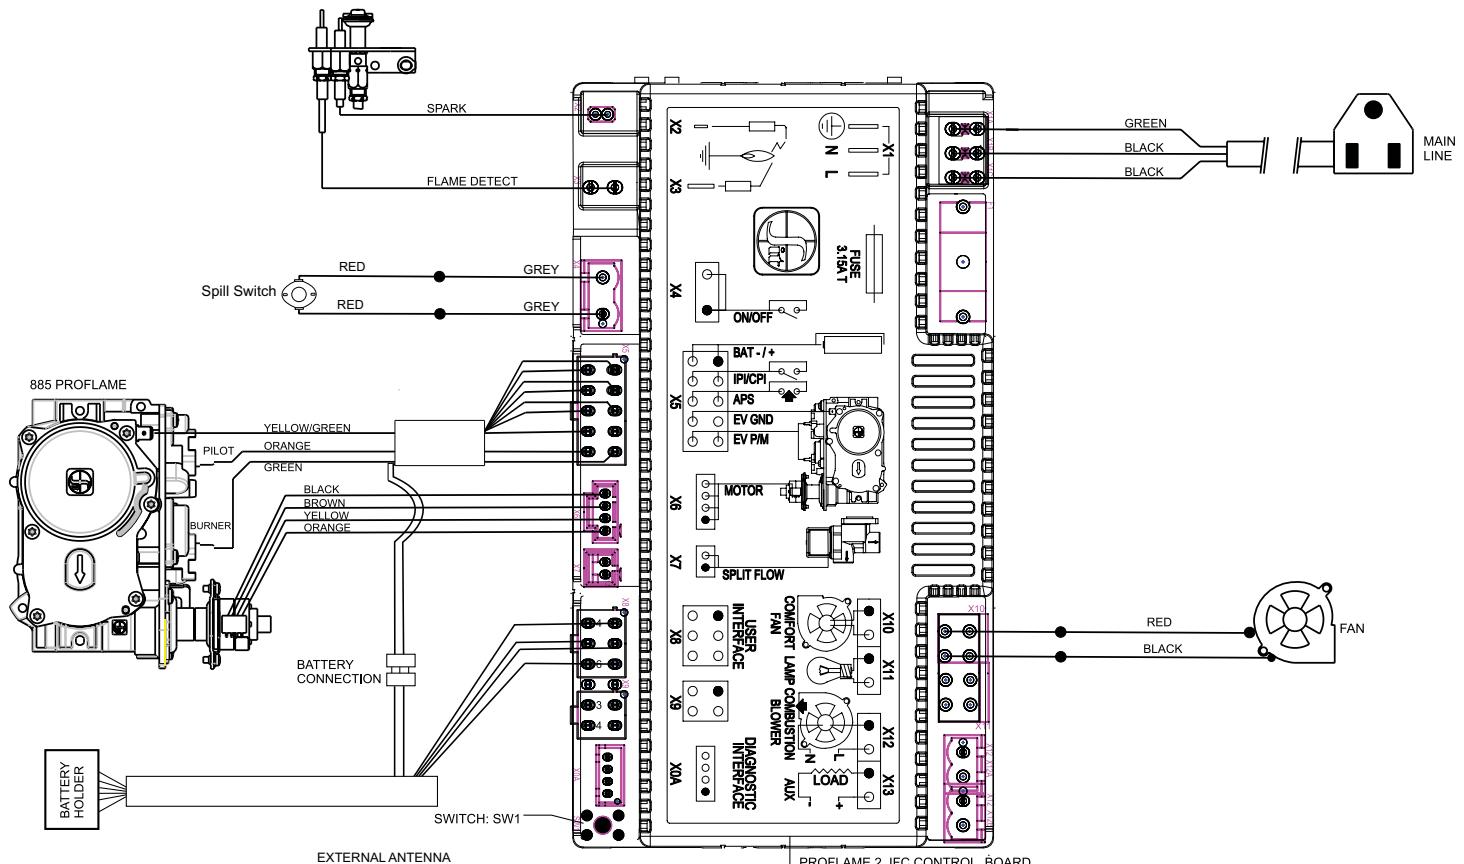

Wiring Diagram with Optional Thermostat

