


## Wiring Diagrams

No electrical power supply is required for the gas control to operate. 120 Volt AC power is needed for the lights. A receptacle box, receptacle and cover are provided and located on the left hand side of the unit, under the outer base panel.

**(Do not cut the ground terminal off under any circumstances.)**

Electrical power must be brought to the appliance by a licensed electrician.

**Caution: Ensure that the wires do not touch any hot surfaces and are away from sharp edges.**

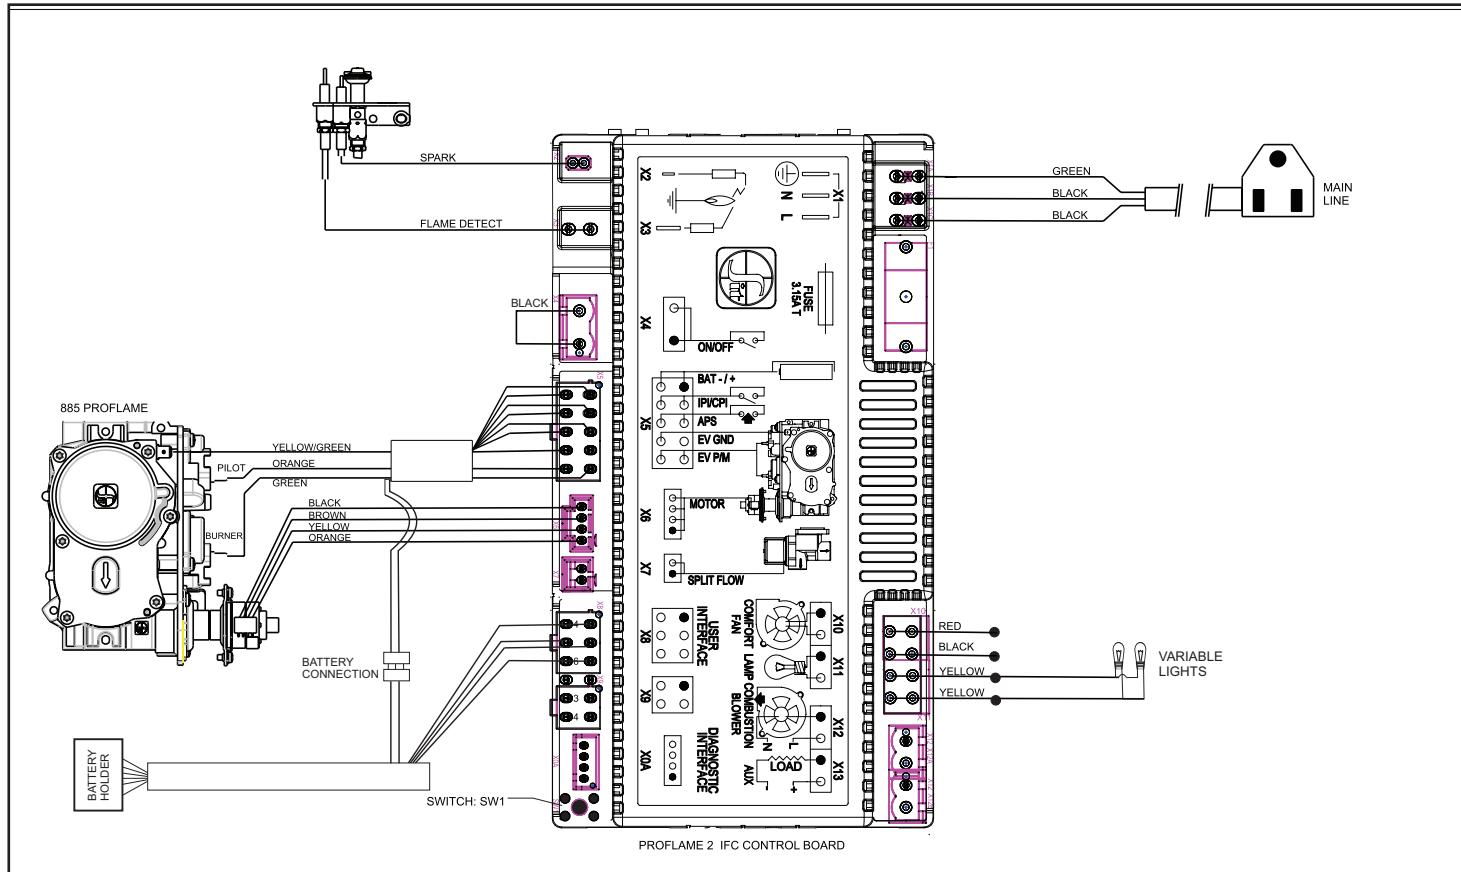

**CAUTION: Label all wires prior to disconnection when servicing controls.**

**Wiring errors can cause improper and dangerous operation.**

This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.