

MAINTENANCE

Parts List

570-961	GR77HP Valve Assembly-Natural Gas-SIT
580-961	GR78HP Valve Assembly - Propane - SIT
471-960	GR57HP Valve Assembly-Natural Gas-R.S.
481-960	GR58HP Valve Assembly - Propane - R.S.
471-960	GR57HL Valve Assembly-Natural Gas-R.S.
481-960	GR58HL Valve Assembly - Propane - R.S.

902-136	Front Log
902-132	Rear Log
902-134	Top Cross Log
846-302	Glass
846-515	Fan (Optional)