


# OPERATING INSTRUCTIONS

- 3) Wait five minutes to allow gas, that may have accumulated in the main burner compartment, to escape. If you do smell gas, follow the instructions on the front of this manual. If you don't smell gas continue on to the next step.
- 4) Turn the gas control counterclockwise to "PILOT".
- 5) Push in control knob all the way and hold in. Immediately push red button on spark igniter until pilot lights. Continue to hold the control knob in for approximately one minute, then release the gas control knob. The pilot flame should continue to burn. If the pilot does not remain lit, repeat operation allowing a longer period before releasing gas control knob.
- 6) Turn gas control knob counterclockwise to "ON".
- 7) Use rocker switch to operate main burner.
- 8) Rotate the flame height regulator to adjust the flame height higher or lower.

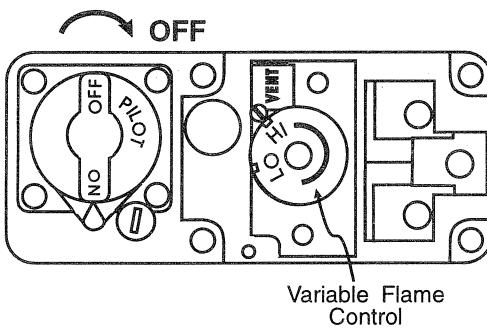

## Wiring Diagram - GR57H / GR58H

