

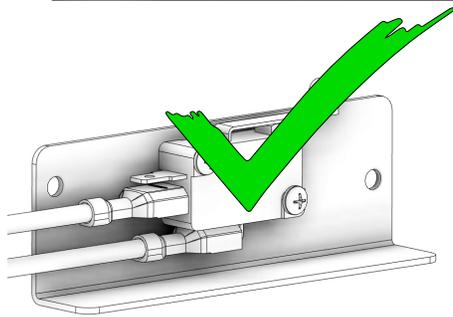


# US Stove 5780 Wiring Diagram

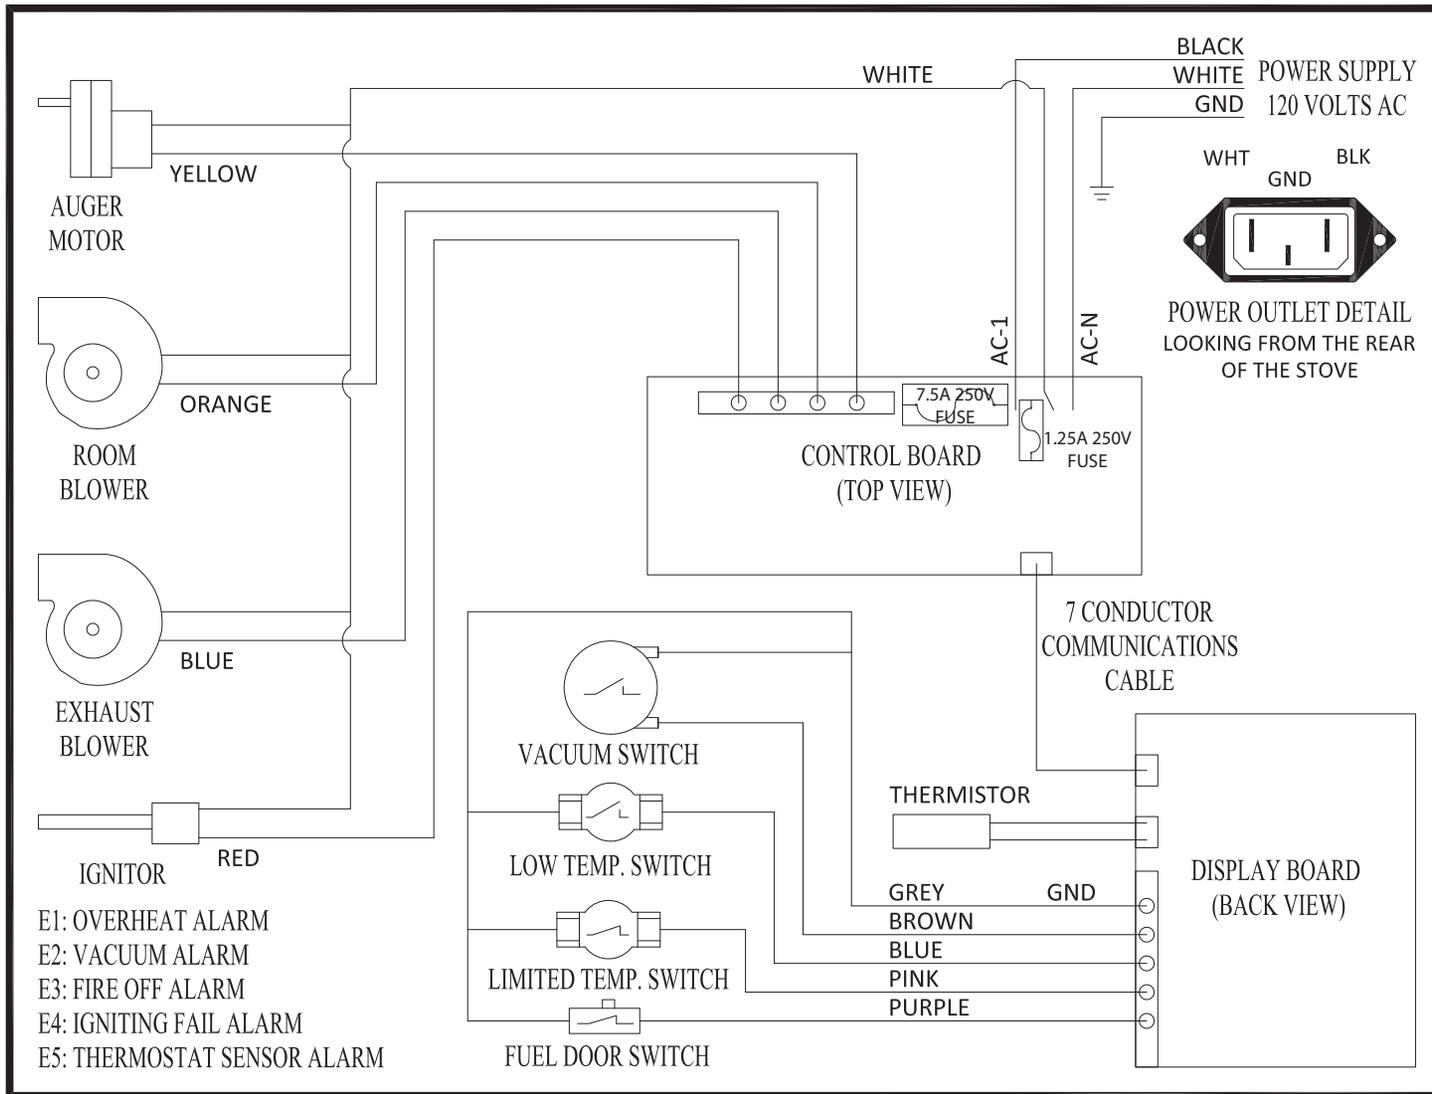

CORRECT

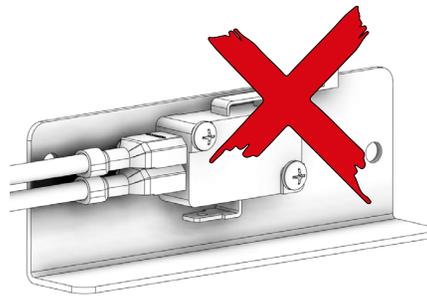

WRONG

Ensure the wires are connected to the bottom two prongs of the hopper switch as shown.