



**Panorama® P121 / P131  
Zero Clearance Direct Vent Gas Fireplace**

**Owners &  
Installation Manual**



| STYLE    | MODEL                 |                   |
|----------|-----------------------|-------------------|
| See Thru | P121-NG10 Natural Gas | P121-LP10 Propane |
| Pier     | P131-NG10 Natural Gas | P131-LP10 Propane |

**⚠ WARNING**  
**FIRE OR EXPLOSION HAZARD**  
Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS**
  - Do not try to light any appliance.
  - Do not touch any electrical switch: do not use any phone in your building. Leave the building immediately.
  - Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.



**Installer:** Please complete the details on the back cover and leave this manual with the homeowner.  
**Homeowner:** Please keep these instructions for future reference.

**To the New Owner:**

Congratulations!

You are the owner of a state-of-the-art Gas Fireplace by REGENCY®. The P121 / P131 is a hand crafted appliance and has been designed to provide you with all the warmth and charm of a wood fireplace at the flick of a switch. The model P121 / P131 has been approved by Intertek for both safety and efficiency. As it also bears our own mark, it promises to provide you with economy, comfort and security for many trouble free years to follow. Please take a moment now to acquaint yourself with these instructions and the many features of your Regency® Fireplace.

**IMPORTANT:** If the unit is to be installed into a bathroom, optional Neo ceramic glass (Part# 360-946 Front or Part# 360-948 Side) must be purchased and installed in place of the tempered glass supplied with the unit.



# DANGER



**HOT GLASS WILL  
CAUSE BURNS**

**DO NOT TOUCH GLASS  
UNTIL COOLED**

**NEVER ALLOW CHILDREN  
TO TOUCH GLASS**

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and shall be installed for the protection of children and other at risk individuals.

**CAUTION:**  
**HOT WHILE IN OPERATION. DO NOT TOUCH.**  
**SEVERE BURNS MAY RESULT. KEEP CHILDREN, CLOTHING, FURNITURE,  
 GASOLINE, AND ANY LIQUIDS WITH FLAMMABLE VAPOURS AWAY.**

**KEEP BURNER AND CONTROL COMPARTMENT CLEAN.**  
**SEE INSTALLATION AND OPERATING INSTRUCTIONS ACCOMPANYING  
 APPLIANCE.**

919-358

## MANUFACTURED MOBILE HOME REQUIREMENTS

### INFORMATION FOR MOBILE/MANUFACTURED HOMES AFTER FIRST SALE

This Regency® product has been tested and listed by Intertek as a Direct Vent Wall Furnace to the following standards: VENTED GAS FIREPLACE HEATERS CAN/CGA-2.17-M91, and ANSI Z21.88-2014 • CSA 2.33-2014. and GAS-FIRED APPLIANCES FOR USE AT HIGH ALTITUDES CAN/CGA 2.17-M91.

This Direct Vent System Appliance must be installed in accordance with the manufacturer's installation instructions and the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280, or the current Standard of Fire Safety Criteria for Manufactured Home Installations, Sites, and Communities ANSI/NFPA 501A, and with CAN/CSA Z240-MH Mobile Home Standard in Canada.

This appliance installation must comply with the manufacturer's installation instructions and local codes, if any. In the absence of local codes follow the current National Fuel Gas Code, ANSI Z223.1 and the current National Electrical Code ANSI/NFPA 70 in the U.S.A., and the current CAN/CGA B149 Gas Installation Code and the current Canadian Electrical Code CSA C22.1 in Canada.

This Regency® mobile/manufactured home listed appliance comes factory equipped with four 1/4" diameter holes located near each corner of the base. Fasten the fireplace in place using screw, inserted through the holes.

This appliance comes equipped with a dedicated #8 Ground Lug for attachment of the ground wire to the steel chassis as applicable to local codes. See the "Wiring Diagram" section.

The appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.1.

This appliance may only be installed in an aftermarket permanently located, manufactured (U.S.A only) or mobile home, where not prohibited by local codes.

This appliance can only be used with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless a certified kit is used.

Ensure that structural members are not cut or weakened during installation.



This appliance does not have the capability to adjust the fan speed using the supplied remote—even though the remote transmitter allows this function. The appliance fan is controlled by a fan speed controller (rheostat) or on/off switch depending on the model.

## 4 | table of contents

### Installation

|  |    |
|--|----|
| Important Message .....  | 9  |
| Save these instructions .....  | 9  |
| Before You Start.....  | 9  |
| General Safety Information.....                                      | 10 |
| Installation Checklist.....  | 10 |
| Locating Your Gas Fireplace.....                                     | 10 |
| Clearances .....   | 12 |
| Combustible Mantels .....  | 12 |
| Framing And Finishing.....   | 13 |
| Facing & Finishing Requirements.....                                 | 14 |
| Unit Assembly Prior To Installation .....                            | 14 |
| Venting Introduction.....  | 14 |
| Exterior Vent Termination Locations .....                            | 15 |
| 4" x 6-5/8" Rigid Pipe Cross Reference Chart .....                   | 16 |
| Venting Arrangement - Horizontal Terminations .....                  | 18 |
| Rigid Pipe Venting Systems.....                                      | 19 |
| Horizontal or Vertical Terminations .....                            | 19 |
| Rigid Pipe Venting Arrangements.....                                 | 20 |
| Horizontal Terminations .....  | 20 |
| Rigid Pipe Venting Arrangements - Vertical Terminations .....        | 22 |
| Horizontal terminations.....   | 24 |
| Vertical Terminations .....  | 25 |
| Installation Procedures .....  | 26 |
| Vertical Termination .....   | 27 |
| 4" x 6-5/8" venting .....  | 27 |
| Flex vent components.....  | 27 |
| Unit installation with Vertical Termination 4" x 6-5/8" venting..... | 27 |
| Flex vent components.....  | 28 |
| Conversion From NG To LP .....                                       | 29 |
| High Elevation.....  | 30 |
| Gas Line Installation.....   | 30 |
| Pilot Adjustment.....  | 30 |
| Gas Pipe Pressure Testing .....                                      | 30 |
| Wall mount On / Off Switch and remote receiver installation.....     | 31 |
| Log Set Installation.....  | 32 |
| Safety screen Removal.....   | 34 |
| Glass Door Removal.....  | 35 |
| Finishing Trim.....  | 35 |
| Louvers & Grills .....   | 35 |
| Wall Thermostat (Optional).....                                      | 36 |
| DC Spark Igniter .....   | 36 |
| Battery Installation.....  | 36 |
| Wiring Diagrams .....  | 37 |

### Operating Instructions

|   |    |
|---|----|
| Operating Instructions .....                    | 38 |
| Lighting Procedure .....                        | 38 |
| Shutdown Procedure .....                        | 38 |
| Aeration Adjustment .....                       | 38 |
| Copy of The Lighting Plate Instructions .....   | 39 |
| First Fire .....                                | 40 |
| Normal Operating Sounds Of Gas Appliances ..... | 40 |

### Maintenance

|                                |    |
|--------------------------------|----|
| Maintenance Instructions ..... | 41 |
| Log Replacement .....          | 41 |
| Thermopile / Thermocouple..... | 41 |
| Door Glass.....                | 41 |
| Removing Valve .....           | 42 |
| Installing Valve.....          | 43 |
| Fan Replacement .....          | 43 |
| Gas Appliance Maintenance..... | 44 |

### Parts

|  |    |
|--|----|
| P121-10 (See Thru) Main Assembly.....          | 45 |
| P131-10 (Pier) Main Assembly.....              | 46 |
| P121-10/p131-10 Burner Assembly & Log Set..... | 47 |

### Warranty

|                |    |
|----------------|----|
| Warranty ..... | 48 |
|----------------|----|

This is a copy of the label that accompanies each P121-10/P131-10 Zero Clearance Direct Vent Gas Fireplace. We have printed a copy of the contents here for your review. The safety label is located on the front inside base of the unit, visible when the bottom louver is open.

NOTE: Regency® units are constantly being improved. Check the label on the unit and if there is a difference, the label on the unit is the correct one.

**Copy of Safety Decal for P121/P131**

|   |  |   |   |   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
|---|--|---|---|---|----|------------|----------------------------------|------------------------|------|----|------------|---------------------------|-----------------------|------|----|------------|---------------------------|--------------|------|-----|--|---------------------|---------------|--------|-------|-----------|---------------------------|---------------|--------|-------|------------|---------------------------------|----------|--------|-------|------------|------------|
| <b>Duplicate S/N</b>  |  | 304   |   |   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
|    | <p><b>Listed:</b> VENTED GAS FIREPLACE HEATER/FOYER AU GAZ À ÉVACUATION<br/> <b>Certified to/Certifié pour :</b> CSA 2.17-2017 / ANSI Z21.88-2017 / CSA 2.33-2017<br/> <b>MAY BE INSTALLED IN MANUFACTURED (MOBILE) HOMES AFTER FIRST SALE.</b><br/>                 Refer to Intertek's Directory of Building Products for detailed information.<br/>                 Pour plus de détails, se reporter au Répertoire des produits de construction de Intertek.</p> | <p><b>DO NOT REMOVE THIS LABEL / NE PAS ENLEVER CETTE ÉTIQUETTE</b></p> <p style="text-align: right;">Serial No./ No de série</p> <div style="border: 1px solid black; padding: 2px; text-align: center;">304</div>   |   |   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| <p><b>NATURAL GAS: Model/Modèle : P121-NG10/ P131-NG10 APPAREIL FONCTIONNANT AU GAZ NATUREL</b></p> <table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">Minimum supply pressure</td> <td style="width: 10%;">5"</td> <td style="width: 10%;">WC</td> <td style="width: 10%;">(1.25 kPa)</td> <td style="width: 40%;">Pression d'alimentation minimale</td> </tr> <tr> <td>Manifold pressure high</td> <td>3.8"</td> <td>WC</td> <td>(0.95 kPa)</td> <td>Pression manifold - haute</td> </tr> <tr> <td>Manifold pressure low</td> <td>1.1"</td> <td>WC</td> <td>(0.27 kPa)</td> <td>Pression manifold - basse</td> </tr> <tr> <td>Orifice size</td> <td># 31</td> <td>DMS</td> <td></td> <td>Taille de l'orifice</td> </tr> <tr> <td>Minimum input</td> <td>20,500</td> <td>Btu/h</td> <td>(6.01 kW)</td> <td>Débit calorifique minimal</td> </tr> <tr> <td>Maximum input</td> <td>40,000</td> <td>Btu/h</td> <td>(11.72 kW)</td> <td>Débit calorifique maximal selon</td> </tr> <tr> <td>Altitude</td> <td>0-4500</td> <td>ft/pi</td> <td>(0-1372 m)</td> <td>l'altitude</td> </tr> </table> |  |   | Minimum supply pressure   | 5"  | WC | (1.25 kPa) | Pression d'alimentation minimale | Manifold pressure high | 3.8" | WC | (0.95 kPa) | Pression manifold - haute | Manifold pressure low | 1.1" | WC | (0.27 kPa) | Pression manifold - basse | Orifice size | # 31 | DMS |  | Taille de l'orifice | Minimum input | 20,500 | Btu/h | (6.01 kW) | Débit calorifique minimal | Maximum input | 40,000 | Btu/h | (11.72 kW) | Débit calorifique maximal selon | Altitude | 0-4500 | ft/pi | (0-1372 m) | l'altitude |
| Minimum supply pressure   | 5"   | WC  | (1.25 kPa)  | Pression d'alimentation minimale  |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Manifold pressure high  | 3.8"   | WC  | (0.95 kPa)  | Pression manifold - haute   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Manifold pressure low   | 1.1"   | WC  | (0.27 kPa)  | Pression manifold - basse   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Orifice size  | # 31   | DMS   |   | Taille de l'orifice   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Minimum input   | 20,500   | Btu/h   | (6.01 kW)   | Débit calorifique minimal   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Maximum input   | 40,000   | Btu/h   | (11.72 kW)  | Débit calorifique maximal selon   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Altitude  | 0-4500   | ft/pi   | (0-1372 m)  | l'altitude  |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| <p><b>PROPANE: Model/Modèle : P121-LP10/ P131-LP10 APPAREIL FONCTIONNANT AU GAZ PROPANE</b></p> <table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">Minimum supply pressure</td> <td style="width: 10%;">12"</td> <td style="width: 10%;">WC</td> <td style="width: 10%;">(3.00 kPa)</td> <td style="width: 40%;">Pression d'alimentation minimale</td> </tr> <tr> <td>Manifold pressure high</td> <td>11"</td> <td>WC</td> <td>(2.74 kPa)</td> <td>Pression manifold - haute</td> </tr> <tr> <td>Manifold pressure low</td> <td>2.9"</td> <td>WC</td> <td>(0.72 kPa)</td> <td>Pression manifold - basse</td> </tr> <tr> <td>Orifice size</td> <td># 50</td> <td>DMS</td> <td></td> <td>Taille de l'orifice</td> </tr> <tr> <td>Minimum input</td> <td>20,600</td> <td>Btu/h</td> <td>(6.04 kW)</td> <td>Débit calorifique minimal</td> </tr> <tr> <td>Maximum input</td> <td>39,000</td> <td>Btu/h</td> <td>(11.43 kW)</td> <td>Débit calorifique maximal selon</td> </tr> <tr> <td>Altitude</td> <td>0-4500</td> <td>ft/pi</td> <td>(0-1372 m)</td> <td>l'altitude</td> </tr> </table>     |  |   | Minimum supply pressure   | 12"   | WC | (3.00 kPa) | Pression d'alimentation minimale | Manifold pressure high | 11"  | WC | (2.74 kPa) | Pression manifold - haute | Manifold pressure low | 2.9" | WC | (0.72 kPa) | Pression manifold - basse | Orifice size | # 50 | DMS |  | Taille de l'orifice | Minimum input | 20,600 | Btu/h | (6.04 kW) | Débit calorifique minimal | Maximum input | 39,000 | Btu/h | (11.43 kW) | Débit calorifique maximal selon | Altitude | 0-4500 | ft/pi | (0-1372 m) | l'altitude |
| Minimum supply pressure   | 12"  | WC  | (3.00 kPa)  | Pression d'alimentation minimale  |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Manifold pressure high  | 11"  | WC  | (2.74 kPa)  | Pression manifold - haute   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Manifold pressure low   | 2.9"   | WC  | (0.72 kPa)  | Pression manifold - basse   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Orifice size  | # 50   | DMS   |   | Taille de l'orifice   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Minimum input   | 20,600   | Btu/h   | (6.04 kW)   | Débit calorifique minimal   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Maximum input   | 39,000   | Btu/h   | (11.43 kW)  | Débit calorifique maximal selon   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| Altitude  | 0-4500   | ft/pi   | (0-1372 m)  | l'altitude  |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| <p><b>Minimum Clearances to Combustibles / Dégagements minimaux des matériaux combustibles</b></p> <table border="0" style="width: 100%;"> <tr> <td style="width: 50%;"> <b>0" Clearance to combustibles from:</b> Top, bottom, sides &amp; rear of unit<br/> <b>Mantel Height from Base of Unit:</b> Min. 39" (991mm)<br/> <b>Side Wall Clearance from Side Facing 0" (0mm)</b><br/>                 (See Instruction Manual for Detailed Instructions)             </td> <td style="width: 50%; vertical-align: top;"> <b>Minimum Vent Clearances:</b><br/>                 Horizontal Top 2-1/2" (64mm)<br/>                 Horizontal Side 1-1/2" (38mm)<br/>                 Horizontal Bottom 1-1/2" (38mm)             </td> </tr> </table> <p style="text-align: center;"><b>DOOR SEAL: Please check that the door is properly sealed</b></p>  |  |   | <b>0" Clearance to combustibles from:</b> Top, bottom, sides & rear of unit<br><b>Mantel Height from Base of Unit:</b> Min. 39" (991mm)<br><b>Side Wall Clearance from Side Facing 0" (0mm)</b><br>(See Instruction Manual for Detailed Instructions) | <b>Minimum Vent Clearances:</b><br>Horizontal Top 2-1/2" (64mm)<br>Horizontal Side 1-1/2" (38mm)<br>Horizontal Bottom 1-1/2" (38mm) |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| <b>0" Clearance to combustibles from:</b> Top, bottom, sides & rear of unit<br><b>Mantel Height from Base of Unit:</b> Min. 39" (991mm)<br><b>Side Wall Clearance from Side Facing 0" (0mm)</b><br>(See Instruction Manual for Detailed Instructions)   | <b>Minimum Vent Clearances:</b><br>Horizontal Top 2-1/2" (64mm)<br>Horizontal Side 1-1/2" (38mm)<br>Horizontal Bottom 1-1/2" (38mm)  |   |   |   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| <p><b>VENTED GAS FIREPLACE HEATER - NOT FOR USE WITH SOLID FUELS. / FOYER AU GAZ À ÉVACUATION - NE PAS UTILISER AVEC UN COMBUSTIBLE SOLIDE.</b></p>   |  |   |   |   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
| <p><b>Model/Modèle :</b> <span style="border: 1px solid red; border-radius: 50%; padding: 2px;">○</span> P121-NG10 <span style="border: 1px solid red; border-radius: 50%; padding: 2px;">○</span> P131-NG10 <span style="border: 1px solid red; border-radius: 50%; padding: 2px;">○</span> P121-LP10 <span style="border: 1px solid red; border-radius: 50%; padding: 2px;">○</span> P131-LP10</p>  |  |   |   |   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |
|   |  | <p>This appliance must be installed in accordance with local codes, if any; if none, follow the National Fuel Gas Code, ANSI Z223.1, or Natural Gas and Propane Installation Code, CSA B149.1.<br/>                 This appliance must be installed in accordance with the Standard CAN/CSA Z240 MH, Mobile Housing, in Canada, or with the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280, in the United States, or when such a standard is not applicable, ANSI/NCSBSC A225.1/NFPA 501A, Manufactured Home Installations Standard or ANSI A119.2 ou NFPA 501C Standard for Recreational Vehicles<br/>                 This appliance is only for use with the type of gas indicated on the rating plate and may be installed in an aftermarket, permanently located, manufactured (mobile) home where not prohibited by local codes. See owner's manual for details. Optional Fan (Part # 910-171)<br/>                 Installer l'appareil selon les codes ou règlements locaux, ou, en l'absence de tels règlements, selon les codes d'installation ANSI Z223.1, National Fuel Gas Code ou CSA-B149.1 en vigueur.<br/>                 Installer l'appareil selon la norme CAN/CSA-Z240, Série MM, Maison mobiles ou CAN/CSA-Z240 VC, Véhicules de camping, ou la norme 24 CFR Part 3280, Manufactured Home Construction and Safety Standard. Si ces normes ne sont pas pertinentes, utilisez la norme ANSI/NCSBSC A225.1/NFPA 501A, Manufactured Home Installations Standard, ou ANSI A119.2 ou NFPA 501C Standard for Recreational Vehicles.<br/>                 Cet appareil doit être utilisé uniquement avec le type de gaz indiqué sur la plaque signalétique. Cet appareil peut être installé dans une maison préfabriquée ou mobile (É.-U. seulement) installée à demeure si les règlements locaux le permettent. Voir la notice de l'utilisateur pour plus de renseignements. Cet appareil ne peut pas être utilisé avec d'autres gaz sauf si une trousse de conversion certifiée est fournie.<br/> <b>This vented gas fireplace heater is not for use with air filters.</b><br/> <b>Ne pas utiliser de filtre à air avec ce foyer au gaz à évacuation.</b><br/>                 For use with glass doors certified with the appliance only.<br/>                 À utiliser uniquement avec les portes en verre certifiées avec l'appareil.<br/> <b>For Use Only with Barrier (Part #363-000) Follow installation instructions.</b><br/> <b>À utiliser uniquement avec un pare-feu (pièce n° 363-000)</b><br/> <b>Suivre les instructions d'installation.</b><br/>                 ELECTRICAL SUPPLY/ALIMENTATION ÉLECTRIQUE:<br/>                 115V 60HZ less than/moins de 2 AMP<br/>                 Made In Canada/ Fabriqué au Canada <span style="float: right;">919-497a</span></p> |   |   |    |            |                                  |                        |      |    |            |                           |                       |      |    |            |                           |              |      |     |  |                     |               |        |       |           |                           |               |        |       |            |                                 |          |        |       |            |            |

For the State of Massachusetts, installation and repair must be done by a plumber or gasfitter licensed in the Commonwealth of Massachusetts.

For the State of Massachusetts, flexible connectors shall not exceed 36 inches in length.

For the State of Massachusetts, the appliances individual manual shut-off must be a t-handle type valve.

The State of Massachusetts requires the installation of a carbon monoxide alarm in accordance with NFPA 720 and a CO alarm with battery back up in the same room where the gas appliance is installed.

## 6 | requirements

### MA Code - CO Detector (for the State of Massachusetts only)

#### 5.08: Modifications to NFPA-54, Chapter 10

(2) Revise 10.8.3 by adding the following additional requirements:

(a) For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

1. **INSTALLATION OF CARBON MONOXIDE DETECTORS.** At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gasfitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors

a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.

b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.

2. **APPROVED CARBON MONOXIDE DETECTORS.** Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

3. **SIGNAGE.** A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "**GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS**".

4. **INSPECTION.** The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a)1 through 4.

(b) **EXEMPTIONS:** The following equipment is exempt from 248 CMR 5.08(2)(a)1 through 4:

1. The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and

2. Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

(c) **MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM PROVIDED.** When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:

1. Detailed instructions for the installation of the venting system design or the venting system components; and

2. A complete parts list for the venting system design or venting system.





(d) **MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM NOT PROVIDED.** When the manufacturer of a Product Approved side wall horizontally vented gas fueled equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:

1. The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and

2. The "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.

(e) A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.


**P121-10 See Thru**

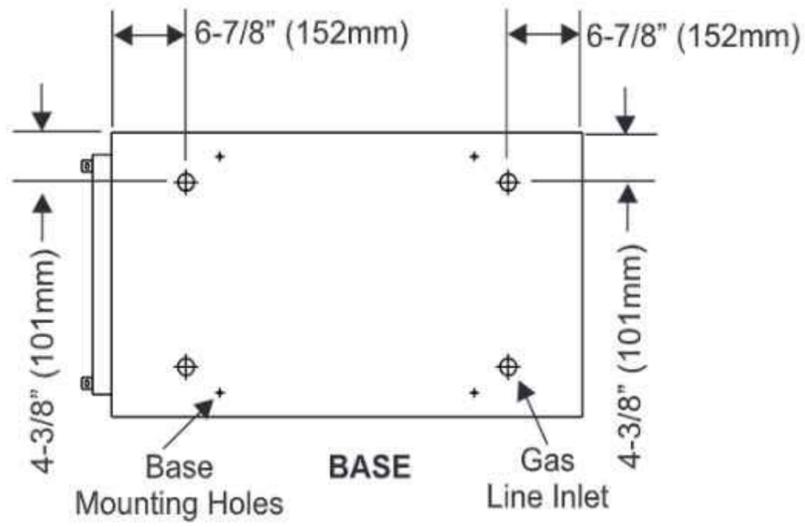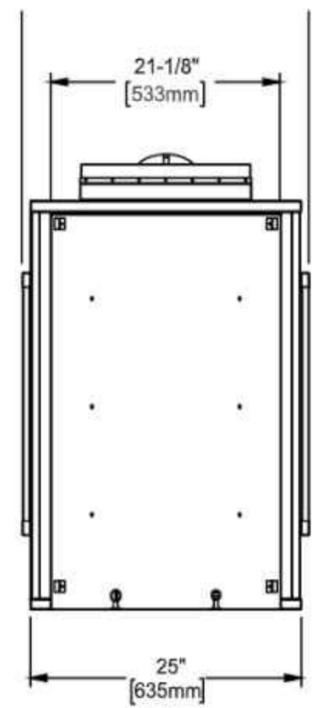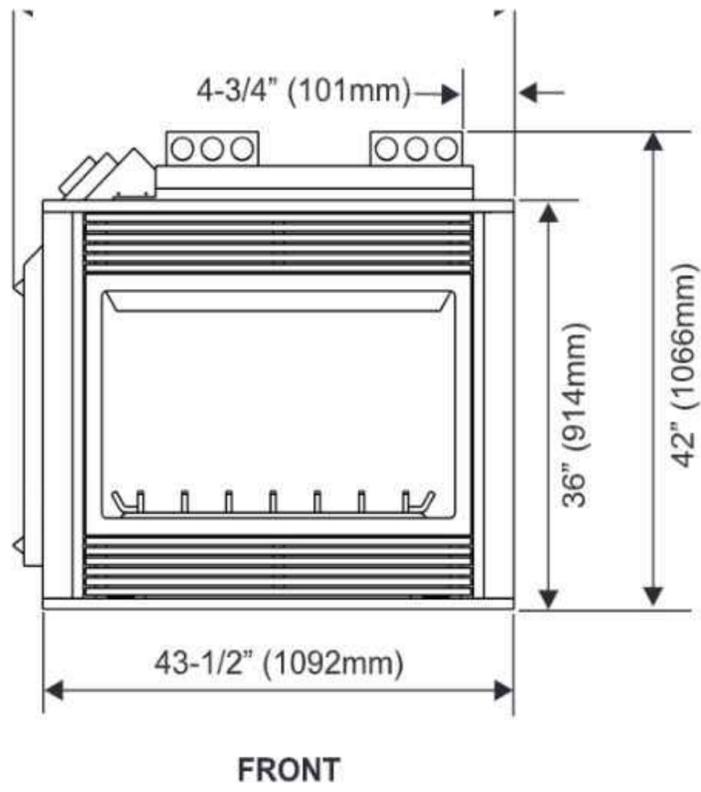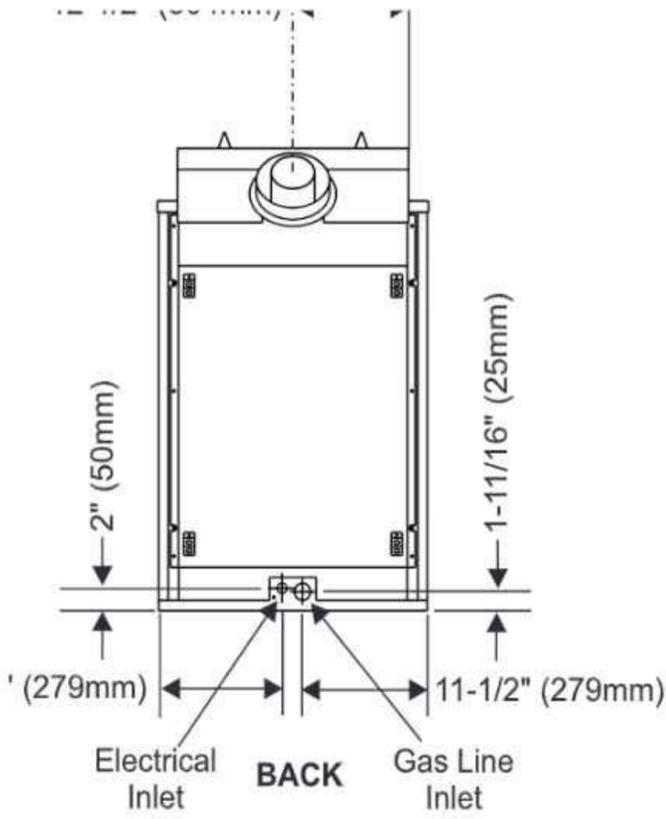

**Note: These units are non-load bearing.**

# 8 | dimensions

## P131-10 Pier

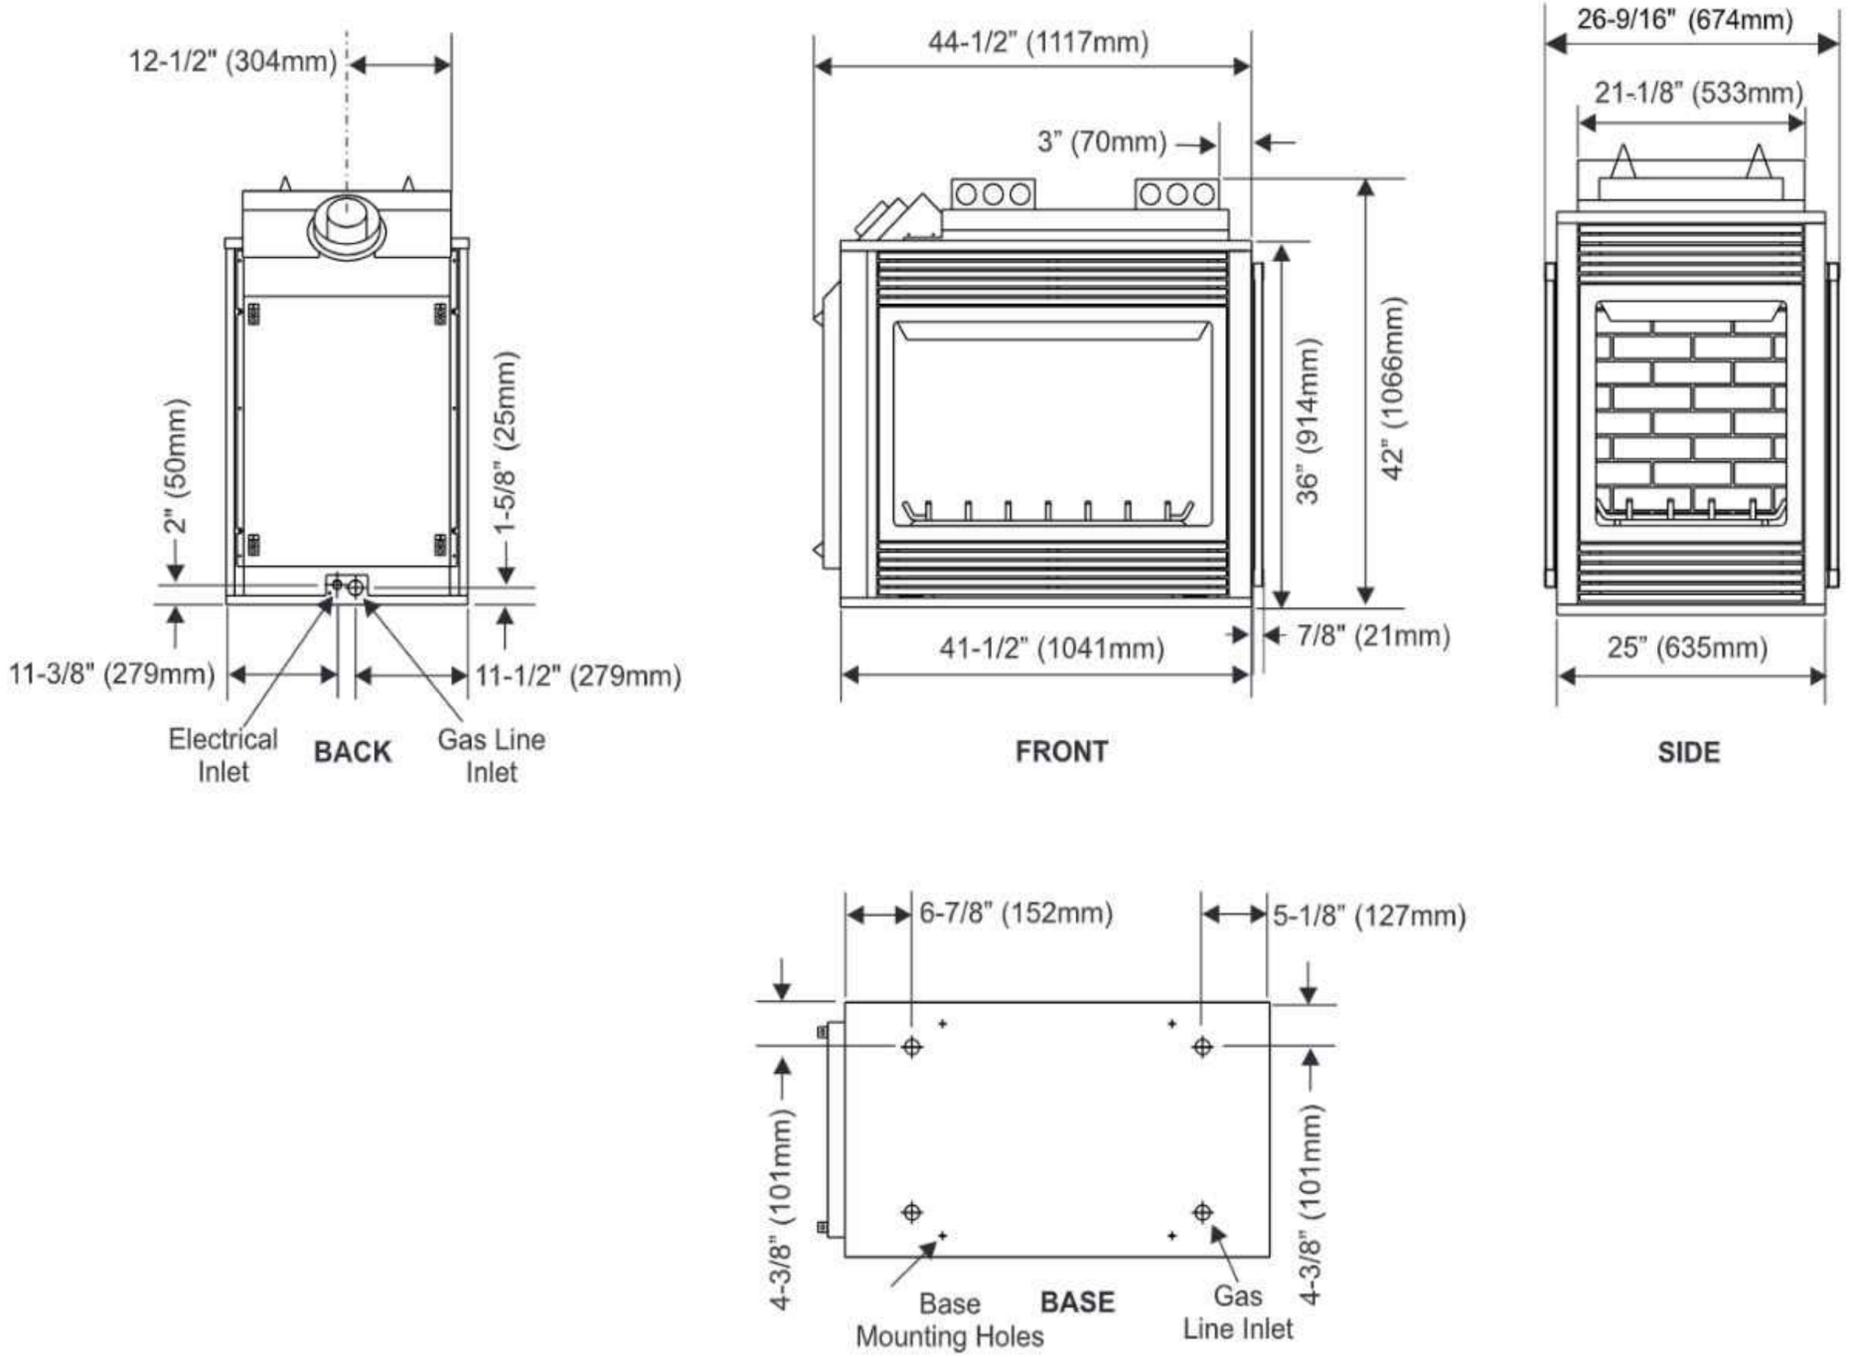

**Note: These units are non-load bearing.**

## IMPORTANT MESSAGE SAVE THESE INSTRUCTIONS

The Panorama P121/P131-NG10 or P121/P131-LP10 Direct Vent Fireplace must be installed in accordance with these instructions. Carefully read all the instructions in this manual first. Consult the "authority having jurisdiction" to determine the need for a permit prior to starting the installation. It is the responsibility of the installer to ensure this fireplace is installed in compliance with manufacturer's instructions and all applicable codes.


### BEFORE YOU START

Safe installation and operation of this appliance requires common sense, however, we are required by the Canadian Safety Standards and ANSI Standards to make you aware of the following:

**INSTALLATION AND REPAIR SHOULD BE DONE BY AN AUTHORIZED SERVICE PERSON. THE APPLIANCE SHOULD BE INSPECTED BEFORE USE AND AT LEAST ANNUALLY BY A PROFESSIONAL SERVICE PERSON. MORE FREQUENT CLEANING MAY BE REQUIRED DUE TO EXCESSIVE LINT FROM CARPETING, BEDDING MATERIAL, ETC. IT IS IMPERATIVE THAT CONTROL COMPARTMENTS, BURNERS AND CIRCULATING AIR PASSAGEWAYS OF THE APPLIANCE BE KEPT CLEAN.**

**DUE TO HIGH TEMPERATURES, THE APPLIANCE SHOULD BE LOCATED OUT OF TRAFFIC AND AWAY FROM FURNITURE AND DRAPERIES.**

**WARNING: FAILURE TO INSTALL THIS APPLIANCE CORRECTLY WILL VOID YOUR WARRANTY AND MAY CAUSE A SERIOUS HOUSE FIRE.**

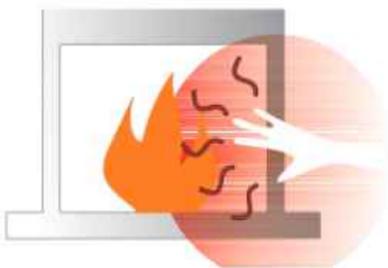

**CHILDREN AND ADULTS SHOULD BE ALERTED TO THE HAZARDS OF HIGH SURFACE TEMPERATURES, ESPECIALLY THE FIREPLACE GLASS, AND SHOULD STAY AWAY TO AVOID BURNS OR CLOTHING IGNITION.**

**YOUNG CHILDREN SHOULD BE CAREFULLY SUPERVISED WHEN THEY ARE IN THE SAME AREA AS THE APPLIANCE. TODDLERS, YOUNG CHILDREN AND OTHERS MAY BE SUSCEPTIBLE TO ACCIDENTAL CONTACT BURNS. A PHYSICAL BARRIER IS RECOMMENDED IF THERE ARE AT RISK INDIVIDUALS IN THE HOUSE. TO RESTRICT ACCESS TO A FIREPLACE OR STOVE, INSTALL AN ADJUSTABLE SAFETY GATE TO KEEP TODDLERS, YOUNG CHILDREN AND OTHER AT RISK INDIVIDUALS OUT OF THE ROOM AND AWAY FROM HOT SURFACES.**

**CLOTHING OR OTHER FLAMMABLE MATERIAL SHOULD NOT BE PLACED ON OR NEAR THE APPLIANCE.**

**A BARRIER DESIGNED TO REDUCE THE RISK OF BURNS FROM THE HOT VIEWING GLASS IS PROVIDED WITH THIS APPLIANCE AND SHALL BE INSTALLED FOR THE PROTECTION OF CHILDREN AND OTHER AT-RISK INDIVIDUALS**

**ANY SAFETY SCREEN, GUARD, OR BARRIER REMOVED FOR SERVICING THE APPLIANCE, MUST BE REPLACED PRIOR TO OPERATING THE APPLIANCE.**

**IF THE BARRIER BECOMES DAMAGED, THE BARRIER SHALL BE REPLACED WITH THE MANUFACTURER'S BARRIER FOR THIS APPLIANCE.**

 **WARNING: Cancer and Reproductive Harm**  
www.P65Warnings.ca.gov

819-874

## 10 | installation

### GENERAL SAFETY INFORMATION

- 1) The appliance installation must conform with local codes or, in the absence of local codes, with the current Canadian or National Gas Codes, CAN1-B149 or ANSI Z223.1 Installation Codes.
- 2) See general construction and assembly instructions. The appliance and vent should be enclosed.
- 3) This appliance must be connected to the specified vent and termination cap to the outside of the building envelope. Never vent to another room or inside a building. Make sure that the vent is fitted as per Venting instructions.
- 4) Inspect the venting system annually for blockage and any signs of deterioration.
- 5) Venting terminals shall not be recessed into a wall or siding.
- 6) Any safety glass removed for servicing must be replaced prior to operating the appliance.
- 7) To prevent injury, do not allow anyone who is unfamiliar with the operation to use the fireplace.
- 8) Wear gloves and safety glasses for protection while doing required maintenance.
- 9) Be aware of electrical wiring locations in walls and ceilings when cutting holes for termination.
- 10) Under no circumstances should this appliance be modified. Parts that have to be removed for servicing should be replaced prior to operating this appliance.
- 11) Installation and any repairs to this appliance should be done by a qualified service person. A professional service person should be called to inspect this appliance annually. Make it a practice to have all of your gas appliances checked annually.
- 12) Do not slam shut or strike the glass door.
- 13) Under no circumstances should any solid fuels (wood, paper, cardboard, coal, etc.) be used in this appliance.
- 14) The appliance area must be kept clear and free of combustible materials, (gases and other flammable vapours and liquids).

Emissions from burning wood or gas could contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

### INSTALLATION CHECKLIST

**Note: These units are non-load bearing.**

- 1) Locate appliance. Refer to the following sections:
  - a) Locating Your Fireplace
  - b) Clearances
  - c) Combustible Mantel Clearances
  - d) Framing & Finishing
  - e) Venting. See the "Venting Introduction" to "Venting Arrangements" sections.
- 2) Assemble Top Standoffs. Refer to the "Unit Assembly Prior to Installation" section. (NOTE: must be done before installing unit into fireplace.)
- 3) Install vent. See the "Horizontal Installations" to "Installation Procedures" sections.
- 4) Install 4AA batteries into receiver. Hook receiver to wire marked receiver, this will enable operation of the appliance manually when position in "ON" position.
- 5) Make gas connections. Test the pilot. Must be as per diagram. Refer to the "Gas Line Installation" & "Pilot Adjustment" sections.
- 6) Install standard and optional features. Refer to the following sections where applicable:
  - a. Log Set
  - b. Glass Door
  - c. Finishing Trim
  - d. Louvers & Grills
  - e. Remote Control
  - f. Wall Receiver
  - g. Wall Thermostat
  - h. Safety Screen
- 7) Final check.

Before leaving this unit with the customer, the installer must ensure that the appliance is firing correctly and operation fully explained to customer.

This includes:

- 1) Clocking the appliance to ensure the correct firing rate (rate noted on label 40,000 Btu/h NG, and 39,000 Btu/h LP) after burning appliance for 15 minutes.
- 2) If required, adjusting the primary air to ensure that the flame does not carbon. First allow the unit to burn for 15-20 min. to stabilize.

**CAUTION: Any alteration to the product that causes sooting or carboning that results in damage is not the responsibility of the manufacturer.**

## LOCATING YOUR GAS FIREPLACE

- 1) When selecting a location for your fireplace, ensure that the clearances are met as outlined in the "Clearances" section.
- 2) Provide adequate clearances for servicing.
- 3) The appliance must be installed on a flat, solid, continuous surface (e.g. wood, metal, concrete). This may be the floor, or raised up on a platform to enhance its visual impact. If the appliance is going to be installed on carpeting, combustible linoleum tile or other combustible material other than wood flooring, the appliance must be installed on a metal or wood panel extending the full width and depth of the appliance.


- 4) The Direct Vent Gas Fireplace can be installed as follows:

|    | Model #  | Position |
|----|----------|----------|
| A) | P121-10: | See Thru |
| B) | P131-10: | Pier     |


- 5) This appliance is Listed for bedroom installations when used with a Listed Millivolt Thermostat. Some areas may have further requirements, check local codes before installation.
- 6) The P121-10/P131-10 Direct Vent Gas Fireplace is approved for alcove installations, which meet the clearances listed on this page.
- 7) We recommend that you plan your installation on paper using exact measurements for clearances and floor protection before actually installing this appliance. Have a qualified inspector, dealer, or installer review your plans before installation.

**Note: For Exterior Vent Termination Locations see section "Exterior Vent Termination Locations."**

### A) P121-10 See Thru

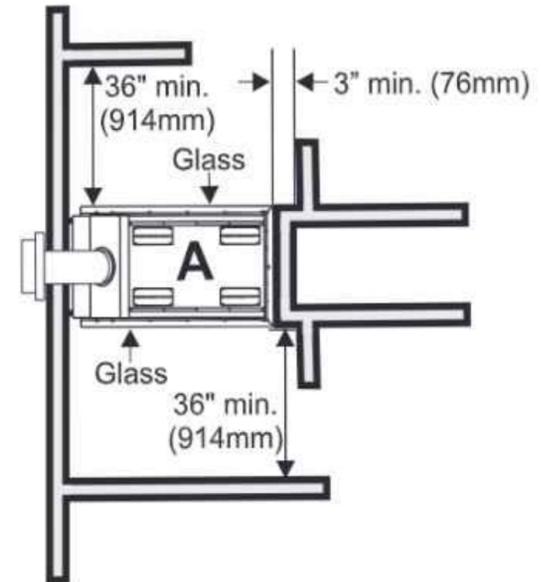

### B) P131-10 Pier

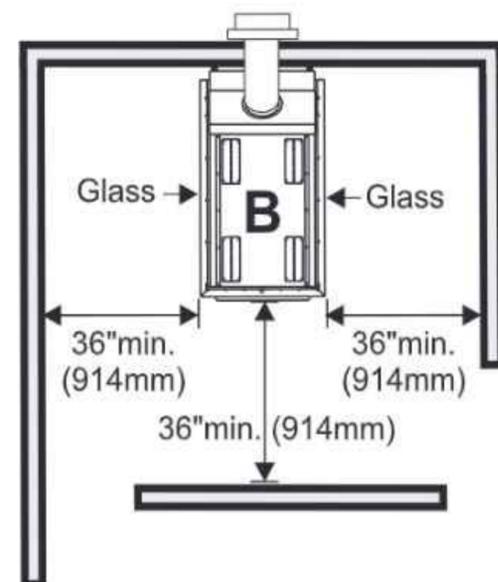

# 12 | installation

## CLEARANCES

The clearances listed below are Minimum distances unless otherwise stated (refer to diagrams in the "Locating Your Fireplace" section):

**Clearance to Combustibles from:**

|       |    |       |
|-------|----|-------|
| Back  | 0" | (0mm) |
| Side  | 0" | (0mm) |
| Floor | 0" | (0mm) |

**CAUTION REQUIREMENTS:** The top, back and sides of the fireplace are defined by standoffs. The metal ends of the standoffs may **NOT** be recessed into combustible construction.

Determine the total thickness of the finished floor (eg. tile, carpet, slate) to allow the finished surface to be flush with the base of the unit.

Ceiling Height from Floor 72" (1829mm)

Mantel Height from Base of Unit:  
39" min. (991mm)

**Horizontal Vent Clearances:**

|        |        |        |
|--------|--------|--------|
| Top    | 2-1/2" | (64mm) |
| Side   | 1-1/2" | (38mm) |
| Bottom | 1-1/2" | (38mm) |

Vertical Vent Clearances 1-1/4" (32mm)

**WARNING:**  
Fire hazard is an extreme risk if these clearances (air space) to combustible materials are not adhered to. It is of greatest importance that this fireplace and vent system be installed only in accordance with these instructions.

## COMBUSTIBLE MANTELS


Because of the extreme heat this fireplace emits, the mantel clearances are critical. Combustible mantel clearances from top of unit are shown in Diagram to the right.

**Note:** A non-combustible mantel may be installed at a lower height if the framing is made of metal studs covered with a non-combustible board.

This drawing is to scale at 1:6 (one inch = 6 inches)  
Mantel can be installed anywhere in shaded area or higher using this scale.

**Caution:** Ensure the paint that is used on the mantel and the facing is "heat resistant" or the paint may discolour.

\* If the 3" (76mm) metal extension trim is removed it must be replaced with a 8" (203mm) non-combustible material.

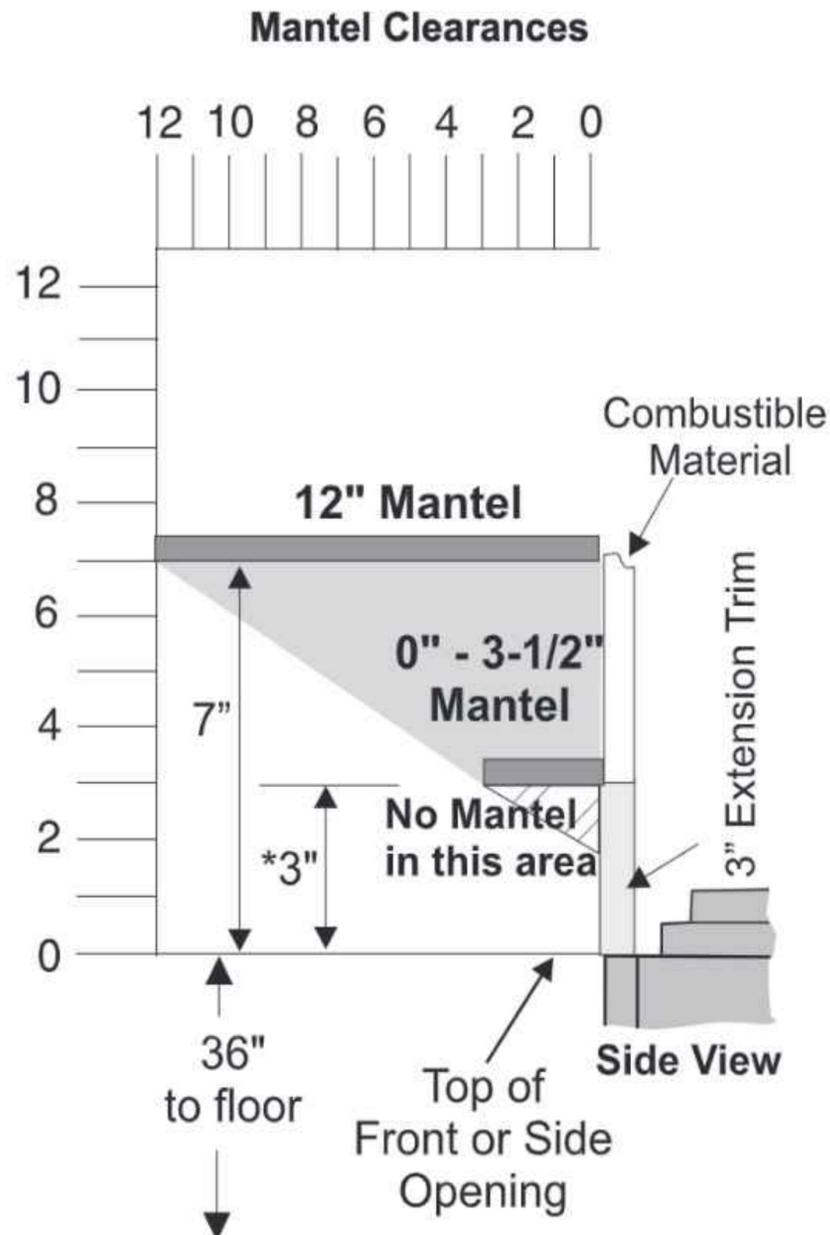

## FRAMING AND FINISHING


1) For ease of installation, frame your fireplace after it is positioned and the vent system is installed. Remember to install the top standoffs. See the "Unit Assembly Prior to Installation" section. Use 2x4's and frame to local building codes.

**CAUTION:** Verify your fireplace dimensions, framing methods and finished wall facing details before framing. Determine the total thickness of facing material - drywall plus ceramic tiles, slate, etc. Allow the finish surface to be flush with the front or side of the unit. Total facing thickness can vary from 1/2" (13mm) to 1-1/4" (32mm) thick.

2) When locating your appliance on an exterior wall or in a chase, apply a vapour barrier and drywall, as per local building codes. **DO NOT INSULATE THE FIREPLACE ITSELF.**


**CAUTION:** The unit does not have to be completely enclosed in a chase. The clearance on top of the unit is 0" to the standoffs so combustible building materials can be laid directly on top of the standoffs. You must maintain clearance from the vent to combustible materials for both rigid and flex, see Vent Clearances in the "Clearances" section.

### P121-10 - See Thru

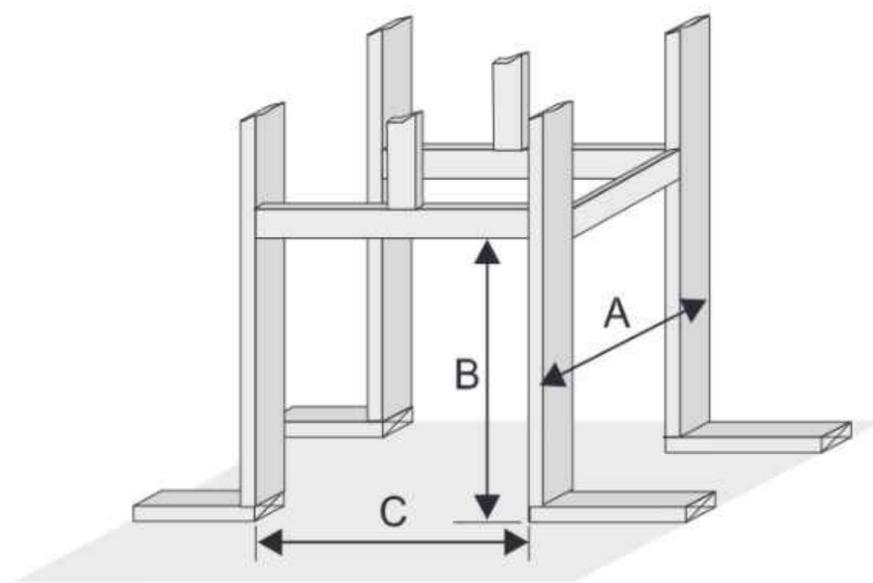

| Framing Dimensions  |  |
|---|--|
| P121-10 (See Thru)  | P131-10 (Pier)   |
| <b>A</b> 25"(635mm) minus 2X the finishing material thickness*  | <b>A</b> 25"(635mm) minus 2X the finishing material thickness*   |
| <b>B</b> 42-1/2"(1080mm)  | <b>B</b> 42-1/2"(1080mm)   |
| <b>C</b> 46-3/4"(1187mm)  | <b>C</b> 45" (1143mm) minus 1X the finishing material thickness* |
| * Finish material thickness includes: drywall, ceramic tile, slate, etc.  |  |
| P121 only: The appliance extends 2-3/4" inches further on the vent side. If trying to center the appliance in a room add 2-3/4" to the non vent side when framing. Do not however change dimension (C) as the opening remains the same. |  |


### P131-10 - Pier

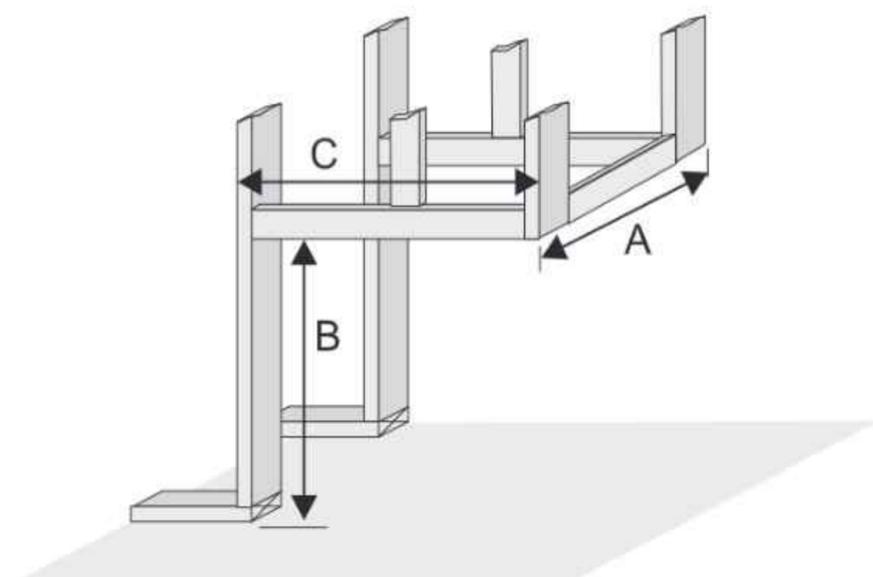

**Note: These units are non-load bearing.**

## FACING & FINISHING REQUIREMENTS

This fireplace is supplied with a 3" metal extension trim above the fireplace. The extension trim may be replaced if the framing is faced with a non-combustible material placed flush with the front and side face of the unit and extending from the top of the unit. (ie. tile, slate, etc.)

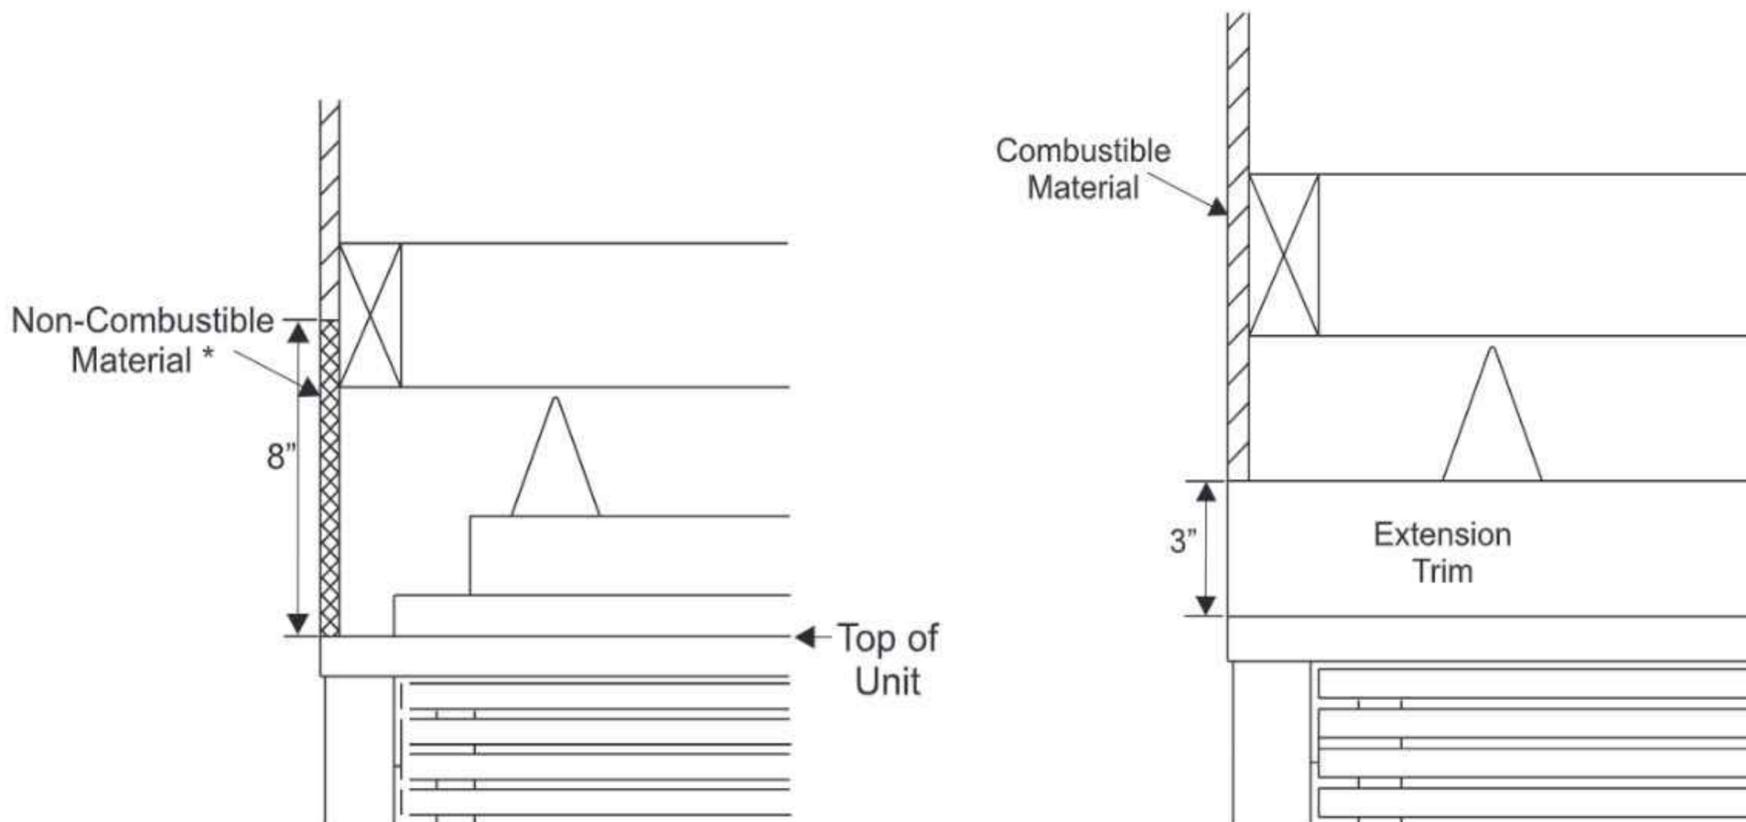


## UNIT ASSEMBLY PRIOR TO INSTALLATION

The 4 Top Standoffs must be correctly positioned and attached to the top before unit is slipped into position.

### Top Standoff Assembly

The top standoffs are shipped in a flat position and must be folded into shape and attached.

- 1) Remove the standoffs from the fireplace top.
- 2) Take each standoff and bend into the correct shape. Bend up at the bend lines until the screw holes in the standoff and the pre-punched screw holes on the fireplace top line up.
- 3) Attach the standoff securely to the top with 4 screws per standoff (on opposite corners).

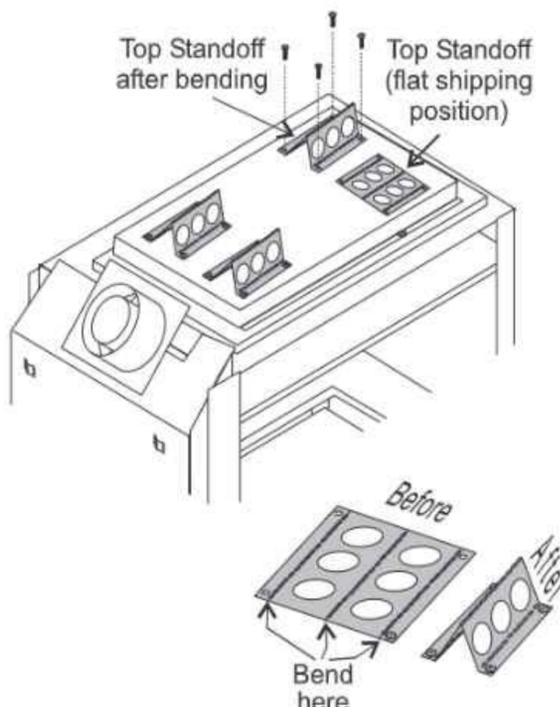


## VENTING INTRODUCTION

The P121-10/P131-10 uses the "balanced flue" technology Co-Axial system. The inner liner vents products of combustion to the outside while the outer liner draws outside combustion air into the combustion chamber thereby eliminating the need to use heated room air for combustion and losing warm room air up the chimney.

**Note:** *These flue pipes must not be connected to any other appliance.*

The gas appliance and vent system must be vented directly to the outside of the building, and never be attached to a chimney serving a separate solid fuel or gas burning appliance. Each direct vent gas appliance must use its own separate vent system. Common vent systems are prohibited. (See "Rigid Pipe Venting Systems" for more details and exceptions).

EXTERIOR VENT TERMINATION LOCATIONS

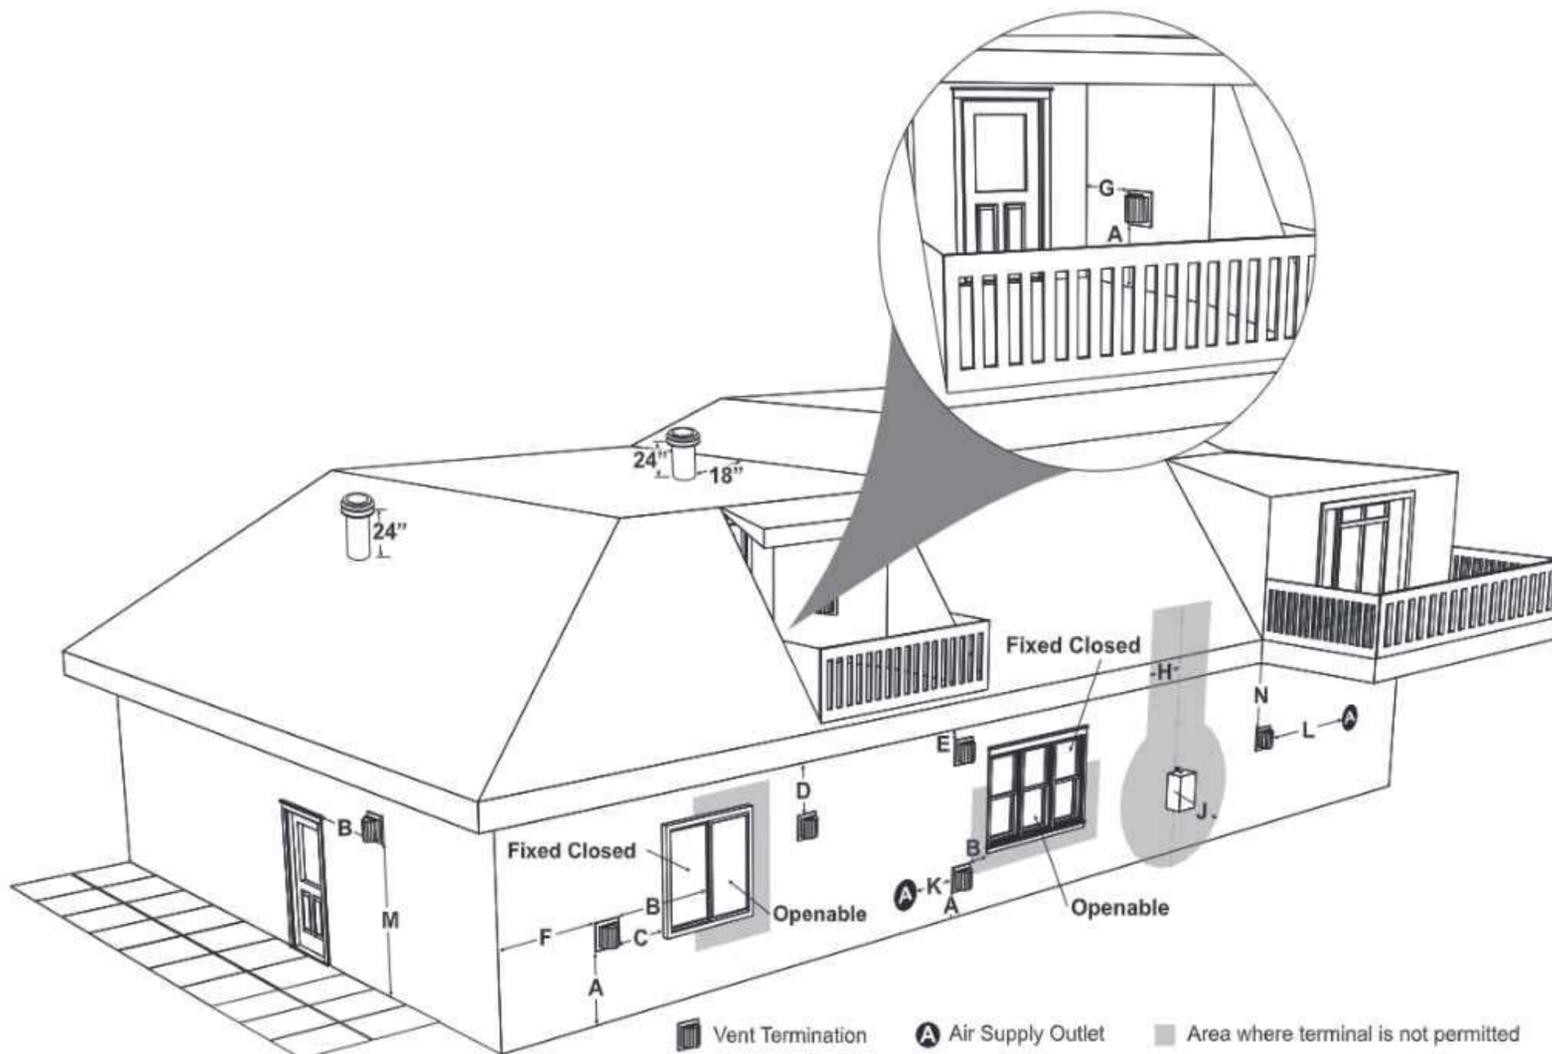

|   | Minimum Clearance Requirements  | Canada <sup>1</sup>    | USA <sup>2</sup>       |
|---|---|------------------------|------------------------|
| A | Clearance above grade, veranda, porch, deck, or balcony   | 12"(30cm)              | 12"(30cm)              |
| B | Clearance to window or door that may be opened  | 12"(30cm)              | 9" (23cm)              |
| C | Clearance to permanently closed window  | *                      | *                      |
| D | Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (61cm) from the center line of the terminal (check with the local code) | 18"(46cm)              | 18"(46cm)              |
| E | Clearance to unventilated soffit  | 20"(51cm)              | 20"(51cm)              |
| F | Clearance to outside corner: with <b>AstroCap</b> Termination Cap.  | 6"(15cm)               | 6"(15cm)               |
|   | Clearance to outside corner: with all other approved Termination Caps.  | 14"(36cm)              | 14"(36cm)              |
| G | Clearance to inside corner: with <b>AstroCap</b> Termination Cap  | 6"(15cm)               | 6"(15cm)               |
|   | Clearance to inside corner: with all other approved Termination Caps.   | 12"(30cm)<br>13"(33cm) | 12"(30cm)              |
| H | Clearance to each side of center line extended above meter/regulator assembly   | 36"(90cm) <sup>a</sup> | *                      |
| J | Clearance to service regulator vent outlet  | 36"(90cm)              | *                      |
| K | Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance   | 12"(30cm)              | 9" (23cm)              |
| L | Clearance to a mechanical air supply inlet<br>#3' (91cm) above if within 10' (3m) horizontally.   | 72"(1.8m)              | 36"(90cm) <sup>b</sup> |
| M | Clearance above paved sidewalk or a paved driveway located on public property   | 84"(2.1m) <sup>†</sup> | *                      |
| N | Clearance under veranda, porch, deck, or balcony  | 12"(30cm) <sup>‡</sup> | *                      |

<sup>1</sup> In accordance with current CSA B149.1, *Natural Gas and Propane Installation Code*  
<sup>2</sup> In accordance with the current ANSI Z223.1/NFPA 54, *National Fuel Gas Code*  
<sup>†</sup> A vent shall not terminate directly above a sidewalk or paved driveway which is located between two single family dwellings and serves both dwellings  
<sup>‡</sup> Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor  
 \* Clearance in accordance with local installation codes and the requirements of the gas supplier  
<sup>a</sup> 3 feet (91cm) within a height of 15 feet (4.5m) above the meter / regulator assembly  
<sup>b</sup> 3 feet (91cm) above - if within 10 feet (3m) horizontally

# 16 | installation

## 4" X 6-5/8" RIGID PIPE CROSS REFERENCE CHART

Components from different Manufacturers may not be mixed. Not All Rigid Pipe components are available directly from FPI.

| Description                | Simpson Direct Vent Pro® | Selkirk Direct Temp™ | American Metal Products® Amerivent Direct | Metal-Fab™ Sure Seal | Security Secure-Vent® | ICC Excel Direct | Olympia Ventis DV* |
|----------------------------|--------------------------|----------------------|---|----------------------|-----------------------|------------------|--------------------|
| 6" Pipe Length-Galvanized  | 46DVA-06                 | 4DT-6                | N/A                                       | 4D6                  | SV4L6                 | TC-4DL6          | VDV-0406           |
| 6" Pipe Length-Black       | 46DVA-06B                | 4DT-6B               | N/A                                       | 4D6B                 | SV4LB6                | TC-4DL6B         | VDVB-0406          |
| 7" Pipe Length-Galvanized  | N/A                      | N/A                  | 4D7                                       | N/A                  | N/A                   | N/A              | N/A                |
| 7" Pipe Length-Black       | N/A                      | N/A                  | 4D7B                                      | N/A                  | N/A                   | N/A              | N/A                |
| 9" Pipe Length-Galvanized  | 46DVA-09                 | 4DT-9                | N/A                                       | N/A                  | N/A                   | TC-4DL9          | VDV-0409           |
| 9" Pipe Length-Black       | 46DVA-09B                | 4DT-9B               | N/A                                       | N/A                  | N/A                   | TC-4DL9B         | VDVB-0409          |
| 12" Pipe Length-Galvanized | 46DVA-12                 | 4DT-12               | 4D12                                      | 4D12                 | SV4L12                | TC-4DL1          | VDV-0412           |
| 12" Pipe Length-Black      | 46DVA-12B                | 4DT-12B              | 4D12B                                     | 4D12B                | SV4LB12               | TC-4DL1B         | VDVB-0412          |
| 18" Pipe Length-Galvanized | 46DVA-18                 | 4DT-18               | 4D18                                      | 4D18                 | SV4LA                 | TC-4DL18         | VDV-0418           |
| 18" Pipe Length-Black      | 46DVA-18B                | 4DT-18B              | 4D18B                                     | 4D18B                | SV4LA                 | TC-4DL18B        | VDVB-0418          |
| 24" Pipe Length-Galvanized | 46DVA-24                 | 4DT-24               | 4D24                                      | 4D24                 | SV4L24                | TC-4DL2          | VDV-0424           |
| 24" Pipe Length-Black      | 46DVA-24B                | 4DT-24B              | 4D24B                                     | 4D24B                | SV4LB24               | TC-4DL2B         | VDVB-0424          |
| 36" Pipe Length-Galvanized | 46DVA-36                 | 4DT-36               | 4D36                                      | 4D36                 | SV4L36                | TC-4DL3          | VDV-0436           |
| 36" Pipe Length-Black      | 46DVA-36B                | 4DT-36B              | 4D36B                                     | 4D36B                | SV4LB36               | TC-4DL3B         | VDVCB-0436         |
| 48" Pipe Length-Galvanized | 46DVA-48                 | 4DT-48               | 4D48                                      | 4D48                 | SV4L48                | TC-4DL4          | VDV-0448           |
| 48" Pipe Length-Black      | 46DVA-48B                | 4DT-48B              | 4D48B                                     | 4D48B                | SV4LB48               | TC-4DL4B         | VDVB-0448          |
| 60" Pipe Length-Galvanized | 46DVA-60                 | 4DT-60               | N/A                                       | N/A                  | N/A                   | N/A              | N/A                |
| 60" Pipe Length-Black      | 46DVA-60B                | 4DT-60B              | N/A                                       | N/A                  | N/A                   | N/A              | N/A                |

|                                     |            |     |       |       |          |           |     |
|-------------------------------------|------------|-----|-------|-------|----------|-----------|-----|
| Adjustable Length 3"-10"-Galvanized | N/A        | N/A | N/A   | 4DAL  | N/A      | TC-4DLT   | N/A |
| Adjustable Length 3"-10"-Black      | N/A        | N/A | N/A   | 4DALB | N/A      | TC-4DLTB  | N/A |
| Adjustable Length 7"-Galvanized     | N/A        | N/A | 4D7A  | N/A   | N/A      | N/A       | N/A |
| Adjustable Length 7"-Black          | N/A        | N/A | 4D7AB | N/A   | N/A      | N/A       | N/A |
| Extension Pipe 8-1/2"-Galvanized    | 46DVA-08A  | N/A | N/A   | N/A   | N/A      | N/A       | N/A |
| Extension Pipe 8-1/2"-Black         | 46DVA-08AB | N/A | N/A   | N/A   | N/A      | N/A       | N/A |
| Adjustable Length 12"-Galvanized    | N/A        | N/A | 4D12A | N/A   | SV4LA12  | TC-4dLSI  | N/A |
| Adjustable Length 12"-Black         | N/A        | N/A | 4D12A | N/A   | SV4LBA12 | TC-4dLSIB | N/A |
| Extension Pipe 16"-Galvanized       | 46DVA-16A  | N/A | N/A   | N/A   | N/A      | N/A       | N/A |
| Extension Pipe 16"-Black            | 46DVA-16AB | N/A | N/A   | N/A   | N/A      | N/A       | N/A |

|                                      |                |            |            |        |            |           |             |
|--------------------------------------|----------------|------------|------------|--------|------------|-----------|-------------|
| 45° Elbow-Galvanized                 | 46DVA-E45      | 4DT-EL45   | 4D45L      | N/A    | N/A        | TE-4DE45  | VDV-EL0445  |
| 45° Elbow-Black                      | 46DVA-E45B     | 4DT-EL45B  | 4DT-EL45B  | N/A    | N/A        | TE-4DE45B | VDVB-EL0445 |
| 45° Elbow Swivel-Galvanized          | See 46DVA-E45  | N/A        | N/A        | 4D45L  | SV4E45     | N/A       | N/A         |
| 45° Elbow Swivel-Black               | See 46DVA-E45B | N/A        | N/A        | 4D45LB | SV4EB45    | N/A       | N/A         |
| 90° Elbow-Galvanized                 | 46DVA-E90      | 4DT-EL90S  | 4DT-EL90S  | N/A    | N/A        | TE-4DE90  | VDV-EL0445  |
| 90° Elbow-Black                      | 46DVA-E90B     | 4DT-EL90SB | 4DT-EL90SB | N/A    | SV4EBR90-1 | TE-4DE90B | VDVB-EL0445 |
| 90° Elbow, Swivel-Galvanized         | See 46DVA-E90  | N/A        | N/A        | 4D90L  | SV4E90-1   | N/A       | N/A         |
| 90° Elbow, Swivel-Black              | See 46DVA-E90B | N/A        | N/A        | 4D90LB | SV4EB90-1  | N/A       | N/A         |
| 90° Starter Elbow, Swivel-Galvanized | N/A            | N/A        | N/A        | 4D90A  | N/A        | N/A       | N/A         |
| Adaptor*                             | N/A            | N/A        | N/A        | 4D90L  | N/A        | N/A       | VDV-UAA04   |


|                                      |                         |          |       |       |        |         |           |
|--------------------------------------|-------------------------|----------|-------|-------|--------|---------|-----------|
| Ceiling Support                      | N/A                     | 4DT-CS   | 4DSP  | 4DFSP | SV4SD  | TM4-RDS | VDV-SCR04 |
| Cathedral Support Box                | 46DVA-CS                | 4DT-CSS  | 4DRSB | 4DRS  | SV4CSB | TM4-SDS | VDV-CSS04 |
| Wall Support/Band                    | 46DVA-WS                | 4DT-WS/B | 4DWS  | 4DWS  | SV4BM  | TM-SWS  | VDV-WS04  |
| Offset Support                       | 46DVA-ES - N/A from FPI | 4DT-OS   | N/A   | N/A   | SV4SU  | TM-SOS  | N/A       |
| Wall Thimble-Black                   | 46DVA-WT                | 4DT-WT   | 4DWT  | 4DWT  | SV4RSM | N/A     | VDV-WPT04 |
| Wall Thimble Support/Ceiling Support | 46DVA-DC                | N/A      | N/A   | N/A   | SV4PF  | N/A     | N/A       |
| Firestop Spacer                      | 46DVA-FS                | 4DT-FS   | 4DFSP | 4DFS  | SV4BF  | TM-4CS  | VDV-FS04  |
| Trim Plate-Black                     | N/A                     | 4DT-TP   | 4DFPB | 4DcP  | SV4LA  | TM-4TP  | VDV-WTC04 |

| Description                                 | Simpson Direct Vent Pro®          | Selkirk Direct Temp™ | American Metal Products® Amerivent Direct | Metal-Fab™ Sure Seal | Security Secure-Vent® | ICC Excel Direct | Olympia Ventis DV* |
|---|-----------------------------------|----------------------|---|----------------------|-----------------------|------------------|--------------------|
| Attic Insulation Shield 12"                 | 46DVA-IS N/A @ FPI                | N/A                  | 4DAIS12                                   | N/A                  | SV4RSA                | N/A              | VDV-AIS04          |
| Attic Insulation Shield - Cold Climates 36" | N/A                               | N/A                  | 4DAIS12                                   | N/A                  | N/A                   | TM-4AS           | N/A                |
| Basic Horizontal Termination Kit (A)        | Disc.                             | 4DT-HKA              | 4DHTK2                                    | 4DHTKA               | SV-SHK                | TM4-HTK          | VDV-KW04           |
| Horizontal Termination Kit (B)              | 46DVA-KHA<br>(Changed Components) | 4DT-HKB              | 4DHTK1                                    | 4DHTKB               | SV-HK                 | TM4-HTK          | VDV-K04            |
| Vertical Termination Kit                    | Disc.                             | 4DT-VKC              | 4DHTK                                     | 4DHTK                | SV-FK                 | N/A              | N/A                |
| High Wind Vertical Cap                      | 46DVA-VCH                         | N/A                  | N/A                                       | N/A                  | N/A                   | TM-4VT           | VDV-VCHW04         |
| High Wind Horizontal Cap                    | 46DVA-HC                          | N/A                  | N/A                                       | N/A                  | N/A                   | TM-4DHT          | N/A                |
| Horizontal Square Termination Cap           | 46DVA-HC                          | 4DT-HHC              | 4DHC                                      | 4DHT                 | SV4CHC-1              | TM-4HT           | VDV-HC04           |
| Vertical Termination Cap                    | 46DVA-VC                          | 4DT-HVC              | 4DVC                                      | 4DVT                 | SV4CGV-1              | N/A              | N/A                |
| Storm Collar                                | 46DVA-08A                         | 4DT-SC               | 4DSC                                      | 4DSC                 | SV4FC                 | TM-SC            | VDV-SC04           |
| Adjustable Flashing 0/12-6/12               | 46DVA-F6                          | 4DT-ST14             | 4D12S                                     | 4DST14               | SV4STC14              | TF-4FA           | VDV-F0406          |
| Adjustable Flashing 6/12-12/12              | 46DVA-F12                         | 4DT-ST36             | 4D36S                                     | 4DST36               | SV4STC36              | TF-4FB           | VDV-SSO            |
| Vinyl Siding Standoff                       | 46DVA-VSS                         | 4DT-VS               | N/A                                       | 4DVS                 | SV4VS                 | TM-VSS           | N/A                |
| Vinyl Siding Shield Plate                   | N/A                               | 4DT-VSP              | N/A                                       | N/A                  | SV4VS                 | N/A              | N/A                |
| Snorkel Termination 14"                     | 46DVA-SNK14                       | N/A                  | N/A                                       | N/A                  | N/A                   | TM-4ST14         | N/A                |
| Snorkel Termination 36"                     | N/A                               | N/A                  | N/A                                       | N/A                  | N/A                   | TM-4ST36         | N/A                |
| Restrictor Disk                             | N/A                               | N/A                  | N/A                                       | N/A                  | N/A                   | TM-4DS           | N/A                |
| Extended Vertical Termination Cap           | N/A                               | N/A                  | N/A                                       | N/A                  | N/A                   | N/A              | N/A                |
| Chimney Conversion Kit A (USA only)         | 46DVA-KCA                         | N/A                  | N/A                                       | N/A                  | N/A                   | TM-4CA6          | N/A                |
| Chimney Conversion Kit B (USA only)         | 46DVA-KCB                         | N/A                  | N/A                                       | N/A                  | N/A                   | TM-4CA7          | N/A                |
| Chimney Conversion Kit C (USA only)         | 46DVA-KCC                         | N/A                  | N/A                                       | N/A                  | N/A                   | TM-4CA8          | N/A                |
| Wall Firestop                               | 46DVA-WFS                         | N/A                  | N/A                                       | N/A                  | N/A                   | TM-4TR           | VDV-FS04           |
| Colinear Flex Connectors                    | 46DVA-ADF                         | N/A                  | N/A                                       | N/A                  | N/A                   | N/A              | N/A                |

\* Olympia Ventis DV applicable for the following units only: B36XTE, B36XTCE, B41XTE, B41XTCE, P36, P36E

| FPI       |   |           |   |
|-----------|---|-----------|---|
| 946-506/P | Vent Guard (Optional) for AstroCap                  | 946-205   | Vinyl Siding Shield for Riser Vent Terminal   |
| 510-994   | Rigid Pipe Adaptor (Must use with all rigid piping) | 946-208/P | Vent Guard (Optional) for Riser Vent Terminal |
| 640-530/P | Riser Vent Terminal                                 | 946-523/P | AstroCap Horizontal Cap                       |
|           |   | 946-206   | Vinyl Siding Standoff for AstroCap            |

**Note:** When using Metal-Fab Sure Seal Rigid Piping - please note that the Adaptor (4DDA) must be used in conjunction with FPI Rigid Pipe Adaptor (510-994).
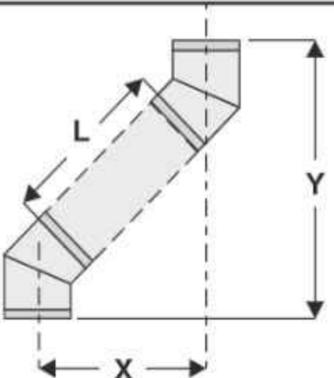
| Offset Pipe Selection: Use this table to determine offset pipe lengths. |                     |                    |  |   |
|---|---------------------|--------------------|--|---|
| Pipe Length (L)   | 4" x 6-5/8" Venting |                    |  | For specific instructions on venting components - visit the manufacturers website listed below.<br><br>Simpson Direct Vent Pro: <a href="http://www.duravent.com">www.duravent.com</a><br>Selkirk Direct-Temp: <a href="http://www.selkirkcorp.com">www.selkirkcorp.com</a><br>American Metal Products: <a href="http://www.americanmetalproducts.com">www.americanmetalproducts.com</a><br>Metal-Fab Sure Seal: <a href="http://www.mtfab.com">www.mtfab.com</a><br>Security Secure Vent: <a href="http://www.securitychimneys.com">www.securitychimneys.com</a><br>Industrial Chimney Company: <a href="http://www.icc-rsf.com">www.icc-rsf.com</a> |
|   | Run (X)             | Rise (Y)           |  |   |
| 0" (0mm)  | 4-7/8" (124mm)      | 13-7/8" (340mm)    |  |   |
| 6" (152mm)  | 8" (203mm)          | 16-1/2" (419mm)    |  |   |
| 9" (229mm)  | 10-1/8" (257mm)     | 18-5/8" (473mm)    |  |   |
| 12" (305mm)   | 12-1/4" (311mm)     | 20-3/4" (527mm)    |  |   |
| 24" (610mm)   | 20-5/8" (524mm)     | 29-1/8" (740mm)    |  |   |
| 36" (914mm)   | 29" (737mm)         | 37-1/2" (953mm)    |  |   |
| 48" (1219mm)  | 37-7/16" (951mm)    | 45-15/16" (1167mm) |  |   |

**Note:** Horizontal runs of vent must be level, or have a 1/4" rise for every 1 foot of run towards the termination. Never allow the vent to run downward - this could cause high temperatures and may present a possible fire hazard.


## VENTING ARRANGEMENT - HORIZONTAL TERMINATIONS

### *Regency® Direct Vent System (Flex) Horizontal Terminations Only*

These venting systems, in combination with the P121-10/P131-10 Direct Vent Gas Fireplace, have been tested and listed as a direct vent heater system by Intertek. The location of the termination cap must conform to the requirements in the Vent Terminal Locations diagram in the "Exterior Vent Termination Locations" section.

**Regency® Direct Vent (Flex) System Termination Kit (Part# 946-513) includes all the parts needed to install the P121-10/P131-10 with a maximum run of 2 feet.** If installing the P121-10/P131-10 with a continuous vent length of more than 2 ft. (.6m) to a maximum of 10 ft. (3.0m) use Kit # 946-515 (4 ft.) or 946-516 (10 ft.)

- 1) 6-7/8" dia. flexible liner (2 ft. length)
- 2) 4" dia. flexible liner (2 ft. length)
- 3) spring spacers (3)
- 4) thimble (2)
- 5) **AstroCap** termination cap (1)
- 6) screws (12)
- 7) tube of Mill Pac (1)
- 8) plated screws (8)
- 9) screws #8 x 1-1/2" drill point, stainless steel (4)

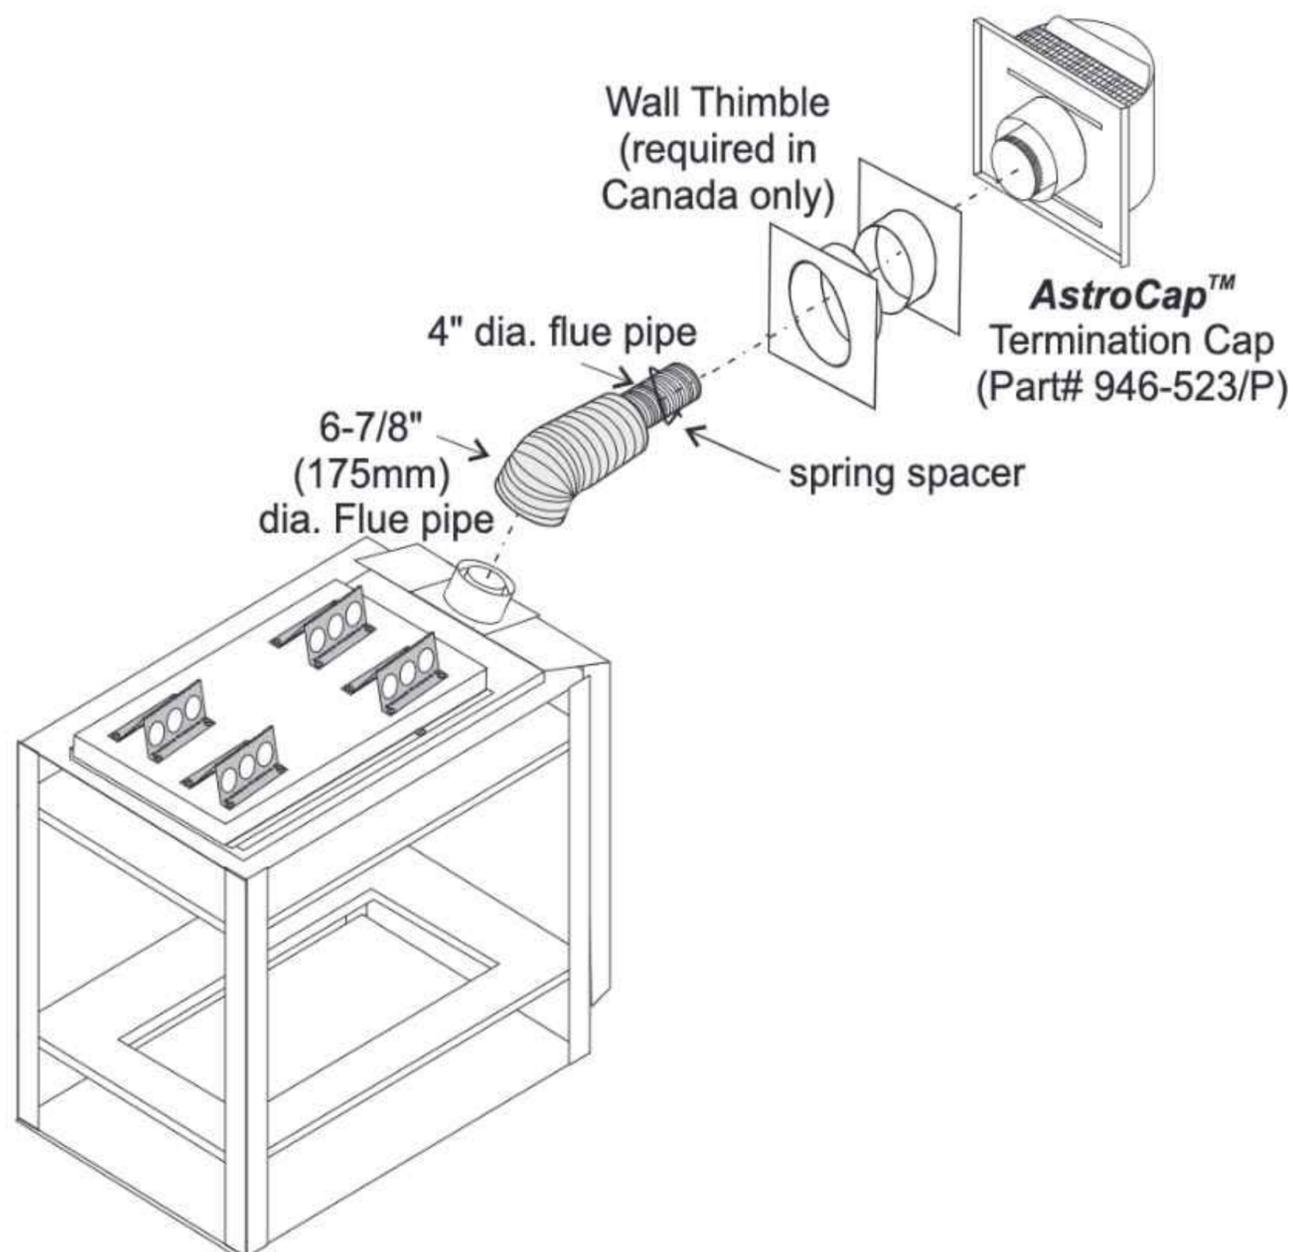

#### Notes:

- 1) Liner sections should be continuous without any joints or seams.
- 2) Only Flex pipe purchased from Regency® may be used for Flex installations.
- 3) Regency® Direct Vent System (Flex) is only approved for horizontal terminations.

## RIGID PIPE VENTING SYSTEMS

### *Horizontal or Vertical Terminations*

The minimum components required for a basic horizontal termination are:

- 1 Simpson Duravent Adaptor
- 1 Horizontal Termination Cap
- 1 45° Elbow
- 1 Rigid Pipe Adaptor
- 1 Wall Thimble
- 1 Length of pipe to suit wall thickness (see chart)

Wall thickness is measured from the back standoffs to the inside mounting surface of termination cap. For siding other than vinyl furring strips may be used, instead of the vinyl siding standoff, to create a level surface to mount the vent terminal. The Terminal must not be recessed into siding. Measure the wall thickness including furring strips.

If a Vinyl Siding Standoff is required (it must be used with vinyl siding), measure to outside surface of wall without siding and add 2 inches.


| Flat Wall Installation  |                               |
|-------------------------|-------------------------------|
| Wall Thickness (inches) | Vent Length Required (inches) |
| 4" - 5-1/2"             | 6"                            |
| 7" - 8-1/2"             | 9"                            |
| 10" - 11-1/2"           | 12"                           |
| 9" - 14-1/2"            | 11" - 14-5/8" Adj. Pipe       |
| 15" - 23-1/2"           | 17" - 24" Adj. Pipe           |

**WARNING:**

Do not combine venting components from different venting systems.

However use of the the AstroCap™ and FPI Riser is acceptable with all systems.

This product has been evaluated by Intertek for using a Rigid Pipe Adaptor in conjunction with Duravent Direct-Vent, Selkirk Direct-Temp, Ameri Vent Direct venting and Security Secure Vent systems. Use of these systems with the Rigid Pipe adaptor is deemed acceptable and does not affect the Intertek WHI listing of components.

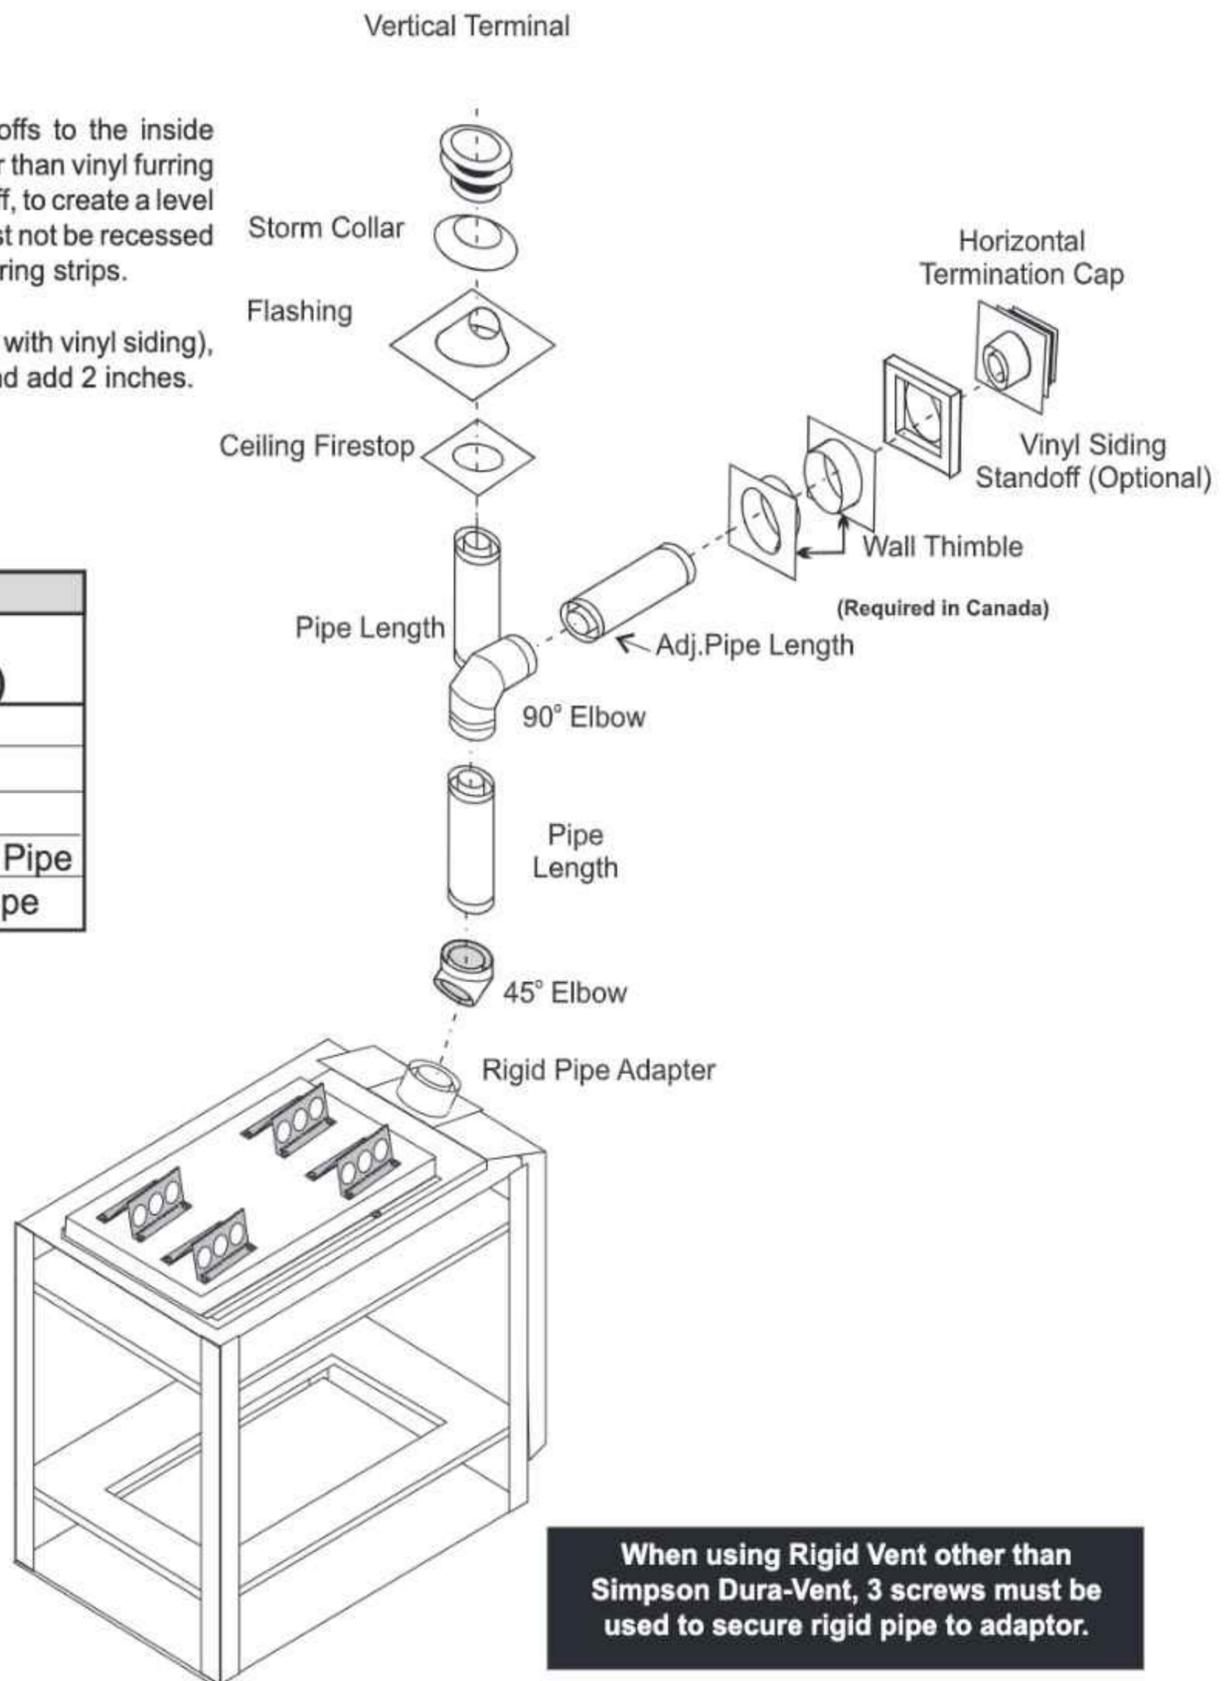

**When using Rigid Vent other than Simpson Dura-Vent, 3 screws must be used to secure rigid pipe to adaptor.**

The FPI AstroCap™ and FPI Riser Vent terminal are certified for installations using FPI venting systems as well as Simpson Dura-Vent® Direct Vent, American Metal Products Ameri Vent Direct Vent, Security Secure Vent®, Selkirk Direct-Temp. AstroCap™ is a proprietary trademark of FPI Fireplace Products International Ltd. Dura-Vent® and Direct Vent are registered and/or proprietary trademarks of Simpson Dura-Vent Co. Inc.

**RIGID PIPE VENTING ARRANGEMENTS  
HORIZONTAL TERMINATIONS**

**REGENCY DIRECT VENT SYSTEM (FLEX) (Propane & Natural Gas)**

The diagram below shows examples of horizontal termination arrangements using one, two, or three 90° elbows (two 45° elbows equal one 90° elbow).

**Note:**

- 1) A maximum of three 90° elbows are permitted.
- 2) Minimum distance between elbows is 1 ft. (305mm).

**All Rigid Pipe Systems**  
4" inner diameter  
6-5/8" outer diameter

- Maintain clearances to combustibles as listed in the "Clearances" section.
- Horizontal vent must be supported every 3 feet.
- Firestops are required at each floor level and whenever passing through a wall.
- Must use optional rigid pipe adaptor (Part# 510-994) when using rigid pipe vent systems.
- A vent guard should be used whenever the termination is lower than the specified minimum or as per local codes.

**Straight Out Horizontal Venting**

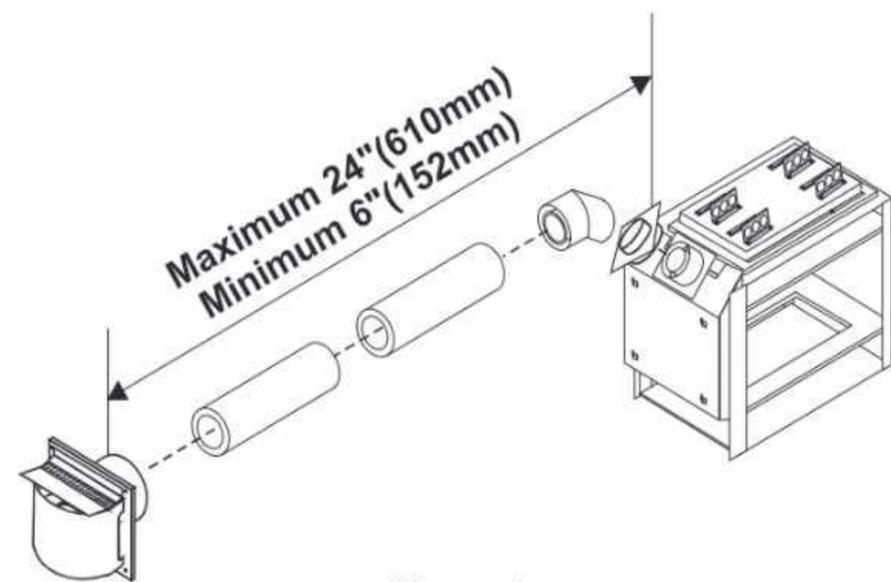



Diagram 1

**Horizontal Venting with One (1) 90° Elbow**

| Option | V                  | H                   |
|--------|--------------------|---------------------|
| A)     | 1' (305mm) Minimum | 3' (914mm) Maximum  |
| B)     | 2' (610mm) Minimum | 6' (1.83m) Maximum  |
| C)     | 3' (914mm) Minimum | 9' (2.74m) Maximum  |
| D)     | 4' (1.22m) Minimum | 12' (3.66m) Maximum |
| E)     | 5' (1.52m) Minimum | 15' (4.57m) Maximum |
| F)     | 6' (1.83m) Minimum | 17' (5.18m) Maximum |

With the above options, maximum total pipe length is 37 feet with minimum of 6 feet total vertical and maximum 17 feet total horizontal.

**Please note minimum 1 foot between 90° elbows is required.**

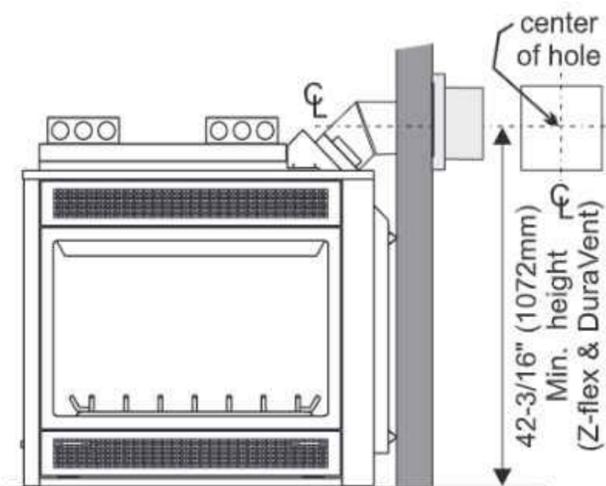

**Please note the minimum centerline for basic install shown above.**

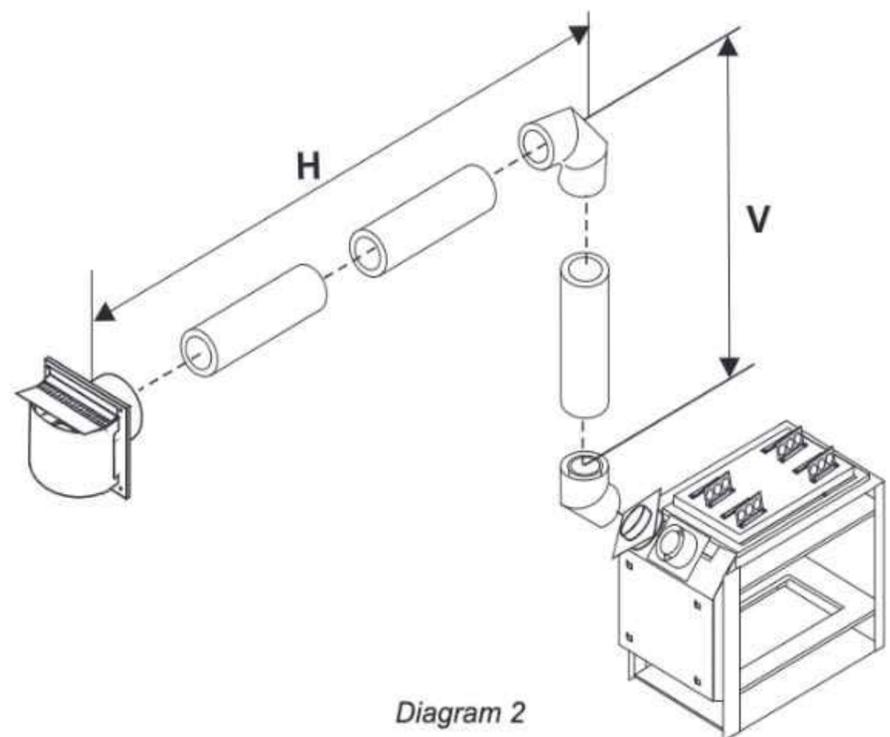



Diagram 2

**Horizontal Venting with Two (2) 90° Elbows**

| Option | V                  | H + H1              |
|--------|--------------------|---------------------|
| A)     | 1' (305mm) Minimum | 2' (610mm) Maximum  |
| B)     | 2' (610mm) Minimum | 5' (1.53m) Maximum  |
| C)     | 3' (914mm) Minimum | 8' (2.44m) Maximum  |
| D)     | 4' (1.22m) Minimum | 11' (3.35m) Maximum |
| E)     | 5' (1.52m) Minimum | 14' (4.27m) Maximum |
| F)     | 6' (1.83m) Minimum | 15' (4.57m) Maximum |

With the above options, maximum total pipe length if 37 feet with minimum of 6 feet total vertical and maximum 15 feet total horizontal.

**Please note minimum 1 foot between 90° elbows is required.**

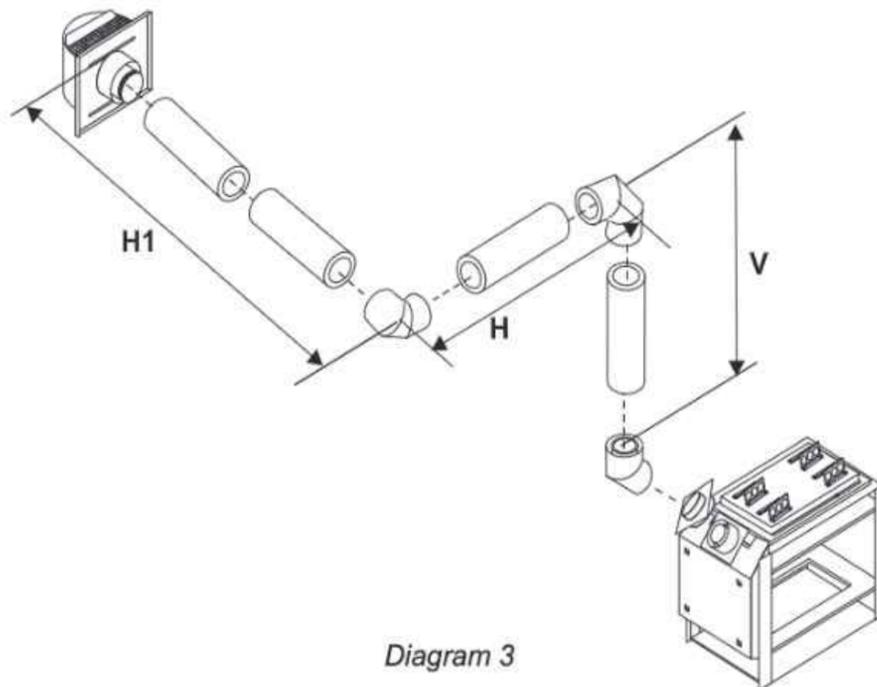


**Horizontal Venting with Three (3) 90° Elbows**

| Option | V               | H               | H + H1 + H2      |
|--------|-----------------|-----------------|------------------|
| A)     | 2' (610mm) Min. | 1' (305mm) Max. | 3' (914mm) Max.  |
| B)     | 3' (914mm) Min. | 3' (914mm) Max. | 6' (1.83m) Max.  |
| C)     | 4' (1.22m) Min. | 5' (1.52m) Max. | 9' (2.74m) Max.  |
| D)     | 5' (1.52m) Min. | 7' (2.13m) Max. | 12' (3.66m) Max. |

With the above options, maximum total pipe length if 37 feet with minimum of 5 feet total vertical and maximum 12 feet total horizontal.

**Please note minimum 1 foot between 90° elbows is required.**

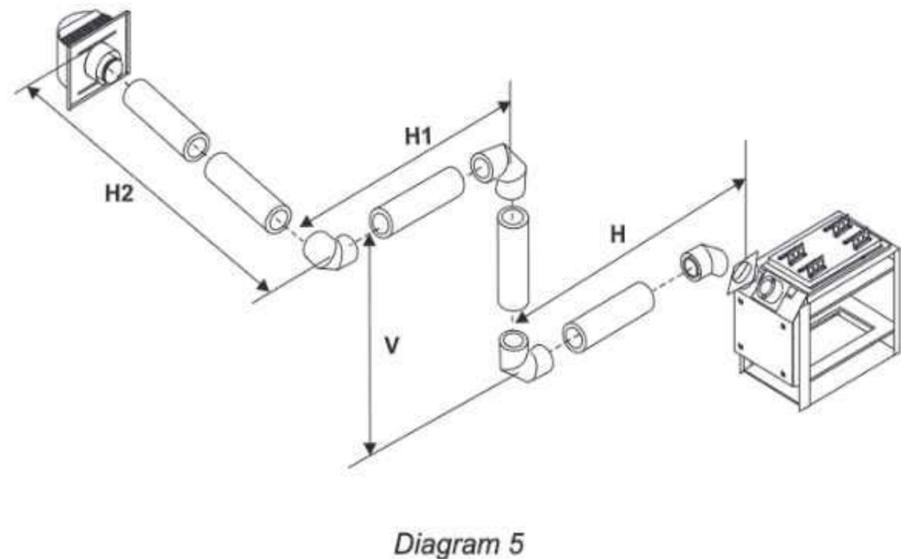


**Horizontal Venting with Three (3) 90° Elbows**

| Option | V + V1             | H + H1              |
|--------|--------------------|---------------------|
| A)     | 2' (610mm) Minimum | 3' (914mm) Maximum  |
| B)     | 3' (914mm) Minimum | 6' (1.83m) Maximum  |
| C)     | 4' (1.22m) Minimum | 9' (2.7m) Maximum   |
| D)     | 5' (1.52m) Minimum | 12' (3.66m) Maximum |

With the above options, maximum total pipe length if 37 feet with minimum of 5 feet total vertical and maximum 12 feet total horizontal.

**Please note minimum 1 foot between 90° elbows is required.**

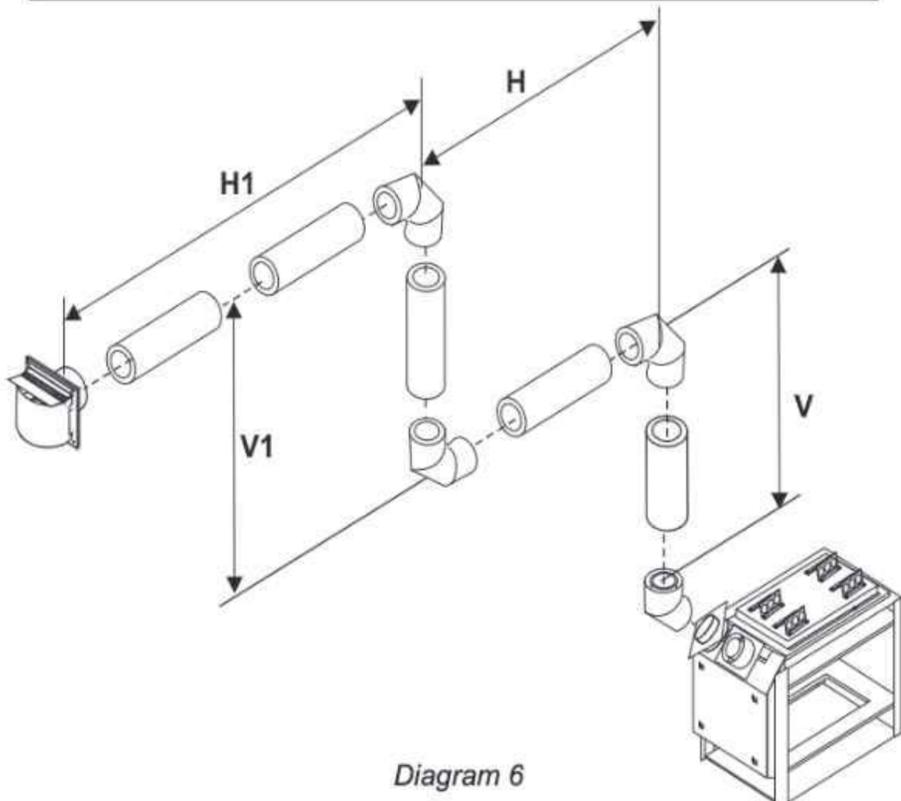


**Horizontal Venting with Two (2) 90° Elbows**

| Option | V               | H               | H + H1           |
|--------|-----------------|-----------------|------------------|
| A)     | 1' (305mm) Min. | 1' (305mm) Max. | 3' (914mm) Max.  |
| B)     | 2' (610mm) Min. | 3' (0.91m) Max. | 6' (1.83m) Max.  |
| C)     | 3' (914mm) Min. | 5' (1.52m) Max. | 9' (2.74m) Max.  |
| D)     | 5' (1.52m) Min. | 8' (2.44m) Max. | 12' (3.66m) Max. |

With the above options, maximum total pipe length if 37 feet with minimum of 5 feet total vertical and maximum 12 feet total horizontal.

**Please note minimum 1 foot between 90° elbows is required.**


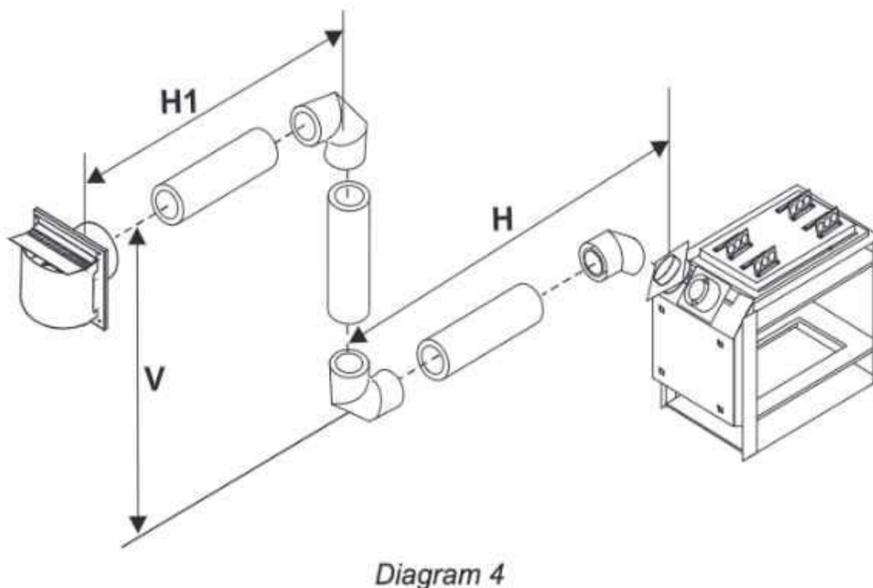


## RIGID PIPE VENTING ARRANGEMENTS - VERTICAL TERMINATIONS (Propane & Natural Gas)

- Vent must be supported at offsets
- Maintain clearances to combustibles as listed in the "Clearances" section.
- Firestops are required at each floor level and whenever passing through a wall.
- Must use optional rigid pipe adaptor when using rigid pipe vent systems (Part# 510-994).

The P121-10/ P131-10 is approved for a maximum 35 ft. (10.67m) straight vertical, with rigid pipe vent systems for Propane and Natural Gas, as per diagram 7 below.


### Straight Up Vertical Venting

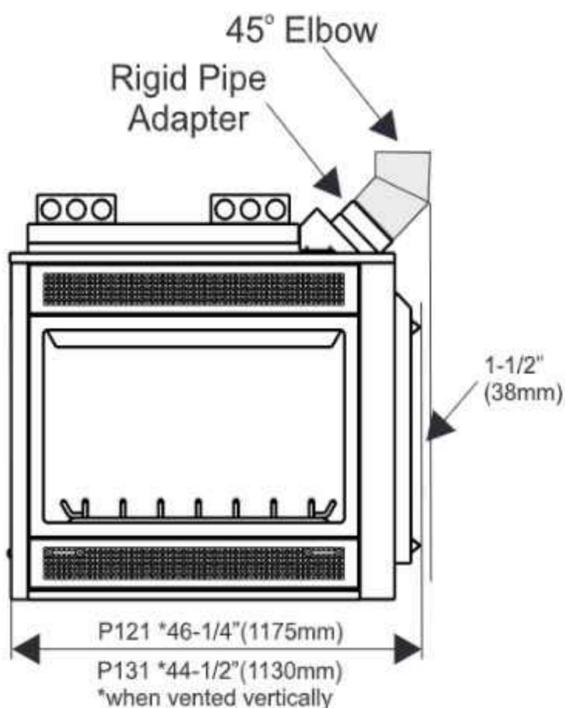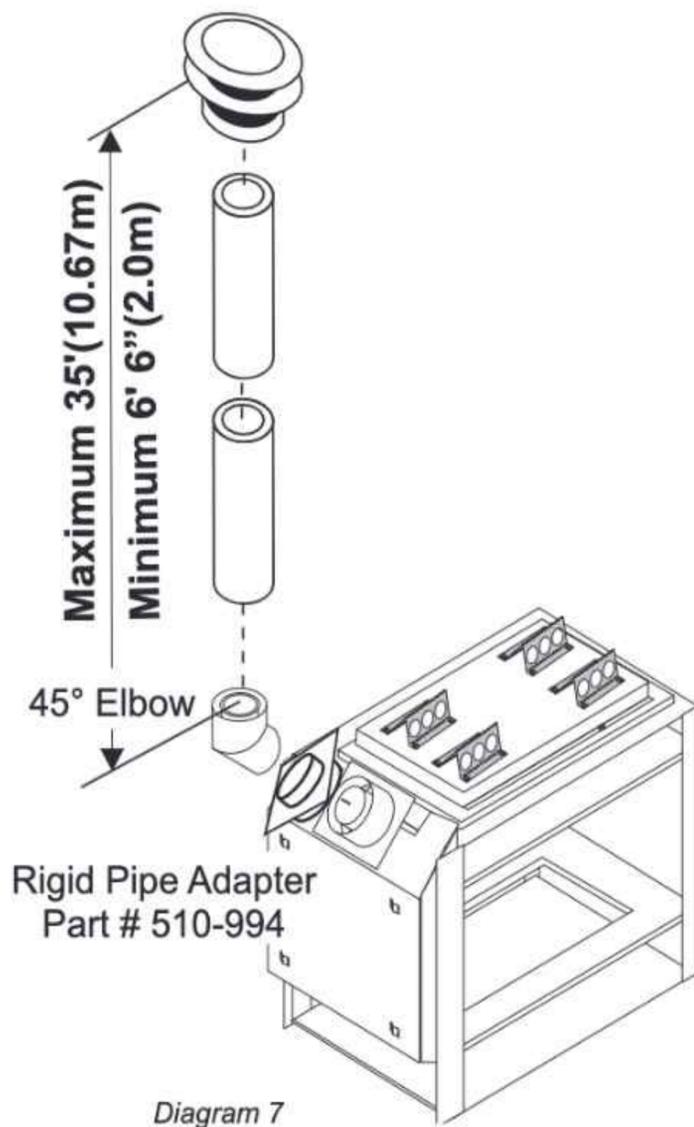

### Vertical Venting with One (1) 90° Elbow

| Option | V                  | H                  |
|--------|--------------------|--------------------|
| A)     | 1' (305mm) Minimum | 2' (610mm) Maximum |
| B)     | 2' (610mm) Minimum | 4' (1.22m) Maximum |
| C)     | 3' (914mm) Minimum | 6' (1.83m) Maximum |
| D)     | 4' (1.22m) Minimum | 8' (2.44m) Maximum |

With the above options, maximum total pipe length is 37 feet with minimum of 4 feet total vertical and maximum 8 feet total horizontal.  
**Please note minimum 1 foot between 90° elbows is required.**

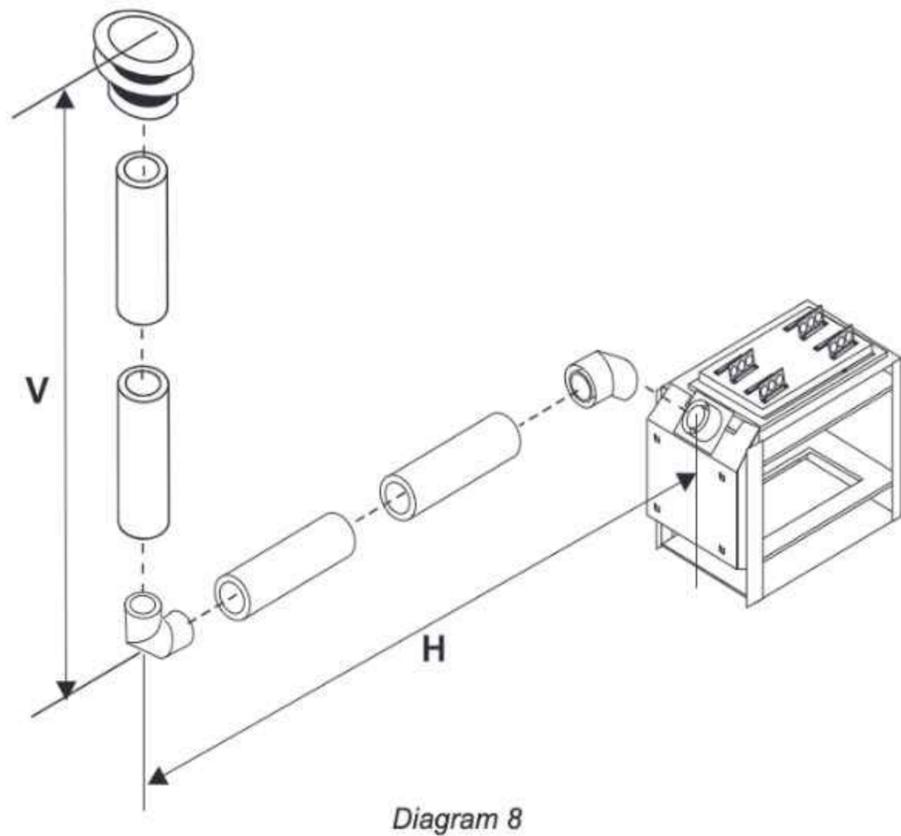

#### IMPORTANT


When installing this unit vertically, the 45° elbow when installed in conjunction with the Rigid Pipe Adaptor will protrude past the unit 1-1/2" (38mm) when measured from the rear standoffs.

**Note:** A 1-1/4" (32mm) clearance from the elbow must also be maintained.

**Vertical Venting with Two (2) 90° Elbows**

| Option | V + V1             | H                   |
|--------|--------------------|---------------------|
| A)     | 1' (305mm) Minimum | 4' (1.22m) Maximum  |
| B)     | 2' (610mm) Minimum | 6' (1.83m) Maximum  |
| C)     | 3' (914mm) Minimum | 9' (2.74m) Maximum  |
| D)     | 4' (1.22m) Minimum | 12' (3.66m) Maximum |
| E)     | 5' (1.52m) Minimum | 15' (4.57m) Maximum |
| F)     | 6' (1.83m) Minimum | 17' (5.18m) Maximum |


With the above options, maximum total pipe length is 37 feet with minimum of 6 feet total vertical and maximum 17 feet total horizontal.  
**Please note minimum 1 foot between 90° elbows is required.**

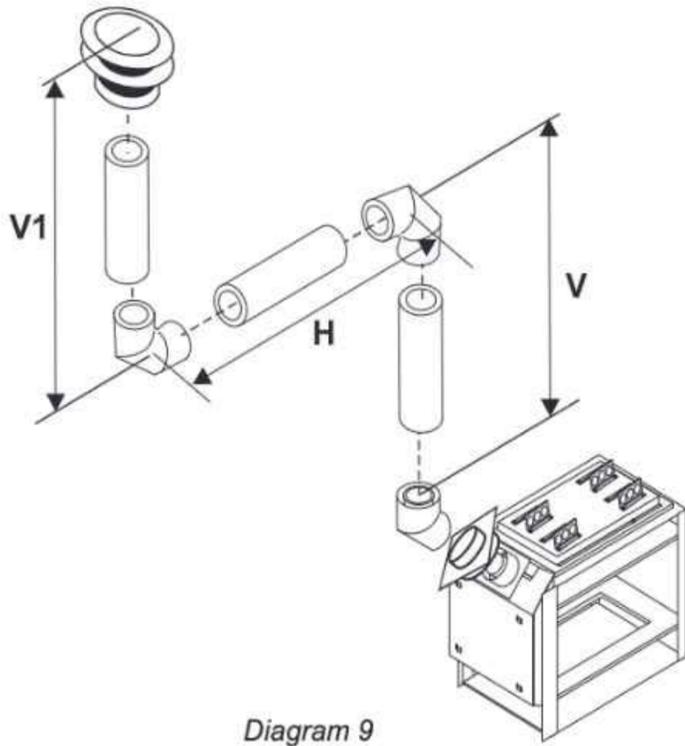

**Vertical Venting with Two (2) 90° Elbows**

| Option | V                  | H + H1             |
|--------|--------------------|--------------------|
| A)     | 1' (305mm) Minimum | 2' (610mm) Maximum |
| B)     | 2' (610mm) Minimum | 4' (1.22m) Maximum |
| C)     | 3' (914mm) Minimum | 6' (1.83m) Maximum |
| D)     | 4' (1.22m) Minimum | 8' (2.44m) Maximum |


With the above options, maximum total pipe length is 37 feet with minimum of 4 feet total vertical and maximum 8 feet total horizontal.  
**Please note minimum 1 foot between 90° elbows is required.**

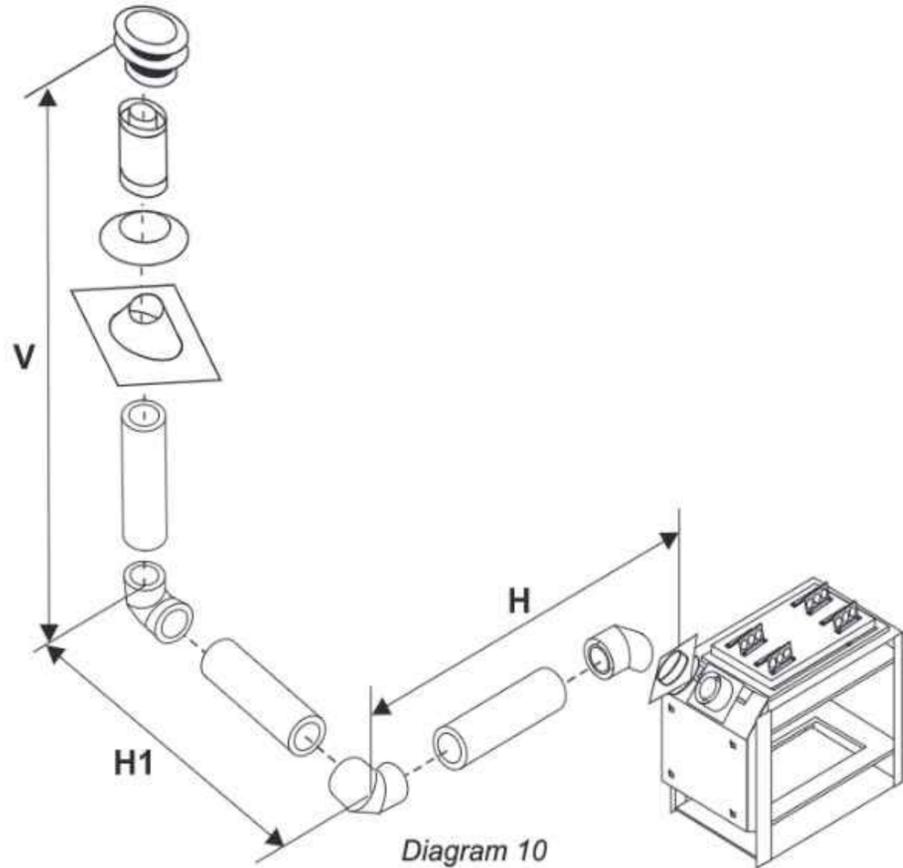


**Vertical Venting with Three (3) 90° Elbows**

| Option | V + V1          | H               | H + H1          |
|--------|-----------------|-----------------|-----------------|
| A)     | 2' (610mm) Min. | 1' (305mm) Max. | 2' (610mm) Max. |
| B)     | 3' (914mm) Min. | 4' (1.22m) Max. | 5' (1.5m) Max.  |
| C)     | 4' (1.22m) Min. | 6' (1.86m) Max. | 8' (2.4m) Max.  |
| D)     | 5' (1.5m) Min.  | 8' (2.4m) Max.  | 12' (3.6m) Max. |

With the above options, maximum total pipe length is 37 feet with minimum of 5 feet total vertical and maximum 12 feet total horizontal.  
**Please note minimum 1 foot between 90° elbows is required.**

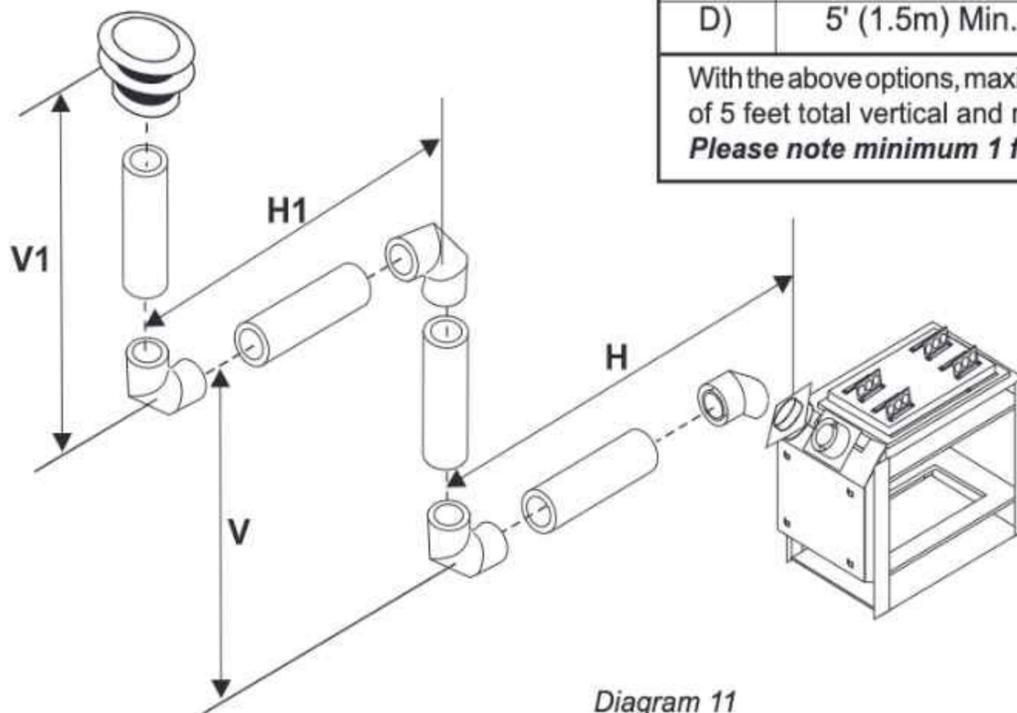

Vertical Venting with Three (3) 90° Elbows

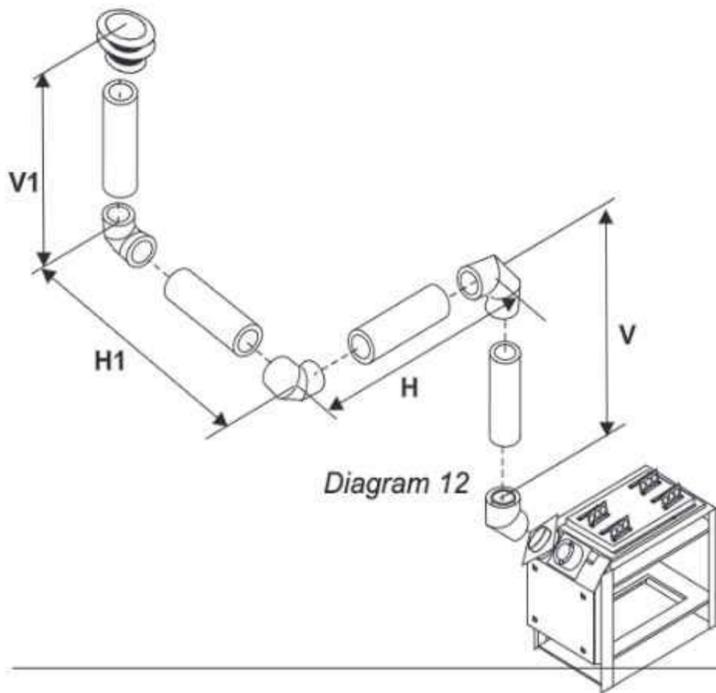

| Option | V + V1             | H + H1             |
|--------|--------------------|--------------------|
| A)     | 2' (610mm) Minimum | 3' (914mm) Maximum |
| B)     | 3' (914mm) Minimum | 6' (1.86m) Maximum |
| C)     | 4' (1.22m) Minimum | 9' (2.7m) Maximum  |
| D)     | 5' (1.5m) Minimum  | 12' (3.6m) Maximum |

With the above options, maximum total pipe length is 37 feet with minimum of 5 feet total vertical and maximum 12 feet total horizontal.  
**Please note minimum 1 foot between 90° elbows is required.**

HORIZONTAL TERMINATIONS


Install the vent system according to the manufacturer's instructions included with the components.

- 1) Set the unit in its desired location. Check to determine if wall studs or roof rafters are in the way when the venting system is attached. If this is the case, you may want to adjust the location of the unit. Rough in the gas.
- 2) Direct Vent pipe and fittings are designed with special twist-lock connections to connect the venting system to the appliance flue outlet. A twist-lock appliance adaptor is an available option that must be used in conjunction with the Simpson Dura-Vent Direct Vent system.
- 3) Put a bead of Mill-Pac inside the outer section of the adapter and on the inner collar. Slip the adapter over the existing inner and outer flue collar and fasten to the outer collar only with the 3 supplied screws (drilling pilot holes will make this easier). Level the fireplace and fasten it to the framing using nails or screws through the nailing strips.
- 4) Assemble the desired combination of pipe and elbows to the appliance adaptor and twist-lock for a solid connection.

Note:

- a) Twist-lock procedure: Four indentations, located on the female ends of pipes and fittings, are designed to slide straight onto the male ends of adjacent pipes and fittings, by orienting the four pipe indentations so they match and slide in to the four entry slots on the male ends, Diagram 1. Push the pipe sections completely together, then twist-lock one section clockwise approximately


one-quarter turn, until the two sections are fully locked. The female locking lugs will not be visible from the outside, on the Black Pipe or fittings. They may be located by examining the inside of the female ends.

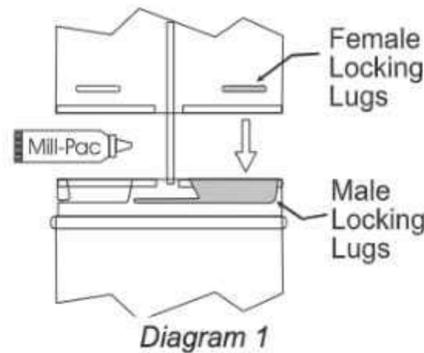

**NOTE:** For best results and optimum performance with each approved venting system, it is highly recommended to apply "Mill-Pac" sealant (supplied) to every inner pipe connection. Failure to do so may result in drafting or performance issues not covered under warranty.

- b) Horizontal runs of vent must be supported every three feet. Wall straps are available for this purpose.
- 5) Mark the wall for a 10" x 10" square hole. The center of the square hole should line up with the centerline of the horizontal pipe. Cut and frame the 10 inch square hole in the exterior wall where the vent will be terminated. If the wall being penetrated is constructed of non-combustible material, i.e. masonry block or concrete, a 7"(178mm) dia. (7-1/2"(191mm) dia. for flex) hole is acceptable.

**Note:** With Dura-Vent, the minimum height is achieved by installing a 45° elbow directly to the rigid pipe adaptor.

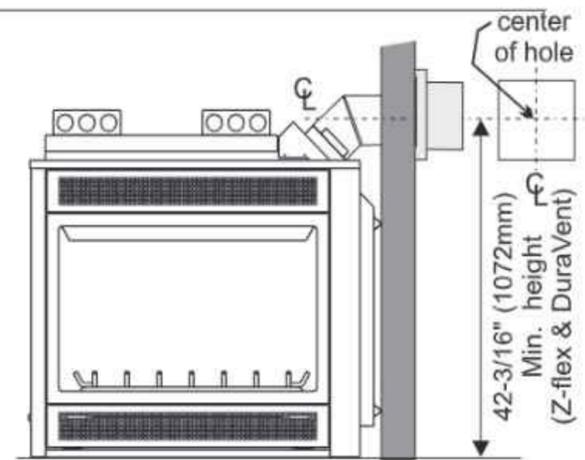

Note:

- a) The horizontal run of vent must be level, or have a 1/4 inch rise for every 1 foot of run towards the termination. Never allow the vent to run downward. This could cause high temperatures and may present the possibility of a fire.
  - b) The location of the horizontal vent termination on an exterior wall must meet all local and national building codes, and must not be blocked or obstructed. For External Vent Terminal Locations, see diagram in the "Exterior Vent Termination Locations" section.
- 6) The arrow on the vent cap should be pointing up. Insure that the 1-1/2" clearances to combustibles materials are maintained (Diagram 3 in the "Venting Arrangement - Horizontal Terminations" section) Install the termination cap.

The four wood screws provided should be replaced with appropriate fasteners for stucco, brick, concrete, or other types of sidings.

**Note:** If installing termination on a siding covered wall, a vinyl siding standoff or furring strips must be used to ensure that the termination is not recessed into the siding.

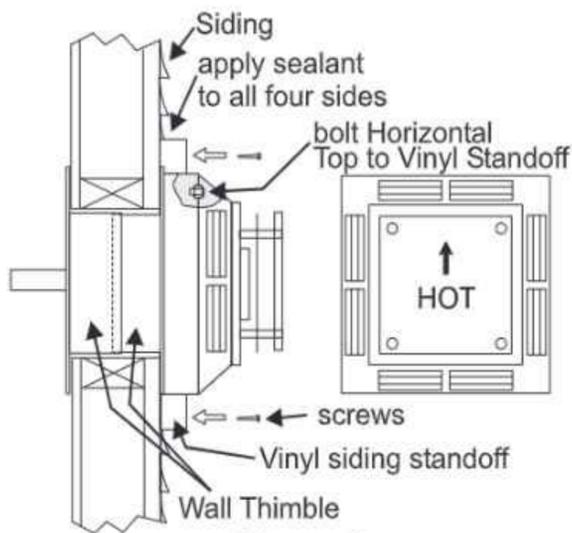


Diagram 3

- 7) Before connecting the horizontal run of vent pipe to the vent termination, slide the Wall Thimble over the vent pipe.
- 8) Slide the appliance and vent assembly towards the wall carefully inserting the vent pipe into the vent cap assembly. It is important that the vent pipe extends into the vent cap sufficient distance so as to result in a minimum pipe overlap of 1-1/4 inches. Secure the connection between the vent pipe and the vent cap by attaching the two sheet metal strips extending from the vent cap assembly into the outer wall of the vent pipe. Use the two sheet metal screws provided to connect the strips to the pipe section. See Diagram 4.
- 9) Install wall thimble in the center of the 10" square and attach with wood screws (Diagram 5).

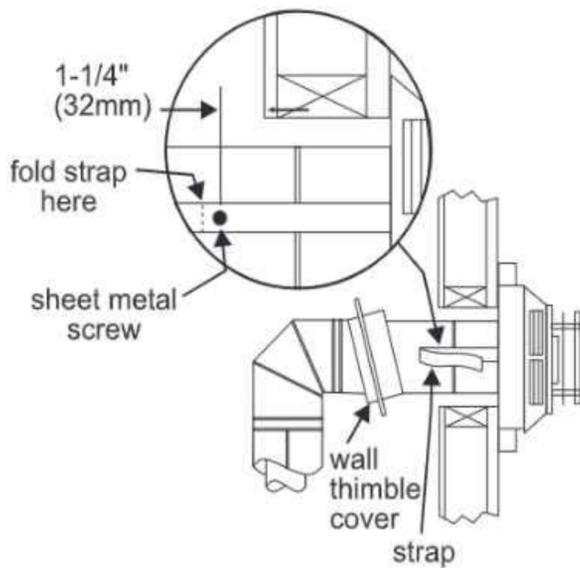


Diagram 4

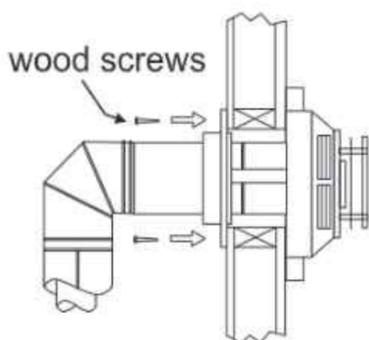


Diagram 5

### VERTICAL TERMINATIONS

- 1) Maintain the 1-1/4" clearances (air spaces) to combustibles when passing through ceilings, walls, roofs, enclosures, attic rafter, or other nearby combustible surfaces. Do not pack air spaces with insulation. Check the "Venting Arrangement" section for the maximum vertical rise of the venting system and the maximum horizontal offset limitations.
- 2) Set the gas appliance in its desired location. Drop a plumb bob from the ceiling to the position of the appliance flue exit, and mark the location where the vent will penetrate the ceiling. Drill a small hole at this point. Next, drop a plumb bob from the roof to the hole previously drilled in the ceiling, and mark the spot where the vent will penetrate the roof. Determine if ceiling joists, roof rafters or other framing will obstruct the venting system. You may wish to relocate the appliance or to offset, as shown in Diagram 2 to avoid cutting load bearing members.

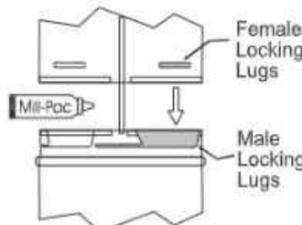
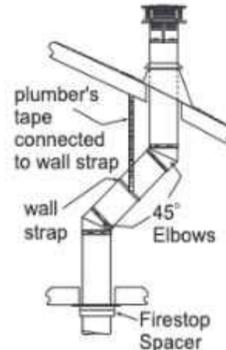
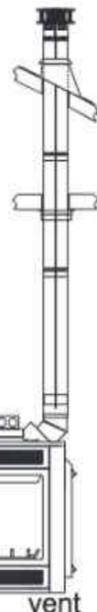


Diagram 2

**NOTE:** For best results and optimum performance with each approved venting system, it is highly recommended to apply "Mill-Pac" sealant (supplied) to every inner pipe connection. Failure to do so may result in drafting or performance issues not covered under warranty.

- 3) A Firestop spacer must be installed in the floor or ceiling of every level. To install the Firestop spacer in a flat ceiling or wall, cut a 10 inch square hole. Frame the hole as shown in Diagram 3 and install the firestop.

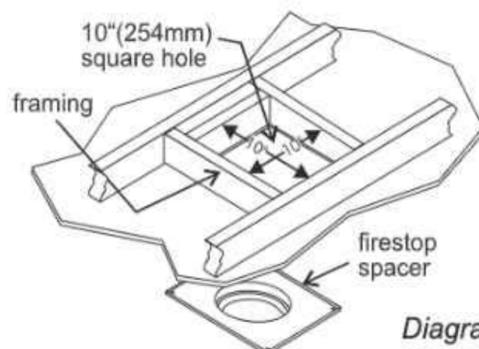


Diagram 3

- 4) Assemble the desired lengths of pipe and elbows. Ensure that all pipes and elbow connections are in the fully twist-locked position and sealed.
- 5) Cut a hole in the roof centered on the small drilled hole placed in the roof in Step 2. The hole should be of sufficient size to meet the minimum requirements for clearance to combustibles of 1-1/4". Slip the flashing under the shingles (shingles should overlap half the flashing) as per Diagram 4.

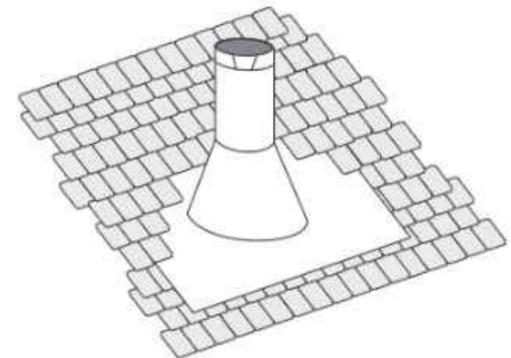


Diagram 4: The upper half of the flashing is installed under the roofing material and not nailed down until the chimney is installed. This allows for small adjustments.

- 6) Continue to assemble pipe lengths.

**Note:** If an offset is necessary in the attic to avoid obstructions, it is important to support the vent pipe every 3 feet, to avoid excessive stress on the elbows, and possible separation. Wall straps are available for this purpose (Diagram 2).

Galvanized pipe is desirable above the roofline due to its higher corrosion resistance. Continue to add pipe sections through the flashing until the height of the vent cap meets the minimum height requirements specified in Diagram

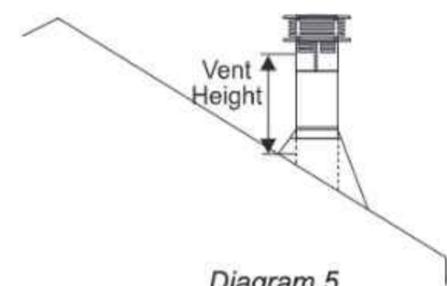


Diagram 5

| Roof Pitch          | Minimum Vent Height |        |
|---------------------|---------------------|--------|
|                     | Feet                | Meters |
| flat to 7/12        | 2                   | 0.61   |
| over 7/12 to 8/12   | 2                   | 0.61   |
| over 8/12 to 9/12   | 2                   | 0.61   |
| over 9/12 to 10/12  | 2.5                 | 0.76   |
| over 10/12 to 11/12 | 3.25                | 0.99   |
| over 11/12 to 12/12 | 4                   | 1.22   |
| over 12/12 to 14/12 | 5                   | 1.52   |
| over 14/12 to 16/12 | 6                   | 1.83   |
| over 16/12 to 18/12 | 7                   | 2.13   |
| over 18/12 to 20/12 | 7.5                 | 2.29   |
| over 20/12 to 21/12 | 8                   | 2.44   |

## 26 | installation


5 or local codes. Note that for steep roof pitches, the vertical height must be increased. A poor draft, or down drafting can result from high wind conditions near big trees or adjoining roof lines, in these cases, increasing the vent height may solve the problem.

- 7) Ensure vent is vertical and secure the base of the flashing to the roof with roofing nails, slide storm collar over the pipe section and seal with a mastic.
- 8) Install the vertical termination cap by twist-locking it.


**Note:** Any closets or storage spaces, which the vent passes through must be enclosed.

### Offset Chart

| GS 6"(152mm) Nominal Diameter ID |     |                 |      |        |      |
|----------------------------------|-----|-----------------|------|--------|------|
| Offset                           |     | Pipe Length (L) |      | Height |      |
| inches                           | mm  | inches          | mm   | inches | mm   |
| 4 3/4                            | 121 | 0               | 0    | 13 1/4 | 337  |
| 9                                | 229 | 6               | 152  | 17 1/2 | 445  |
| 11 1/4                           | 286 | 9               | 229  | 19 1/2 | 495  |
| 13 1/4                           | 337 | 12              | 305  | 21 3/4 | 552  |
| 21 3/4                           | 552 | 24              | 610  | 30 1/4 | 768  |
| 30 1/4                           | 768 | 36              | 914  | 39     | 991  |
| 38                               | 965 | 48              | 1219 | 47     | 1194 |

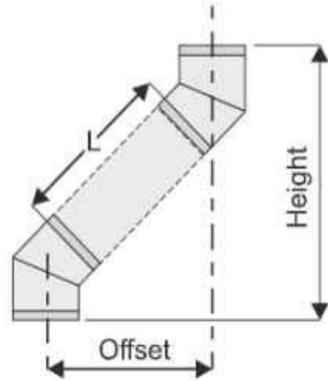

**Note:** To make the installation more aesthetically pleasing, we recommend framing out a square to mount the terminal to.

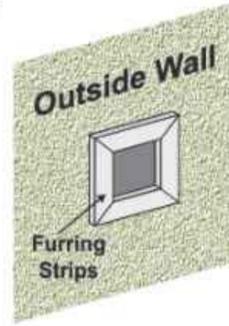

- 2) Level the fireplace and fasten it to the framing using nails or screws through the nailing strips.
- 3) Assemble the vent assembly by applying Mill Pac to the 4"(102mm) inner collar of the termination and slipping the 4"(102mm) liner over it at least 1-3/8" (35mm). Fasten with the 3 screws (drilling pilot holes will make this easier). Apply Mill Pac to the 6-7/8"(175mm) flex pipe and slip it over the 6-7/8" outer collar of the vent terminal at least 1-3/8"(35mm) and fasten with the 3 screws.

**NOTE:** Horizontal sections must be supported at intervals not exceeding 3 feet (0.9 meter). (Flame picture and performance will be affected by sags in the liner).

- 4) Separate the 2 halves of the wall thimble and securely fasten the one with the tabs to the outside wall making sure that the tabs are on top and bottom. Fasten the other thimble half to the inside wall. The thimble halves slip inside each other and can be adjusted for 2 x 4 or 2 x 6 walls. **The liners must slip over the collars a minimum of 1-3/8".**

- 5) Slip the assembled liner and termination assembly through the thimble making sure the termination cap faces up (there are markings on the cap that show which way is up). This will position the termination cap with proper down slope for draining water. Fasten the cap to the outer wall with the 4 supplied screws.
- 6) Pull the centre 4"(102mm) liner and outer 6-7/8"(175mm) liner out enough to slip over the flue collars of the fireplace. (You may wish to cut the liner shorter to make it more workable.) Do not bend liner more than 45°.
- 7) Apply Mill Pac over the fireplace inner collar and slip the 4"(102mm) liner down over it and attach with 3 supplied screws.
- 8) Do the same with the 6-7/8"(175mm) liner.
- 9) Apply a bead of silicone between the thimble and termination and around the outer edge of the terminal at the wall in order to keep the water out.

**IMPORTANT:** Do not locate termination hood where excessive snow or ice buildup may occur. Be sure to check vent termination area after snow falls, and clear to prevent accidental blockage of venting system. When using snow blowers, make sure snow is not directed towards vent termination area.


## INSTALLATION PROCEDURES

### for Regency® AstroCap™ Direct Vent System (Flex)

- 1) Locate the unit in the framing, rough in the gas. Locate the centerline of the termination and mark wall accordingly. Cut a 10"(254mm) hole in the wall (inside dimension).

**Note:** A 1-1/2"(38mm) clearance around the liner must be maintained except that only a 1" (25mm) clearance is needed at the termination end. We recommend framing a 10"(254mm) x 10"(254mm) (inside dimensions) hole to give structural rigidity for mounting the termination.

**Note:** If installing termination on a siding covered wall, furring strips must be used to ensure that the termination is not recessed into the siding.

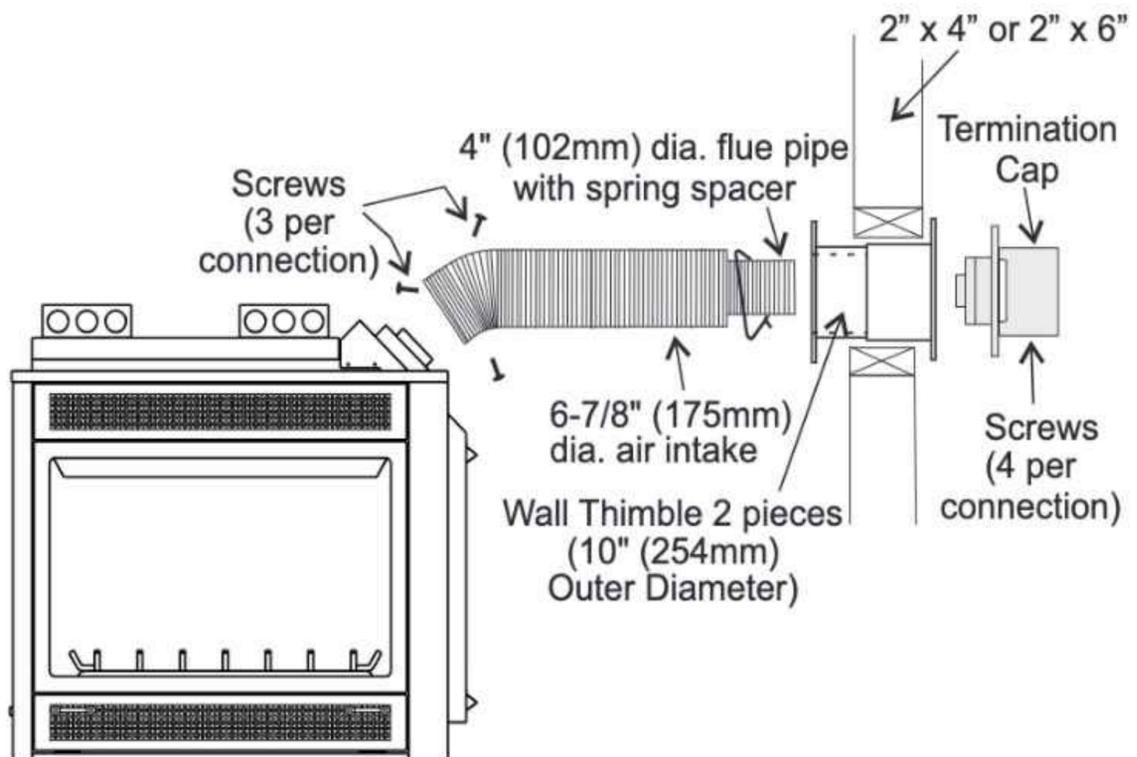

## VERTICAL TERMINATION

### 4" X 6-7/8" VENTING

1. Maintain the 1-1/2" (38 mm) clearance (air space) to combustibles when passing through ceilings, walls, floors, enclosures, attic rafters or other nearby combustibles. Do not pack air spaces with insulation. Check Venting sections for the maximum vertical rise of the venting system and the maximum horizontal offset limitations.

Ensure that you maintain clearances around enclosures, walls, below or above floors, floor joists, etc. Each appliance has different clearance requirements (top,sides,bottom). See specific appliance manual for details.

2. Set the appliance in its desired position. Drop a plumb bob down from the ceiling/floor joist to the position of the appliance flue exit and mark the location where the vent will penetrate the ceiling. Drill a small hole at this point. Next drop a plumb bob from the roof to the hole previously drilled at the ceiling level and mark the spot where the vent will penetrate the roof.
3. Cut a hole in the roof centered on the small hole placed in the roof in the previous steps. The hole should be a minimum of 10-1/4" (260 mm) inches. The hole may be round and or square.
4. Slip the flashing under the shingles and line up flashing so it is centered to the hole (shingles should overlap half of the flashing) as per Diagram 1.

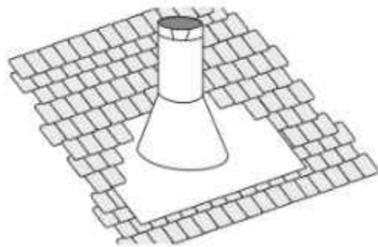


Diagram 1: The upper half of the flashing is installed under the roofing material and not nailed down until the chimney is installed. This allows for small adjustments.

Diagram 1

5. A ceiling firestop/firestop spacer must be installed when passing through each floor or ceiling level. To install the ceiling firestop/firestop spacer in a flat ceiling or floor joist cut a 10- 1/4" (260 mm) inch square hole. Frame the hole as show in Diagram 1 and install the ceiling firestop. Slide the top attic insulation spacer onto the top of the attic insulation shield/firestop - See Diagram 1a. Secure with 4 screws/nails. If more than one is required, these can be purchased separately.

**Note:** The ceiling firestop/firestop spacer may be cut down to size if this shield is too high for the application.

*Firestop spacer to prevent debris from falling into the ceiling firestop*

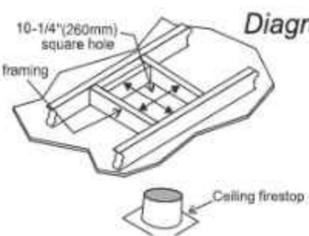


Diagram 2

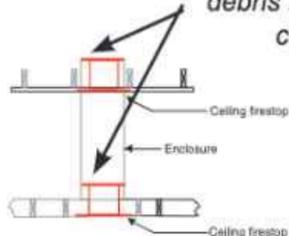


Diagram 2a

6. Determine the overall height of the chimney from the top of the appliance to the underside of the flashing. If required cut the flexible inner and outer pipe to the desired length up to a maximum of 20 feet (6.1 m).
7. Put a bead of Mill-Pac around the 4 inch (102 mm) collar on the appliance and slide the inner flex pipe over the inner collar of the appliance and secure with a minimum of 3 screws.
8. Install 4 inch spacers around 4 inch (102 mm) flex.
9. Repeat Step 7 to install the outer pipe to the outer collar of the appliance

**Note:** If an offset is necessary in the attic or floor joists it is important to support the vent pipe every 3 feet (0.91 m) to avoid excessive stress and sagging of the vent pipe. Wall straps are provided (3 in total) for this purpose. All round/plumbers strapping may also be used if further supports are required.

10. Attach the rigid pipe section to the adaptor by using Mill-Pac on the inner/ outer pipe. Use 3 screws to secure outer pipe.

11. Secure inner flex pipe to pipe adaptor by using Mill-Pac over the adaptor. Slide the inner pipe over adaptor and secure with 3 screws.

12. Repeat Step 11 to secure outer flex.

13. Slide the finished length up towards the flashing ensuring the length of pipe is a minimum of 2 feet (0,61 m) measured from the top of the roof. Level the chimney and secure using the roof support provided with kit to bottom side of the roof as shown using a minimum of 2 screws per side-see Diagram 3b. See Diagram 4 for roof pitch and height requirements. See Diagram 3a for securing method if 2 ft. (0,61 m) is insufficient and additional lengths are required, this may be purchased separately. See Simpson Duravent components list in the instruction manual for part numbers.

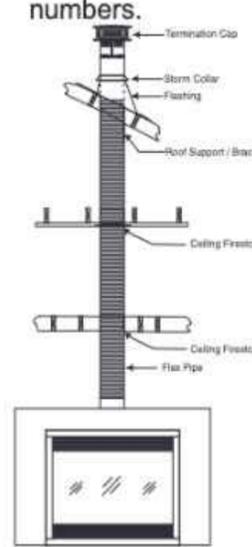


Diagram 3

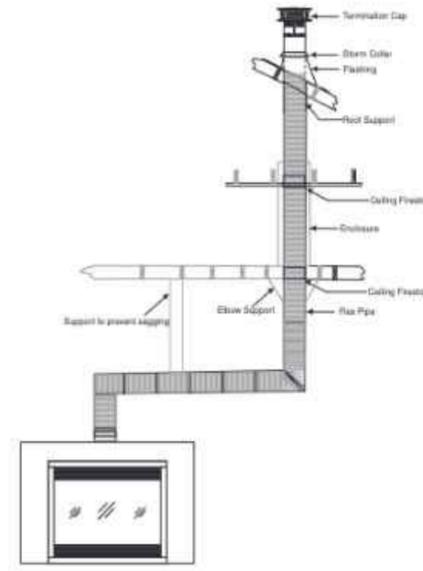


Diagram 3a

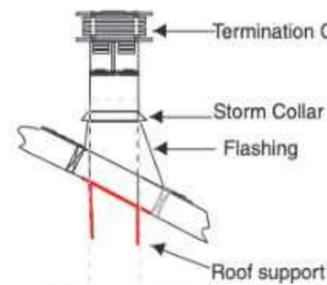


Diagram 3b

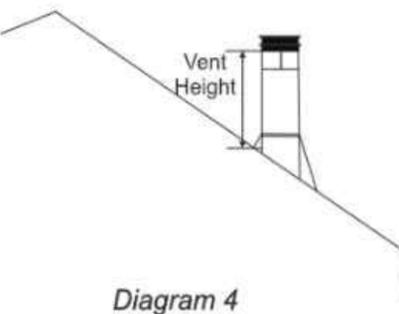


Diagram 4

| Roof Pitch          | Minimum Vent Height |        |
|---------------------|---------------------|--------|
|                     | Feet                | Meters |
| flat to 7/12        | 2                   | 0.61   |
| over 7/12 to 8/12   | 2                   | 0.61   |
| over 8/12 to 9/12   | 2                   | 0.61   |
| over 9/12 to 10/12  | 2.5                 | 0.76   |
| over 10/12 to 11/12 | 3.25                | 0.99   |
| over 11/12 to 12/12 | 4                   | 1.22   |
| over 12/12 to 14/12 | 5                   | 1.52   |
| over 14/12 to 16/12 | 6                   | 1.83   |
| over 16/12 to 18/12 | 7                   | 2.13   |
| over 18/12 to 20/12 | 7.5                 | 2.29   |
| over 20/12 to 21/12 | 8                   | 2.44   |

14. Put a bead of caulking on the exterior between the outer pipe and flashing to prevent water from penetrating the chimney system.

15. Slide storm collar over pipe length until it reaches the flashing.

16. Install termination cap by twist locking it.

17. Secure the flashing to the roof using screws

**Note:** Any closets or storage spaces which the vent passes through must be enclosed.

## VERTICAL FLUE EXTENSION KIT (PART #946-756)

### 20 foot (6.1 m) Flex pipe Extension

(Used in conjunction with the 946-755 Vertical Flex kit and 948-367/P flex to flex adaptor).

1. Stretch out both inner 4" (102 mm) and outer 6 7/8" (175 mm) pipe up to a maximum of 20 feet.

**Note** :The inner and outer pipes may be cut if only a short length is required.

2. Install spring spacers around 4" (102 mm) inner pipe as shown. Slide outer flex pipe over and all the way down the 4" pipe.
3. Apply a bead of Mill Pac around the perimeter of the 4" (102 mm) inner collar of the flex adaptor and slip the 4" (102 mm) inner flex pipe from the Vertical termination kit over the flex adaptor ensuring that the inner flex pipe overlaps the collar by at least 1-3/8" (35 mm). Fasten with 3 screws.
4. Apply a bead of Mill Pac around the perimeter of the 6-7/8" (175 mm) outer collar of the flue adaptor and slip it over the 6-7/8" (175 mm) outer flex pipe from the vertical termination kit ensuring that the outer flex pipe overlaps the collar by at least 1-3/8" (35 mm). Fasten with the 3 screws.
5. Repeat steps to secure the other end of the flex adaptor using the flex kit.
6. See Vertical Vent installation instructions for installation of the complete vent system.

**Note:** If an offset is necessary in the attic or floor joists it is important to support the vent pipe every 3 feet (0.91 m) to avoid excessive stress and sagging of the vent pipe. Wall straps are provided (3 in total) for this purpose.

All round/plumbers strapping may also be used if further supports are required.




## CEILING FIRESTOP / FIRESTOP SPACER (PART #946-757)

Used in conjunction with the 946-755 Vertical flex kit and 946-756 kit Vertical flex extension kit/Horizontal power vent kit.

A ceiling firestop/firestop spacer must be installed when passing through each floor or ceiling level. To install the ceiling firestop/firestop spacer in a flat ceiling or floor joist cut a 10- 1/4 inch square hole. Frame the hole as show in Diagram 1 and install the ceiling firestop. Slide the top attic insulation spacer onto the top of the attic insulation shield/firestop - See Diagram 1a. Secure with 4 screws/nails. If more than one is required, these can be purchased separately.

**Note:** The ceiling firestop/firestop spacer may be cut down to size if this shield is too high for the application.

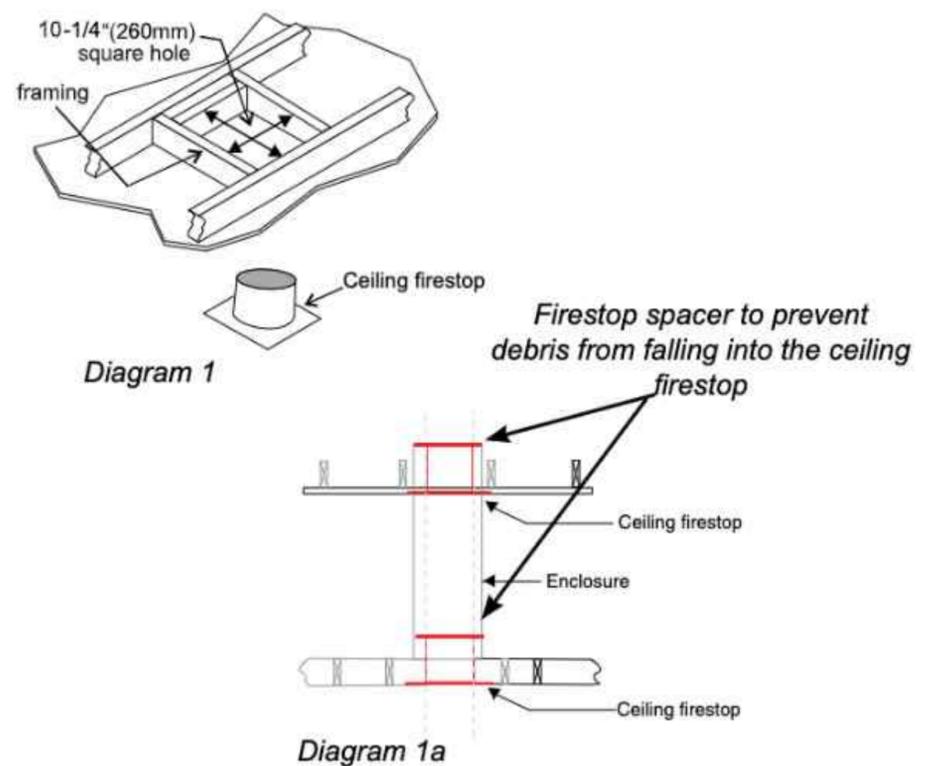

**CONVERSION FROM NG TO LP  
FOR P121-10/P131-10 USING SIT 829 NOVA GAS VALVE**

**THIS CONVERSION MUST BE DONE BY A QUALIFIED GAS FITTER  
IF IN DOUBT DO NOT DO THIS CONVERSION !!**

**Each Kit contains one LP Conversion Kit**

**LP Conversion Kit Contains:**

| Qty. | Part #  | Description                  |
|------|---------|------------------------------|
| 1    | 904-529 | 5/32" Allen Key              |
| 1    | 904-641 | Burner Orifice #50           |
| 1    | 918-590 | Decal "Converted to LPG"     |
| 1    | 908-528 | Red "LPG" label              |
| 1    | 910-037 | LPG Injector (Pilot Orifice) |
| 1    | 910-582 | LPG Stepper Motor            |
| 1    | 919-499 | Instruction Sheet            |

**Installation of LPG Conversion Kit:**

1. Remove the louvers and trim kit. Remove the safety screen and glass door.
2. Remove the logs, embers.
3. Remove the grate by lifting straight up. Remove the side brick panels (if installed). The **brick panel is very fragile - handle with care.**



Diagram 1

4. Remove the burner assembly by removing the 4 screws - then slide the burner assembly away from the orifice and lift out.

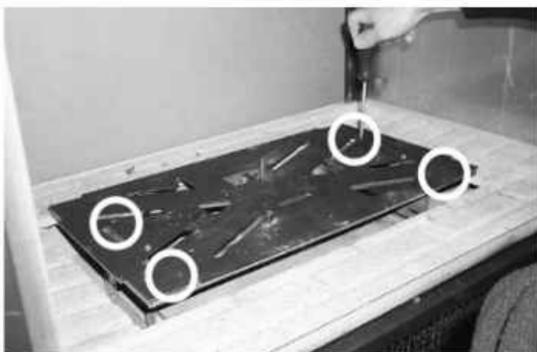


Diagram 1 and 2: Remove the left and right screws and then slide the burner assembly away from the orifice and lift out.



Diagram 2

5. Remove pilot clip below pilot cap.



Pilot Cap  
Clip  
Diagram 3

6. Pull off the pilot cap to expose the pilot orifice.



7. Unscrew the pilot orifice with the allen key and replace with the LPG pilot orifice in the kit and replace pilot cap.

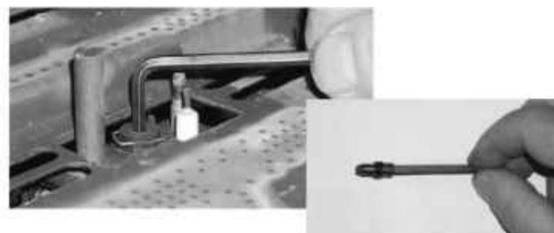


Diagram 4

**Installer Notice:  
These instructions must be left with the appliance.**

8. Remove burner orifice with a 1/2" wrench to hold onto the elbow behind the orifice and discard the orifice.



Burner Orifice  
Diagram 5

9. Reinstall new burner orifice LPG stamped #50 and tighten.

10. Turn control knob to the "OFF" position.

**WARNING!**

Also check that the pilot and main burner injectors are appropriate for the gas type.

11. Remove NG stepper motor by removing 3 screws in locations shown below—replace with LP stepper motor, secure in place with 3 screws.



Remove NG Stepper motor and replace with LP Stepper motor

12. Reverse steps 4) to 1).

13. Attach the label "This unit has been converted to LPG" near or on top of the serial # decal.

14. Replace yellow "NG" label with red "LPG" label.

15. Check for gas leaks.

16. Check inlet and outlet pressures.

17. Check operation of flame control.

18. Check for proper flame appearance and glow on logs.

| P121/P131-NG10 System Data  |                  |
|---|------------------|
| For 0 to 4500 feet altitude<br><b>Burner Inlet Orifice Sizes:</b> #31   |                  |
| <b>Max. Input Rating</b>  | 40,000 Btu/h     |
| <b>Min. Input Rating</b>  | 20,500 Btu/h     |
| <b>Supply Pressure</b>  | min.5.0" w.c.    |
| <b>Manifold Pressure (High)</b>   | 3.8"+/- 0.2"w.c. |
| <b>Log Set:</b> Ceramic fibre, 8 per set.   |                  |
| <b>Vent System:</b> Regency® Astrocap™, Regency® Direct Vent System (Flex) and Simpson Dura-Vent Direct Vent System |                  |

| P121/P131-LP10 System Data  |                  |
|---|------------------|
| Conversion Kit  |                  |
| For 0 to 4500 feet altitude<br><b>Burner Inlet Orifice Sizes:</b> #50   |                  |
| <b>Max. Input Rating</b>  | 39,000 Btu/h     |
| <b>Min. Input Rating</b>  | 20,600 Btu/h     |
| <b>Supply Pressure</b>  | min.12.0" w.c.   |
| <b>Manifold Pressure (High)</b>   | 11"+/- 0.2" w.c. |
| <b>Log Set:</b> Ceramic fibre, 8 per set.   |                  |
| <b>Vent System:</b> Regency® Astrocap™, Regency® Direct Vent System (Flex) and Simpson Dura-Vent Direct Vent System |                  |

### HIGH ELEVATION

This unit is approved in Canada for altitude 0 to 4500 ft. (CAN1 2.17-M91).

### GAS LINE INSTALLATION

The gas line can be brought through either the right, the left side or the bottom of the appliance. The gas valve is situated on the bottom of the unit.

The gas line connection may be made of rigid pipe, copper pipe or an approved flex connector. (If you are using rigid pipe, ensure that the valve can be removed for servicing.) Since some municipalities have additional local codes it is always best to consult with your local authorities and the CAN/CGA B149 installation code.


For USA installations follow local codes and/or the current National Fuel Gas Code, ANSI Z223.1. When using copper or flex connectors use only approved fittings. Always provide a union so that gas lines can be easily disconnected for servicing. Flare nuts for copper lines and flex connectors are usually considered to meet this requirement.

**Important: Always check for gas leaks with a soap and water solution or gas leak detector. Do not use open flame for leak testing.**


### PILOT ADJUSTMENT

Periodically check the pilot flames. **Correct flame pattern has three strong blue flames: 1 flowing around the thermopile, 1 around the thermocouple and 1 flowing across the burner (it does not have to be touching the burner).**

**Note:** If you have an incorrect flame pattern, contact your Regency® dealer for further instructions.

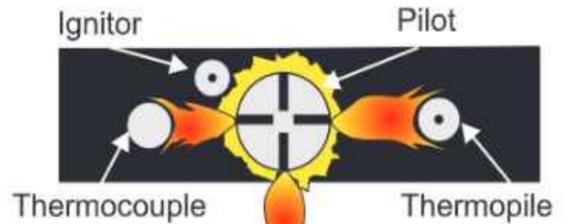


**Incorrect flame pattern will have small, probably yellow flames, not coming into proper contact with the rear burner or thermopile or thermocouple.**

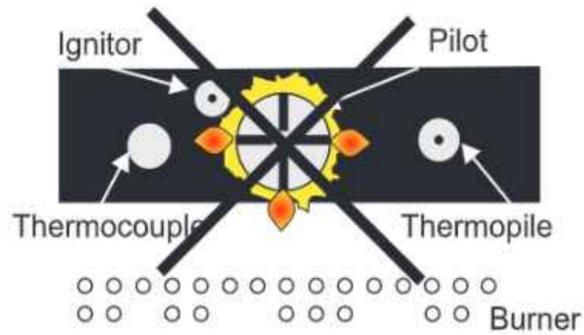

- 5) The pressure check should be carried out with the unit burning and the setting should be within the limits specified on the safety label.
- 6) When finished reading manometer, turn off the gas valve, disconnect the hose and tighten the screw (clockwise) with a 1/8" flat screwdriver. **Note: Screw should be snug, but do not over tighten.**

### SIT 829 VALVE DESCRIPTION

- 1) Gas on/off knob
- 2) Electronically Operated Hi/Lo
- 3) Pilot Adjustment
- 4) Thermocouple Connection - option
- 5) Outlet Pressure Tap
- 6) Inlet Pressure Tap
- 7) Pilot Outlet
- 8) Main Gas Outlet
- 9) Alternative TC Connection Point

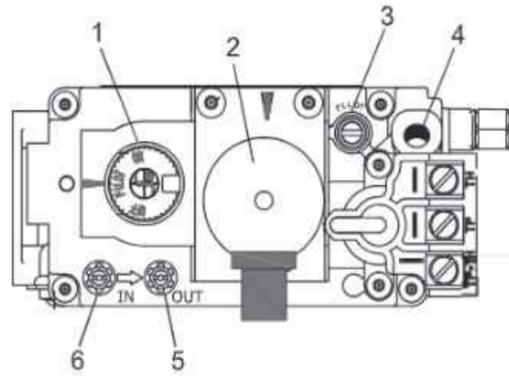


### GAS PIPE PRESSURE TESTING

The appliance must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig. (3.45 kPa). Disconnect piping from valve at pressures over 1/2 psig.

The manifold pressure is controlled by a regulator built into the gas control, and should be checked at the pressure test point.

**Note: To properly check gas pressure, both inlet and manifold pressures should be checked using the valve pressure ports on the valve.**

- 1) Make sure the valve is in the "OFF" position.
- 2) Loosen the "IN" and/or "OUT" pressure tap(s), turning counterclockwise with a 1/8" wide flat screwdriver.
- 3) Attach manometer to "IN" and/or "OUT" pressure tap(s) using a 5/16" ID hose.
- 4) Light the pilot and turn the valve to "ON" position.

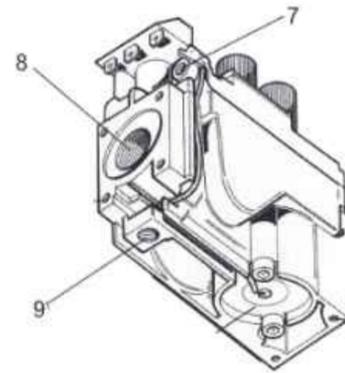

**WALL MOUNT ON / OFF SWITCH AND REMOTE RECEIVER INSTALLATION  
REQUIRED FOR ALL INSTALLATIONS - INCLUDING PROFLAME REMOTE CONTROLS**

**IMPORTANT INSTALLATION NOTE:**

The Receiver must be placed inside the supplied (Low Voltage) junction type wall box and installed into the wall only.

**DO NOT INSTALL WITHIN THE CONFINES OF THE FIREPLACE.**



**Remote Receiver Installation**

1. Install the low voltage junction box to the framing, at desired location within 10 ft. from fireplace.
2. Feed the 12 pin connector through the opening at back of junction box.
3. Connect the 12 pin connector to the back of the receiver.
4. Install the Receiver in the Low Voltage Junction box.
5. Insert the 4 AA type batteries in the battery compartment with the correct polarity.
6. Place the slider into the cover plate.
7. Put the Receiver switch in the "OFF" position, to allow correct lineup for slider switch.
8. Make sure the Receiver and cover plate words "ON" and "UP" are on the same side.
9. Align the slider with the switch on the Receiver and couple the switch into the slider.
10. Align the screw holes.
11. Using the two (2) screws provided secure the cover plate to the Receiver.



Low Voltage Junction Box

**Proflame Receiver**

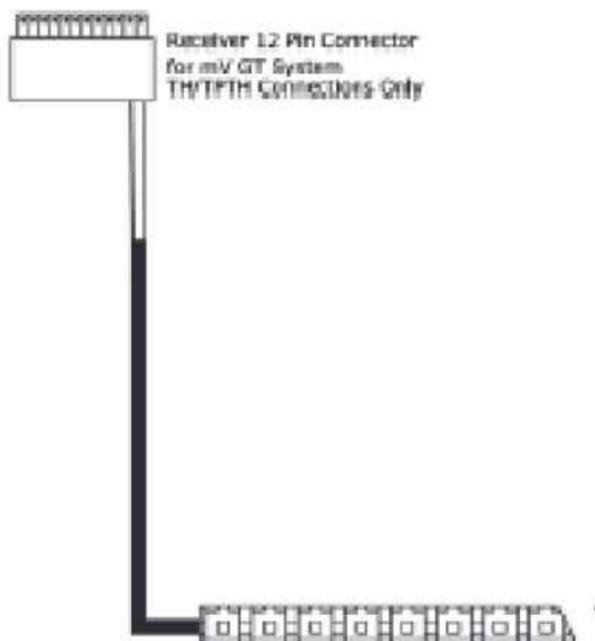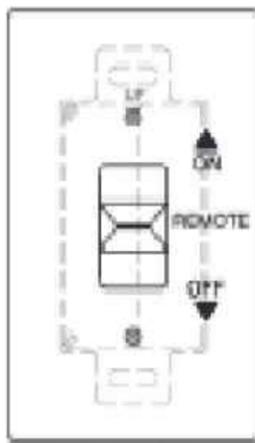

10 ft. wire harness with 12 pin connector

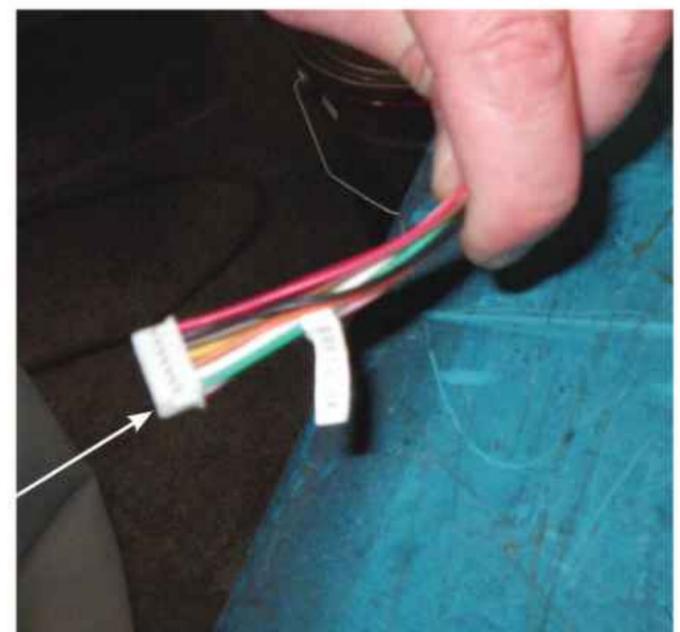
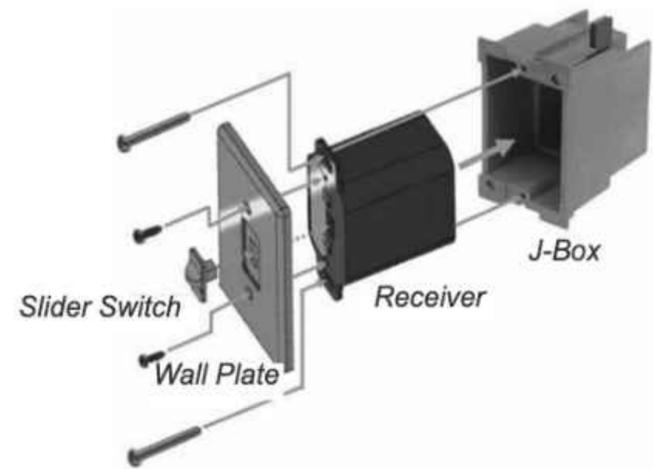


Diagram 1

## 32 | installation

### LOG SET INSTALLATION

Read the instructions below carefully and refer to the diagrams. If logs are broken do not use the unit until they are replaced. Broken logs can interfere with the pilot operation.

Log Kit # 360-930 contains the following pieces:

- a) 326 Front Right Log
- b) 327 Front Left Log
- c) 328 Middle Right Log
- d) 329 Middle Left Log
- e) Embers (902-154)
- f) Platinum Embers (946-669) - supplied with packaged manual


**Please note that there are 2 of each log. This log set is mirrored front and back.**



The 3-digit numbers (ie. 327) are molded into the rear of each log.

- 1) Carefully remove the logs from the box and unwrap them. The logs are fragile, handle with care - **do not force into position.**
- 2) Place embers on the burner as shown below.

Separate platinum embers and place on the burner over top of and around embers. Platinum embers can cover burner ports. Avoid stacking platinum embers.

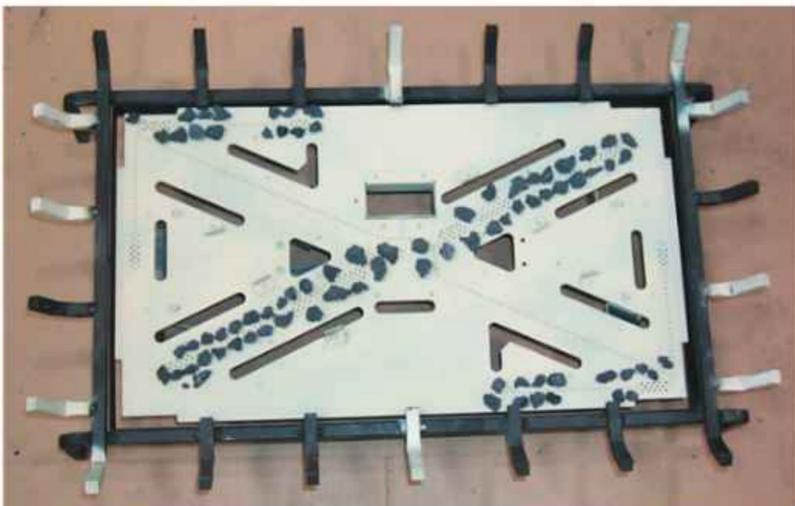

#### **IMPORTANT**


**When placing Embers, do not block burner ports as this can cause an incorrect flame pattern, carbon deposits and delayed ignition.**

- 3) Place Log 326 on the front right side of the burner. Ensure that the notches on the far right side of the log fit into the grate posts. Push back side of the left end of the log up against the tab on the burner.




*Push back side of the left end of the log up against the tab on the burner.*

Repeat step 3 on the opposite side of the burner.

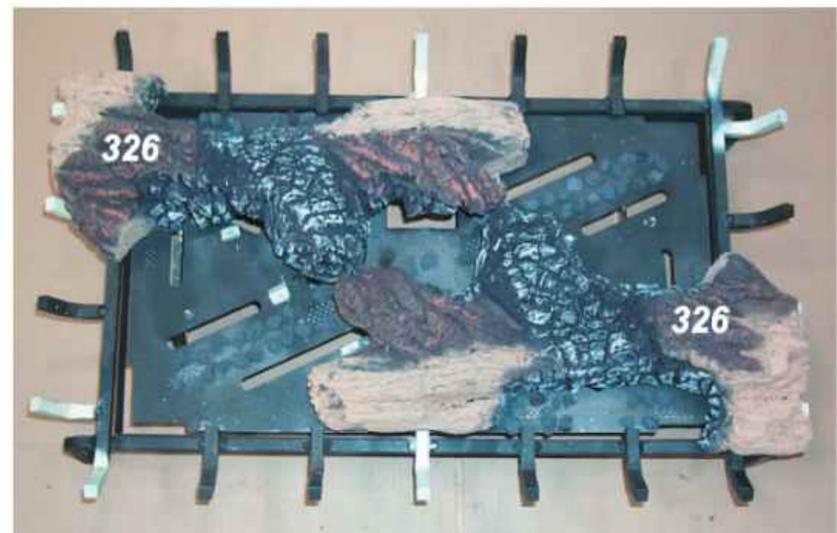

- 4) Place Log 327 on the front left side of the burner. Position the right end of the log in between the two tabs and the left end of the log into the grate post.

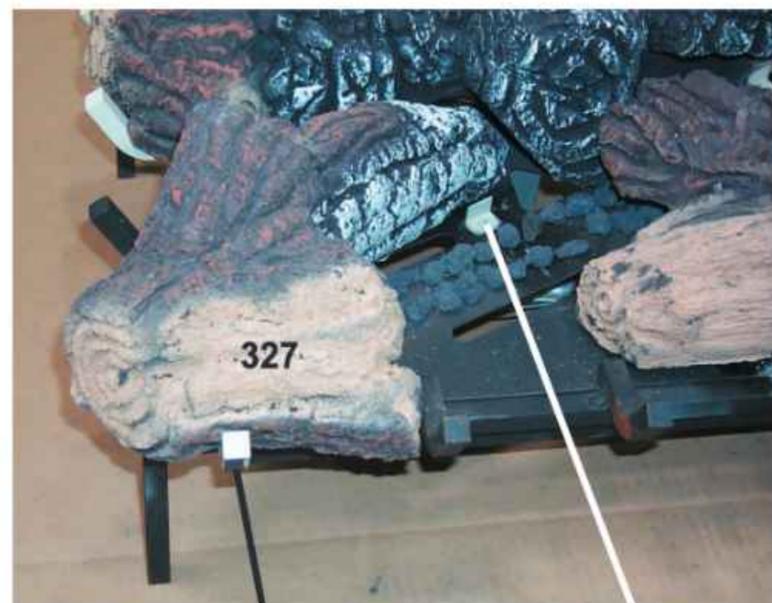

*Grate Post*

*Tab on Burner*

Repeat step 4 on the opposite side of the burner.



5) Place Log 329 on the middle left side of the burner. Rest the bottom of the Log onto the second grate post from the left. Ensure that the log fits into a pin that is on Log 326.



Grate Post

Pin

Repeat step 5 on the opposite side of the burner.



6) Place Log 328 on the middle right side of the burner. Ensure that the log fits over the 2nd grate post from the right.




Grate Post

Repeat step 6 on the opposite side of the burner.



Completed Log Set Installation:

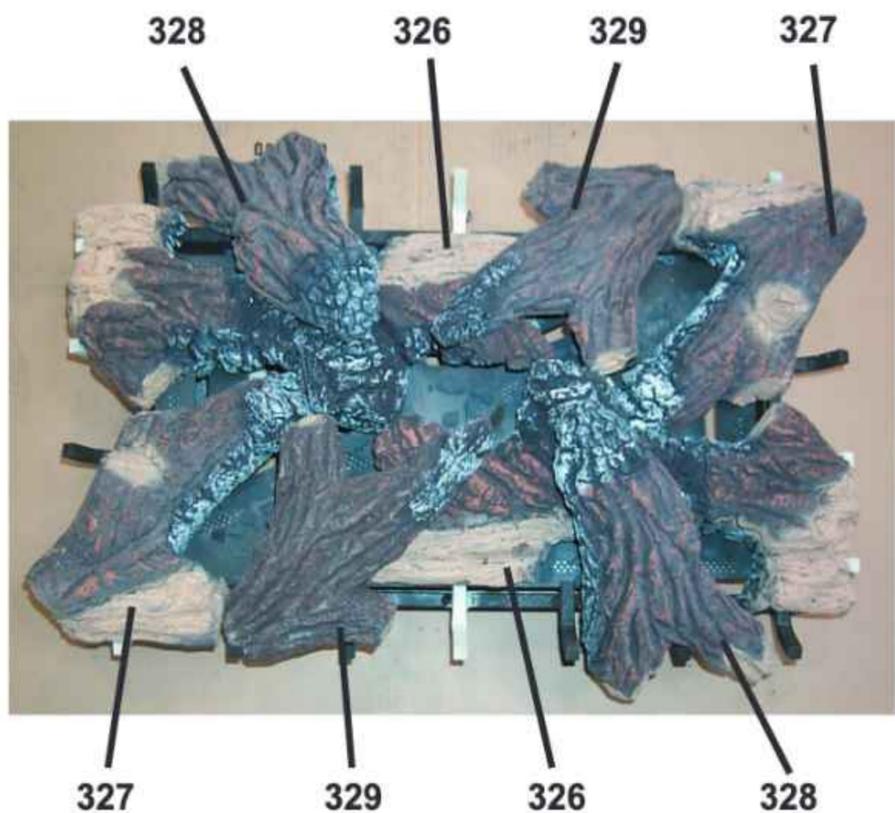

### SAFETY SCREEN REMOVAL

1. Remove upper and lower louvers if installed.
2. Loosen 2 screws in locations shown in Diagram 1.

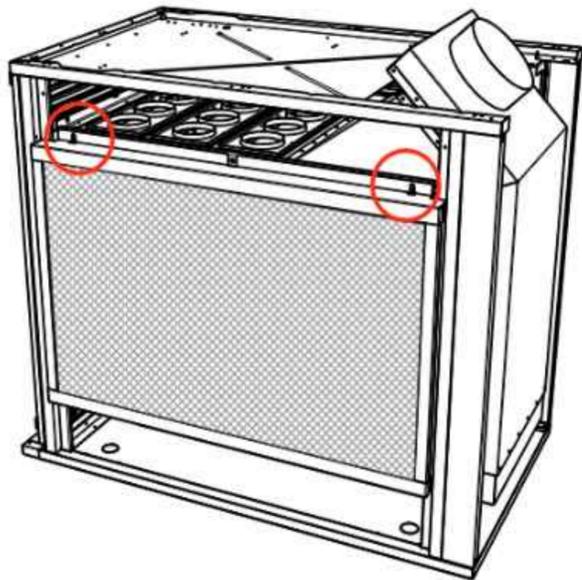


Diagram 1

3. Lift top bracket up and outward to remove as shown in Diagram 2.

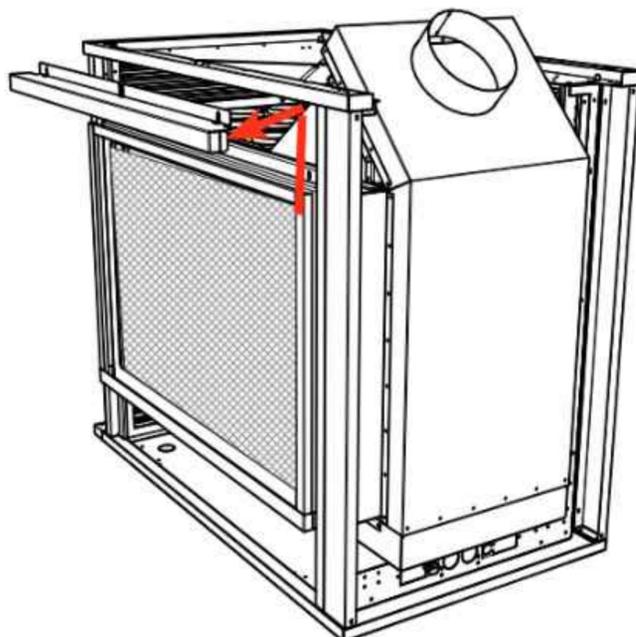


Diagram 2

4. Remove safety screen by lifting up and out.

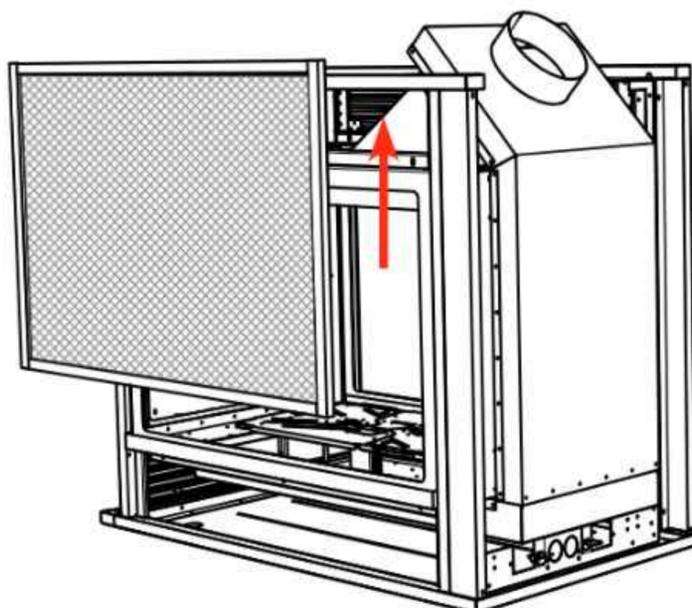


Diagram 3

5. Loosen the 2 screws as shown in locations shown in Diagram 4.

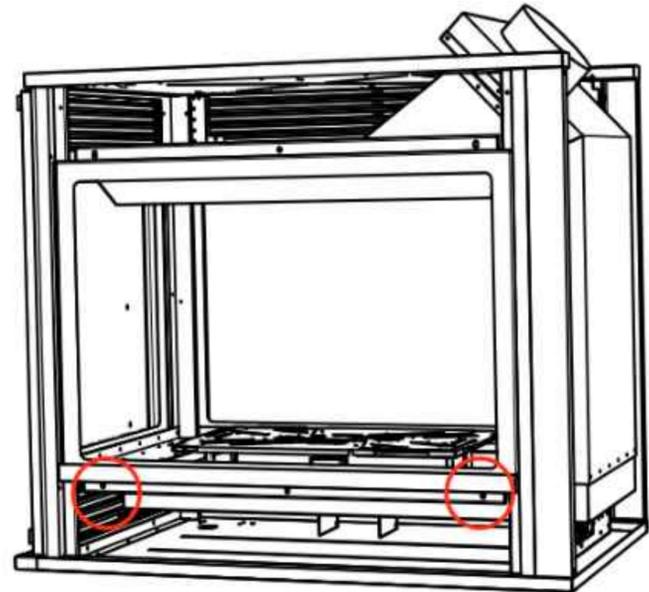


Diagram 4

6. Pull the bottom bracket down and outward to remove.

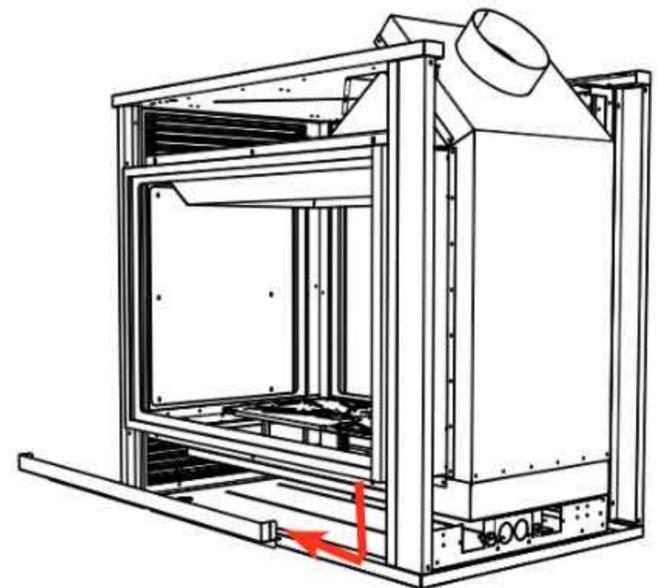


Diagram 5

7. To install—reverse steps.

## GLASS DOOR REMOVAL

- 1) Remove the 8 screws that secure the glass door.
- 2) Pull the door slightly out on an angle and then lift up and pull completely out.



- 3) P131: Remove the 6 screws that secure the glass door and repeat step 2.



## FINISHING TRIM

- 1) Slide the Side Finishing Trim up into the slot in the top flange of the fireplace. Push tight against the magnet at the base of the unit.



Slide Trim into slot.



Push trim tight against magnet.

- 2) Slide the Corner Finishing Trim up into the slot in the top flange of the fireplace. Push tight against the magnet at the base of the unit.



Slide Trim into slot.


Push trim tight against magnet.



## LOUVERS & GRILLS

- 1) Attach the screws provided to the top left and right corners.

**NOTE: Do not tighten the screw entirely, ensure that some room is left to be able to hang the grill or louver over the screw.**

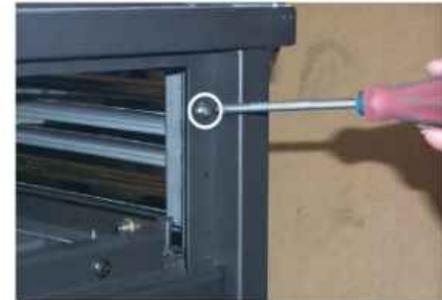

- 2) Hang the Top Louver or Grill onto the 2 screws in the top fireplace opening.



- 3) Attach the Bottom Louver or Grill to the hinges on the bottom flange of the fireplace.



- 4) Attach the screws provided to the top and bottom, left and right corners similar to step 1.

- 5) Hang the top and bottom louver or grill onto the screws in the top and bottom, left and right sides of the fireplace opening.



The Top and Bottom Side Louver or Grill is installed the same way.

### WALL THERMOSTAT (OPTIONAL)

A wall thermostat may be installed if desired, connect the wires as per the wiring diagram. Use the table below to determine the maximum wire length.

**Note:** Preferable if the thermostat is installed on an interior wall.

Regency offers an optional programmable thermostat but any 250-750 millivolt rated non-anticipator type thermostat that is CSA, ULC or UL approved may be used.

**CAUTION**  
Do not connect millivolt wall thermostat wires to 120V wire.

#### Thermostat Wire Table

| Recommended Maximum Lead Length (Two-Wire) When Using Wall Thermostat (CP-2 System) |             |
|---|-------------|
| Wire Size   | Max. Length |
| 14 GA.  | 50 Ft.      |
| 16 GA.  | 32 Ft.      |
| 18 GA.  | 20 Ft.      |
| 20 GA.  | 12 Ft.      |
| 22 GA.  | 9 Ft.       |

### DC SPARK IGNITER BATTERY INSTALLATION

Install the supplied battery into the DC Sparker Box by opening the battery compartment.

**NOTE:** The battery in the DC Sparker Box will need to be replaced annually.




## WIRING DIAGRAMS

No electrical power supply is required for the gas control to operate. 120 Volt AC power is needed for the fan switch and blower. The fan can be hard wired if desired. A terminal block is provided on the left hand side of the unit.

A three wire power cord can also be used and plugged into a suitable receptacle.


**(Do not cut the ground terminal off under any circumstances.)**

**Caution: Ensure that the wires do not touch any hot surfaces and are away from sharp edges.**

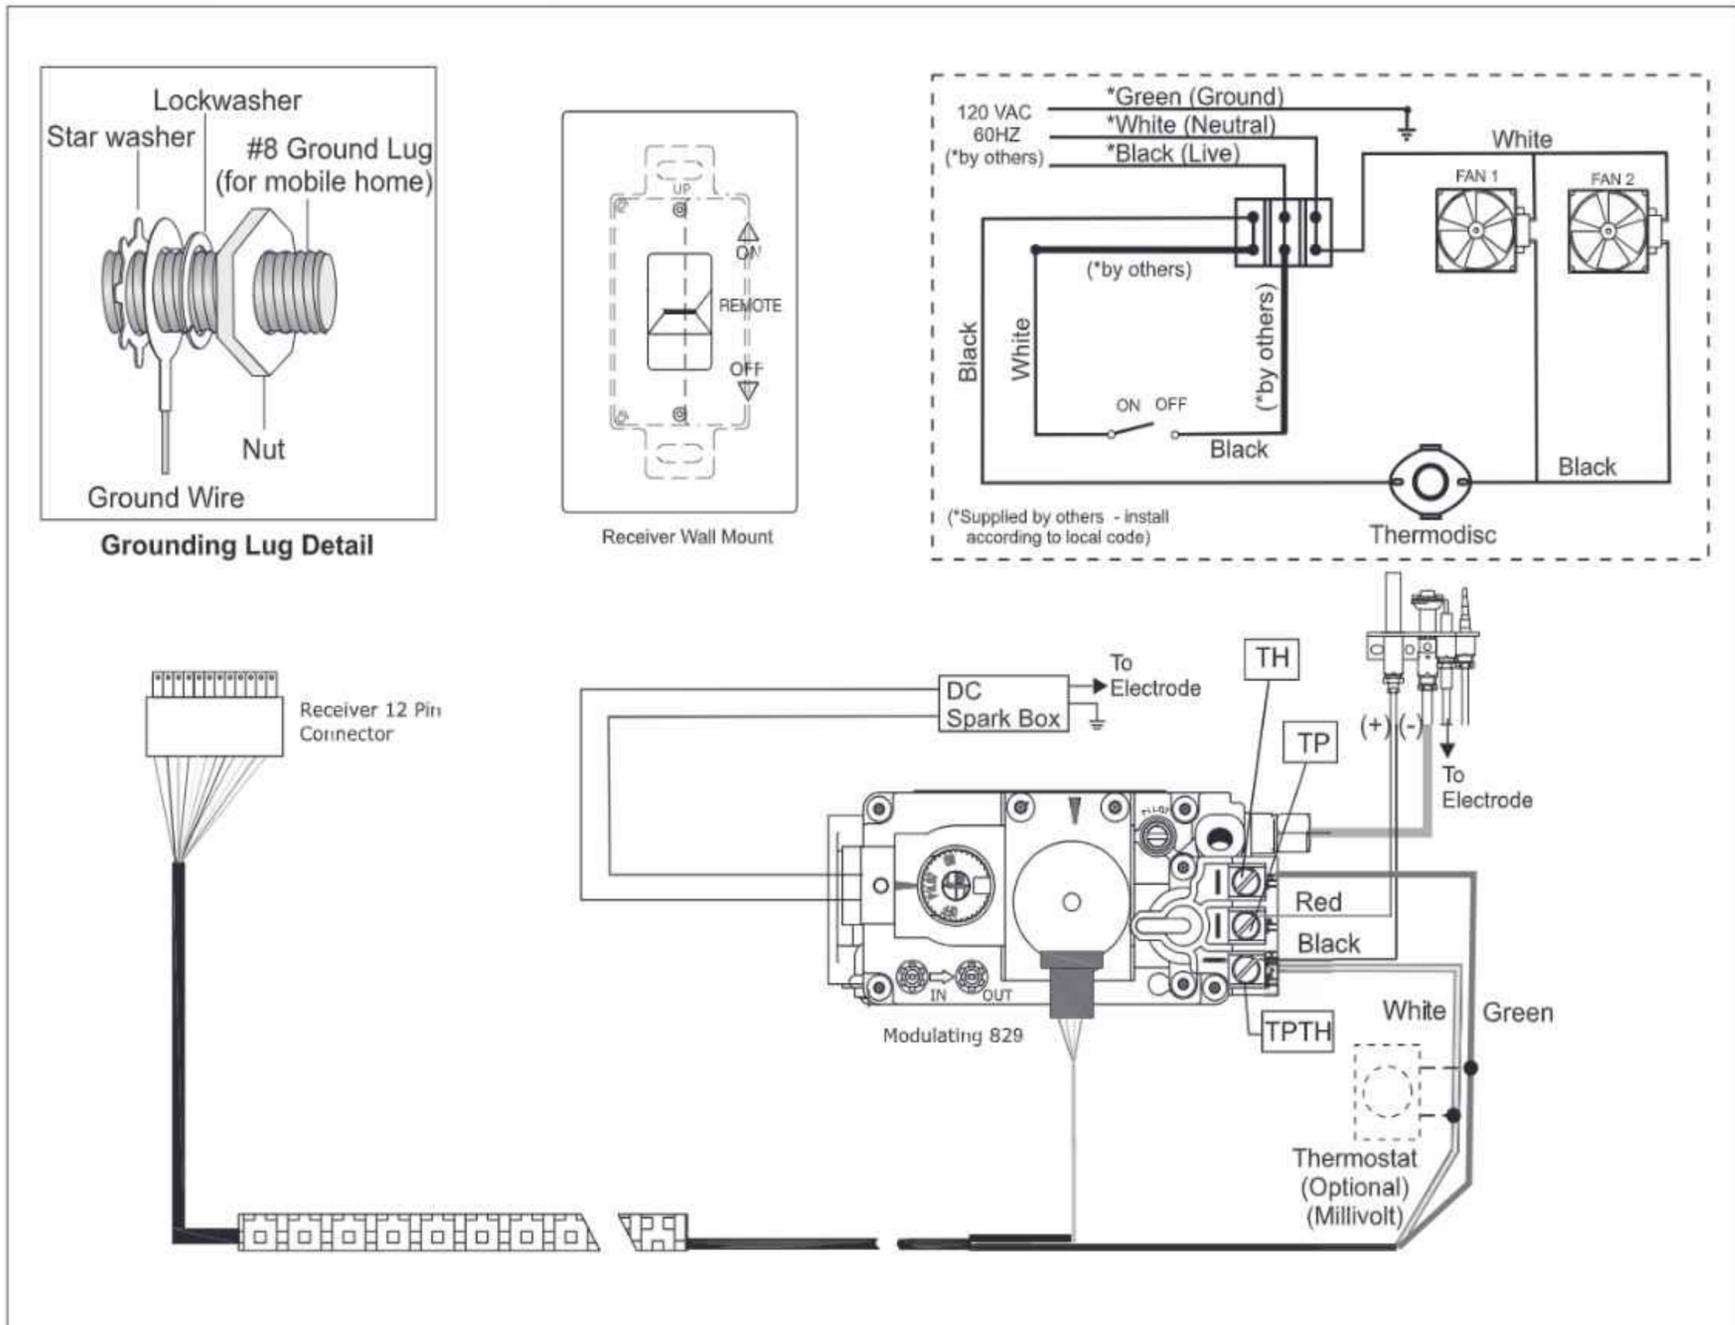

**CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.**

### Terminal Block Location

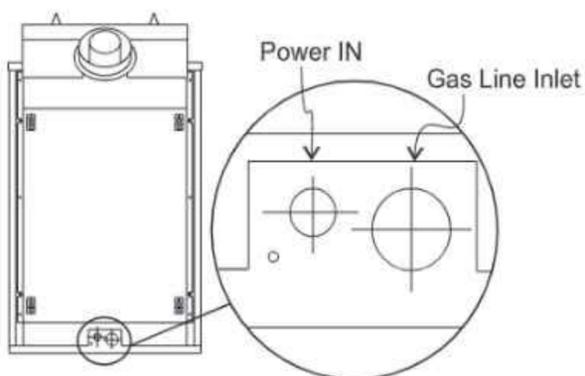

Terminal Block



Remove cover to access Terminal Block

## OPERATING INSTRUCTIONS

- 1) Read and understand these instructions before operating this appliance.
- 2) Check to see that all wiring is correct and enclosed to prevent possible shock.
- 3) Check to ensure there are no gas leaks.
- 4) Make sure the glass in the door frame is properly positioned. Never operate the appliance with the glass removed.
- 5) Verify that the venting and cap are unobstructed.
- 6) Ensure that the brick panels, if used, are installed.
- 7) Verify log placement. If the pilot cannot be seen when lighting the unit, the logs have been incorrectly positioned.
- 8) The unit should never be turned off, and on again without a minimum of a 60 second wait.
- 9) Hook up remote receiver to wire marked 'receiver' which will be located on the bottom of the appliance. This remote control requires coding. See remote control instructions for details.

**NOTE:** This appliance will operate during power outages. Only the fan will not operate until power is restored. If the remote batteries in both the handheld transmitter or receiver lose power, the appliance can still be operated by sliding the switch on the receiver switch from "Remote" to "ON". To turn on the appliance off slide the receiver switch from "ON" to "Remote" or "OFF".

**IMPORTANT:** The remote control system supplied with this appliance has several options for starting/operating the appliance, please read the remote control operating instructions (packed with remote control) to understand how to operate this remote system. Option to download remote functions video with QR code below.



Proflame video

## LIGHTING PROCEDURE

**IMPORTANT**  
Prior to igniting or re igniting the pilot, remove the glass door.

Important: If the pilot does not hold, turn pilot knob to "OFF" position. Wait 5 minutes to clear gas. If you smell gas - STOP! Follow the safety information above. If you don't smell gas, repeat Steps 1-6.

1. Push in gas control knob slightly and turn to "PILOT" position.
2. Push in control knob all the way and hold in until the pilot lights up. Continue to hold the control knob in for about 20 seconds after the pilot is lit. Release knob.
3. Push in gas control knob slightly and turn to "ON" position.
4. Ensure the receiver is in the remote position.

Set Switch to Remote



Diagram 1

5. Press and release the ON/OFF button on the remote handheld transmitter. An audible beep should be heard from the receiver.

ON/OFF Button



Diagram 2

Remote shown in Manual Mode on Hi

6. The unit will turn on.

## SHUTDOWN PROCEDURE

1. Press "OFF" on the remote or slide receiver switch from remote to "OFF".
2. Turn the gas control knob to the "OFF" position to turn off the pilot.

Pilot may be shut off during prolonged non use periods to conserve fuel.

## AERATION ADJUSTMENT


The air shutter can be adjusted by moving the adjusting wire up or down. The wire is accessed through the bottom louver opening. Open the air shutter for a blue flame or close for a yellow flame. The burner aeration is factory set but may need adjusting due to either the local gas supply or altitude.

Minimum Air Shutter Opening:

|       |             |
|-------|-------------|
| 3/16" | Natural Gas |
| 3/8"  | Propane     |

**CAUTION:** Carbon will be produced if air shutter is closed too much.

**Note:** Any damage due to carboning resulting from improperly setting the aeration controls is NOT covered under warranty.

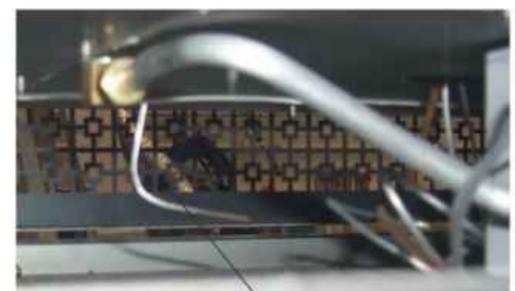

Adjustment Wire - Push to close or pull to open aeration cap.

**Closed - Tall yellow**  
**Open - Short Blue**

**Note:** Aeration Adjustment should only be performed by an authorized Regency® Installer at the time of installation or service.

## COPY OF THE LIGHTING PLATE INSTRUCTIONS

FOR YOUR SAFETY READ BEFORE LIGHTING

This appliance must be installed in accordance with local codes, if any; if none, follow the National Fuel Gas Code, ANSI Z223.1/NFPA 54, or Natural Gas and Propane Installation Codes, CSA B149.1.

**WARNING:** If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to the owner's information manual provided with this appliance. For assistance or additional information consult a qualified installer, service agency or gas supplier.

**AVERTISSEMENT :** Le non-respect des instructions du présent manuel risque de déclencher un incendie ou une explosion pouvant entraîner des dégâts matériels ou des blessures pouvant être mortelles.

Une mauvaise installation, un mauvais réglage, une altération ou un entretien mal effectué peut entraîner des dégâts matériels ou des blessures. Reportez-vous au manuel d'utilisation fourni avec cet appareil. Pour obtenir de l'aide ou des informations supplémentaires consulter un installateur ou un service d'entretien qualifié, ou le fournisseur de gaz.

A) This appliance is equipped with an ignition device which automatically lights the pilot. Do not try to light the pilot by hand.

B) **BEFORE OPERATING** smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch, do not use any phone in your building.
- Immediately call your gas supplier from a neighbours phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

C) Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and replace any part of the control system and any gas control which has been underwater.

A) Cet appareil est muni d'un dispositif d'allumage qui allume automatiquement la veilleuse. Ne tentez pas d'allumer la veilleuse manuellement.

B) **AVANT LA MISE EN MARCHÉ**, renifllez tout autour de l'appareil pour déceler une odeur de gaz. Renifllez au niveau du plancher, car certains gaz sont plus lourds que l'air et peuvent s'accumuler au niveau du sol.

QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ :

- Ne tentez pas d'allumer d'appareil
- Ne touchez à aucun interrupteur; n'utilisez pas de téléphones se trouvant dans le bâtiment.
- Appelez immédiatement votre fournisseur de gaz depuis un téléphone extérieur. Suivez les instructions du fournisseur.
- Si vous ne pouvez pas rejoindre le fournisseur, appelez le service incendie.

C) N'utilisez pas cet appareil s'il a été plongé dans l'eau, même partiellement. Faites inspecter l'appareil par un technicien qualifié et remplacez tout élément du système de contrôle ou de commande qui a été plongé dans l'eau.

**CAUTION:** Hot while in operation. Do not touch. Severe Burns may result. Due to high surface temperatures keep children, clothing and furniture, gasoline and other liquids having flammable vapors away. Keep burner and control compartment clean. See installation and operating instructions accompanying appliance.

LIGHTING INSTRUCTIONS

**Important:** If the pilot does not hold, turn pilot knob to "OFF" position. Wait 5 minutes to clear gas. If you smell gas - STOP! Follow the safety information above. If you don't smell gas, repeat Steps 1-6.

- 1) Push in gas control knob slightly and turn to "PILOT" position.
- 2) Push in control knob all the way and hold in until the pilot lights up. Continue to hold the control knob in for about 20 seconds after the pilot is lit. Release knob.
- 3) Push in gas control knob slightly and turn to "ON" position.
- 4) Ensure the receiver is in the remote position.
- 5) Press and release the ON/OFF button on the remote handheld transmitter. An audible beep should be heard from the receiver.
- 6) The unit will turn on.

**Important :** Si la veilleuse ne reste pas allumée, mettre le bouton de la veilleuse sur "OFF". Attendre 5 minutes pour laisser le gaz se dissiper. Si vous sentez du gaz, ARRÊTEZ ! Suivre les consignes de sécurité ci-dessus. Si vous ne sentez pas de gaz, répétez les opérations 1 à 6.

- 1) Appuyer légèrement sur le bouton de contrôle de gaz et mettre sur la position "PILOT".
- 2) Maintenir appuyé le bouton de contrôle jusqu'à ce que la veilleuse s'allume, puis pendant les 20 secondes qui suivent l'allumage. Relâcher le bouton.
- 3) Appuyer légèrement sur le bouton de contrôle de gaz et mettre sur la position "ON".
- 4) S'assurer que le récepteur est sur la position "Remote".
- 5) Maintenir puis relâcher le bouton ON/OFF de la télécommande manuelle. Le récepteur émettra un "bip".
- 6) L'appareil s'allume.

TO TURN OFF GAS APPLIANCE

- 1) Press "OFF" on the remote or slide receiver switch from remote to "OFF".
- 2) Turn the gas control knob to the "OFF" position to turn off the pilot. Pilot may be shut off during prolonged non use periods to conserve fuel.

- 1) Appuyer sur le bouton "OFF" de la télécommande ou positionner l'interrupteur du récepteur sur "OFF".
- 2) Mettre le bouton de contrôle de gaz sur "OFF" pour éteindre la veilleuse. Pour économiser le carburant, éteindre la veilleuse quand l'appareil reste longtemps inutilisé.

DO NOT REMOVE THIS INSTRUCTION PLATE

919-456

## FIRST FIRE

The **FIRST FIRE** in your heater is part of the paint curing process. To ensure the paint is properly cured, it is recommended you burn your fireplace for at least four (4) hours the first time.

When first operated, the unit will release an odour caused by the curing of the paint and the burning off of any oils remaining from manufacturing. Smoke detectors in the house may go off at this time. Open a few windows to ventilate the room for a couple of hours. The glass may require cleaning.

**NOTE:** When the glass is cold and the appliance is lit, it may cause condensation and fog the glass. This condensation is normal and will disappear in a few minutes as the glass heats up.

**DO NOT ATTEMPT TO CLEAN THE GLASS WHILE IT IS STILL HOT!**

**DO NOT BURN THE UNIT WITHOUT THE GLASS DOOR IN PLACE.**

During the first few fires, a white film may develop on the glass front as part of the curing process. The glass should be cleaned after the unit has cooled down or the film will bake on and become very difficult to remove. Use a non-abrasive cleaner and **DO NOT ATTEMPT TO CLEAN THE GLASS WHILE IT IS HOT.**

## NORMAL OPERATING SOUNDS OF GAS APPLIANCES

It is possible that you will hear some sounds from your gas appliance. This is perfectly normal due to the fact that there are various gauges and types of steel used within your appliance. Listed below are some examples. All are **normal operating sounds** and should not be considered as defects in your appliance.

### Blower:

Regency® gas appliances use high tech blowers to push heated air farther into the room. It is not unusual for the fan to make a "whirring" sound when ON.

### Burner Tray:

The burner tray is positioned directly under the burner tube(s) and logs and is made of a different gauge material from the rest of the firebox and body. Therefore, the varying thicknesses of steel will expand and contract at slightly different rates which can cause "ticking" and "cracking" sounds. You should also be aware that as there are temperature changes within the unit these sounds will likely re-occur. Again, this is normal for steel fireboxes.

### Blower Thermodisc:

When this thermally activated switch turns ON it will create a small "clicking" sound. This is the switch contacts closing and is normal.

### Pilot Flame:

While the pilot flame is on it can make a very slight "whisper" sound.

### Gas Control Valve:

As the gas control valve turns ON and OFF, a dull clicking sound may be audible, this is normal operation of a gas regulator or valve.

### Unit Body/Firebox:

Different types and thicknesses of steel will expand and contract at different rates resulting in some "cracking" and "ticking" sounds will be heard throughout the cycling process.

## MAINTENANCE INSTRUCTIONS

- 1) Always turn off the gas valve before cleaning. For relighting, refer to lighting instructions. Keep the burner and control compartment clean by brushing and vacuuming at least once a year. When cleaning the logs, use a soft clean paint brush as the logs are fragile and easily damaged.
- 2) Clean appliance and door with a damp cloth (never when unit is hot). Never use an abrasive cleaner. The glass should be cleaned with a gas fireplace glass cleaner. **The glass should be cleaned when it starts looking cloudy.**
- 3) The heater is finished in a heat resistant paint and should only be refinished with heat resistant paint. Regency® uses StoveBright Paint - Metallic Black #6309.
- 4) Make a periodic check of burner for proper position and condition. Visually check the flame of the burner periodically, making sure the flames are steady; not lifting or floating. If there is a problem, call a qualified service person.
- 5) The appliance and venting system must be inspected before use, and at least annually, by a qualified field service person, to ensure that the flow of combustion and ventilation air is not obstructed.

**Note: Never operate the appliance without the glass properly secured in place.**

- 6) Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
- 7) In the event this appliance has been serviced check that the vent-air system has been properly resealed & reinstalled in accordance with the manufacturer's instructions.
- 8) Verify operation after servicing.

### General Vent Maintenance

Conduct an inspection of the venting system semi-annually. Recommended areas to inspect as follows:

- 1) Check the Venting System for corrosion in areas that are exposed to the elements. These will appear as rust spots or streaks, and in extreme cases, holes. These components should be replaced immediately.
- 2) Remove the Cap, and shine a flashlight down the Vent. Remove any bird nests, or other foreign material.
- 3) Check for evidences of excessive condensation, such as water droplets forming in the inner

liner, and subsequently dripping out the joints, Continuous condensation can cause corrosion of caps, pipe, and fittings. It may be caused by having excessive lateral runs, too many elbows, and exterior portions of the system being exposed to cold weather.

- 4) Inspect joints, to verify that no pipe sections or fittings have been disturbed, and consequently loosened. Also check mechanical supports such as Wall Straps, or plumbers' tape for rigidity.

---

## LOG REPLACEMENT

The unit should never be used with broken logs. Turn off the gas valve and allow the unit to cool before opening door and carefully remove the logs. (The pilot light generates enough heat to burn someone.) If for any reason a log should need replacement, you must use the proper replacement log. The position of these logs must be as shown in the diagrams under Log Installation.

**Note: Improper positioning of logs may create carbon build-up and will severely alter the unit's performance which is not covered under warranty.**

---

## THERMOPILE / THERMOCOUPLE

- 1) Open the Bottom Louvers or Grills. Remove the Top Louver or Grill.
- 2) Remove the Trim Kit, Safety Screen, Glass Door, Log Set, Grate and Burner Assembly (see the "Log Installation" & "Glass Door Removal" sections).
- 3) Disconnect thermocouple by loosening nut from the valve with a 9mm wrench. Disconnect thermopile by loosening 2 screws marked TP on the valve.
- 4) Remove 2 screws from the pilot assembly and pull up far enough to be able to loosen the thermocouple or thermopile with a 7/16" wrench. NOTE: the pilot line is very fragile, use caution when pulling it up.
- 5) Drop the thermocouple or thermopile down through the extrusion and pull it out of the unit.
- 6) Reinstall the new ones in reverse order.

---

## GLASS GASKET

If the glass gasket requires replacement use a tadpole glass gasket (Part # 936-155).

## DOOR GLASS

Your Regency® fireplace is supplied with high temperature 5mm-Tempered glass & 5mm-Ceramic glass. If your glass requires cleaning, we recommend using an approved glass cleaner available at all authorized dealers. Do not use abrasive materials.

### CAUTION & WARNINGS:

- \* Do not clean when the glass is hot.
- \* The use of substitute glass will void all product warranties.
- \* Care must be taken to avoid breakage of the glass.
- \* Do not strike or abuse the glass.
- \* Do not operate this fireplace without the glass front or with a cracked or broken glass front.
- \* Wear gloves when removing damaged or broken glass.
- \* Replacement of the glass panels should be done by a licensed or qualified service person.

### GLASS REPLACEMENT

In the event that you break your glass by impact, purchase your replacement from an authorized Regency dealer only. Replacement glass is shipped already installed into the door frame. Reinstall as per Glass Door Installation in the "Glass Door Removal" section.

### REPLACEMENT PARTS:

Front Door - Tempered (Part# 360-528)  
 Side Door - Tempered (Part# 360-529)  
 Front Door - Ceramic (Part# 360-946)Optional

**REMOVING VALVE**


- 1) Shut off the gas and electrical supply.
- 2) Remove the louvers and trim kit. Remove the safety screen and glass door.
- 3) Remove the logs, embers.
- 4) Remove the grate by lifting straight up.



- 5) Remove the side brick clip in the top of the firebox and then slide the Side Brick Panel out. **The brick panels are very fragile - handle with care.**



- 6) Remove the burner by removing the 4 screws.

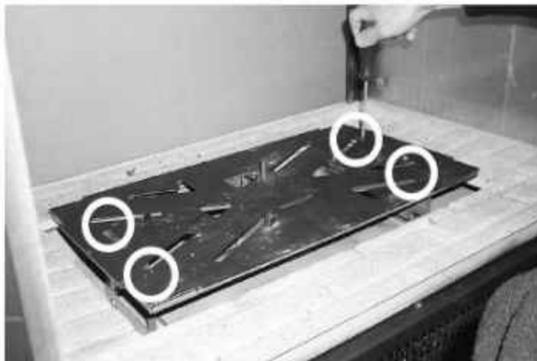

- 7) Slide the burner assembly away from the orifice and lift out.



- 8) Remove the Side Base Brick Panels and finally the Long Base Brick Panels.




Remove Left & Right Side Base Brick Panels



Remove the 2 Long Base Brick Panels

- 9) Disconnect the inlet gas line.
- 10) Disconnect the 2 TP wires and the 2 TH wires from the valve.
- 11) Remove the 16 Phillips head screws securing the valve tray.

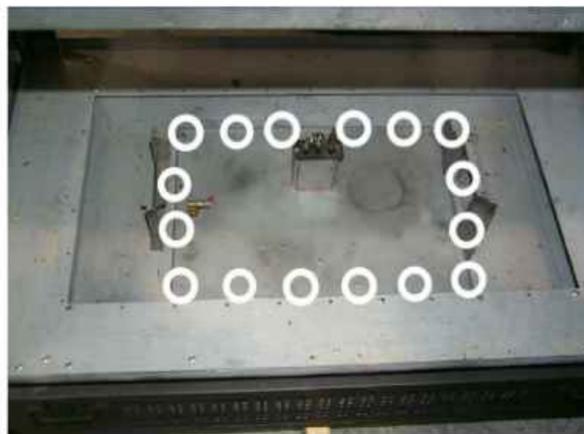

- 12) Lift the entire assembly out.



- 13) Undo the pilot tube from the valve with a 7/16" wrench.
- 14) Undo the quick drop out thermocouple nut on the valve with a 9mm (metric) wrench.
- 15) Remove the DC sparker assembly.
- 16) Undo the "gas out" flare nut with a 13/16" wrench.
- 17) Undo the "gas out" flare fitting with an 11/16" wrench.
- 18) Remove the 6 Phillips head screws from the sides of the valve bracket and remove valve.

**Hint:** *If you are using black pipe, ensure that there is a union by the valve, otherwise removal will be almost impossible.*

## INSTALLING VALVE


- 1) Attach the valve to the valve bracket with the 6 (m5x8 metric) screws provided.
- 2) Reconnect the "gas out" flare fitting with an 11/16" wrench.
- 3) Reconnect the "gas out" flare nut with a 13/16" wrench.
- 4) Install DC sparker assembly.
- 5) Reconnect the quick drop out thermocouple nut with a 9mm wrench.
- 6) Reconnect the pilot tube nut with a 7/16" wrench.
- 7) Scrape off the old gasket from the floor of the firebox and from the valve tray assembly.
- 8) Install a new gasket and reinstall the valve tray assembly.

**Note: Failure to install a new gasket may severely affect the appliance performance.**

- 9) Reinstall the 16 hold down screws.
- 10) Hook up the 2 TP and 2 TH wires to the appropriate connections on the valve.
- 11) Reinstall the Burner Assembly.
- 12) Hook up the gas line and check for gas leaks with a soap and water solution or a gas leak detector. (Do not use open flame for leak testing.)
- 13) Fire up the unit temporarily
- 14) Check the manifold pressure.
- 15) Reinstall the logs, grate and brick panels as needed.
- 16) Reinstall the glass doors.
- 17) Fire up the unit again and check for proper flame appearance.

## FAN REPLACEMENT

- 1) Shut off power.
- 2) Remove top louvers.
- 3) Unplug power wires.
- 4) Remove 4 screws securing fan to mounting bracket.

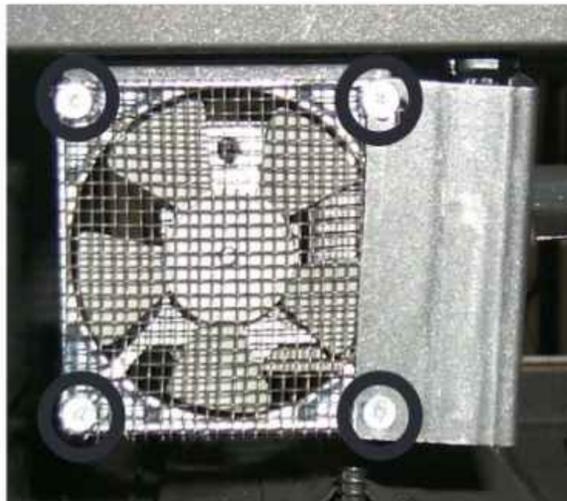


- 5) Remove 2 connector wires.



*Connector wires*

- 6) Replace fan.
- 7) Repeat for opposite side/corner.
- 8) Reverse steps 1 - 5 for installation.
- 9) To remove the thermodisc, located at the back center of the unit, slide the thermodisc/cover assembly away from the bracket clip on the under side of the firebox. Reverse for installation. Ensure that no wires will touch hot surfaces.

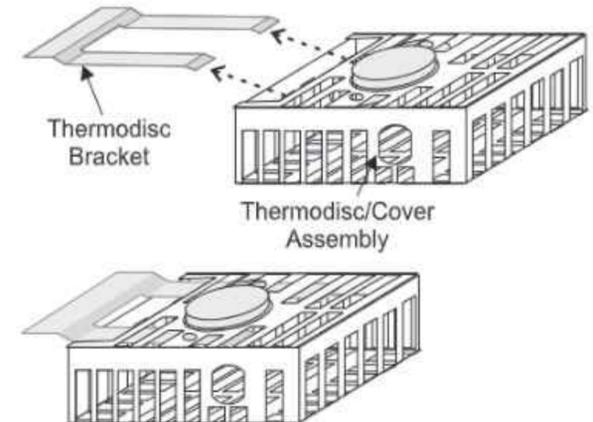

## GAS APPLIANCE MAINTENANCE

In order for your Regency appliance to continue to provide comfort to your home periodic maintenance must be performed to ensure it is operating at peak efficiency. The items in the list should be checked by a licensed gas service technician during the annual service check. Your unit may require more frequent maintenance checks if you notice any changes in how it operates. Operational changes to look for can include, but are not limited to, extended start up time, increased fan noise, residue/carbon build up, white build up on the glass/firebox, increased operating noise etc. Should any of these or other conditions arise, discontinue use and schedule a service check with your local licensed gas technician. The list below shows items your licensed service technician will need to check and service at least annually.

### Clean

- Glass
- Interior bricks / panels
- Burner ports & burner air shutter
- Fan blades
- Log set
- Pilot orifices
- Pilot hood (change as needed)
- Flame sensor (electronic ignition models)
- Flame electrode
- Burner orifice
- Thermocouple (millivolt models)
- Thermopile (millivolt models)

### Inspect

- Pilot assembly
- Burner
- Pressure relief gaskets/doors
- Flue connector gasket if present
- Door seal
- Firebox
- Venting
- Batteries (remote handheld, remote receiver, DC sparker, change as needed)
- Burner media (change as needed)
- Air shutter setting
- Wiring

### Check

- Voltage on thermocouple/thermopile (millivolt models)
- Ohms reading on flame sense (electronic ignition models)
- Inlet/outlet fuel pressures as per rating plate
- Voltage/ohms readings on gas valve
- Ohms reading to on/off switch circuit (Millivolt models)

### Gas Leak Tests


- Check main gas line connection to valve
- Check shut off valve connections
- Check connection at gas valve outlet
- Check connection at main burner orifice
- Check pilot fuel line at valve and at pilot assembly

**P121-10 (SEE THRU) MAIN ASSEMBLY**

|     | Part #  | Description                          |
|-----|---------|--------------------------------------|
| 1.  | 360-528 | Door Assy Front - Tempered           |
|     | 360-946 | Door Assy Front - Ceramic (Optional) |
| 2.  | 360-529 | Door Assy Side - Tempered            |
| 5.  | 363-000 | Safety Screen (Each)                 |
| 6.  | 363-002 | Horizontal bracket (Each)            |
| **  | 363-004 | Vertical Bracket (Each)              |
| 9.  | 360-046 | Nailing Strip - Top - Front          |
| 10. | 360-047 | Nailing Strip - Top - Side           |
| 11. | 430-001 | Standoff - Top                       |
| 17. | 360-086 | Gasket - Relief Door                 |
| 24. | *       | Relief Door Assembly                 |
| 32. | 362-528 | Brick Panel Base (Set of 4)          |
| 34. | 902-603 | Brick Panel - Std. Red (Side)        |

|      | Part #  | Description                      |
|------|---------|----------------------------------|
| 135. | 360-069 | Heat Shield - Side               |
| 146. | 360-033 | Left Side Door Trim              |
|      | 360-034 | Right Side Door Trim             |
| 150. | 360-123 | Magnet Bracket - Front           |
| 151. | 904-258 | Magnet                           |
|      |         |                                  |
| 168. | 360-068 | Door Cover Assembly - Side       |
|      |         |                                  |
| 171. | 360-920 | Louver Front - Black (set)       |
|      | 360-924 | Louver Front - Black/Steel (set) |


|                                       | Part #  | Description                    |
|---------------------------------------|---------|--------------------------------|
| 181.                                  | *       | Extension Trim - See Thru      |
|                                       |         |                                |
| 204.                                  | 360-940 | Dec. Grill Front - Black (set) |
|                                       |         |                                |
| 205.                                  | 948-216 | Regency® Logo Plate            |
| 206.                                  | 910-171 | Fan Axial 115V                 |
|                                       |         |                                |
| 207.                                  | 910-142 | Thermodisc                     |
|                                       |         |                                |
|                                       | 919-498 | Manual                         |
|                                       |         |                                |
| *Not available as a replacement part. |         |                                |
| **Not Shown                           |         |                                |

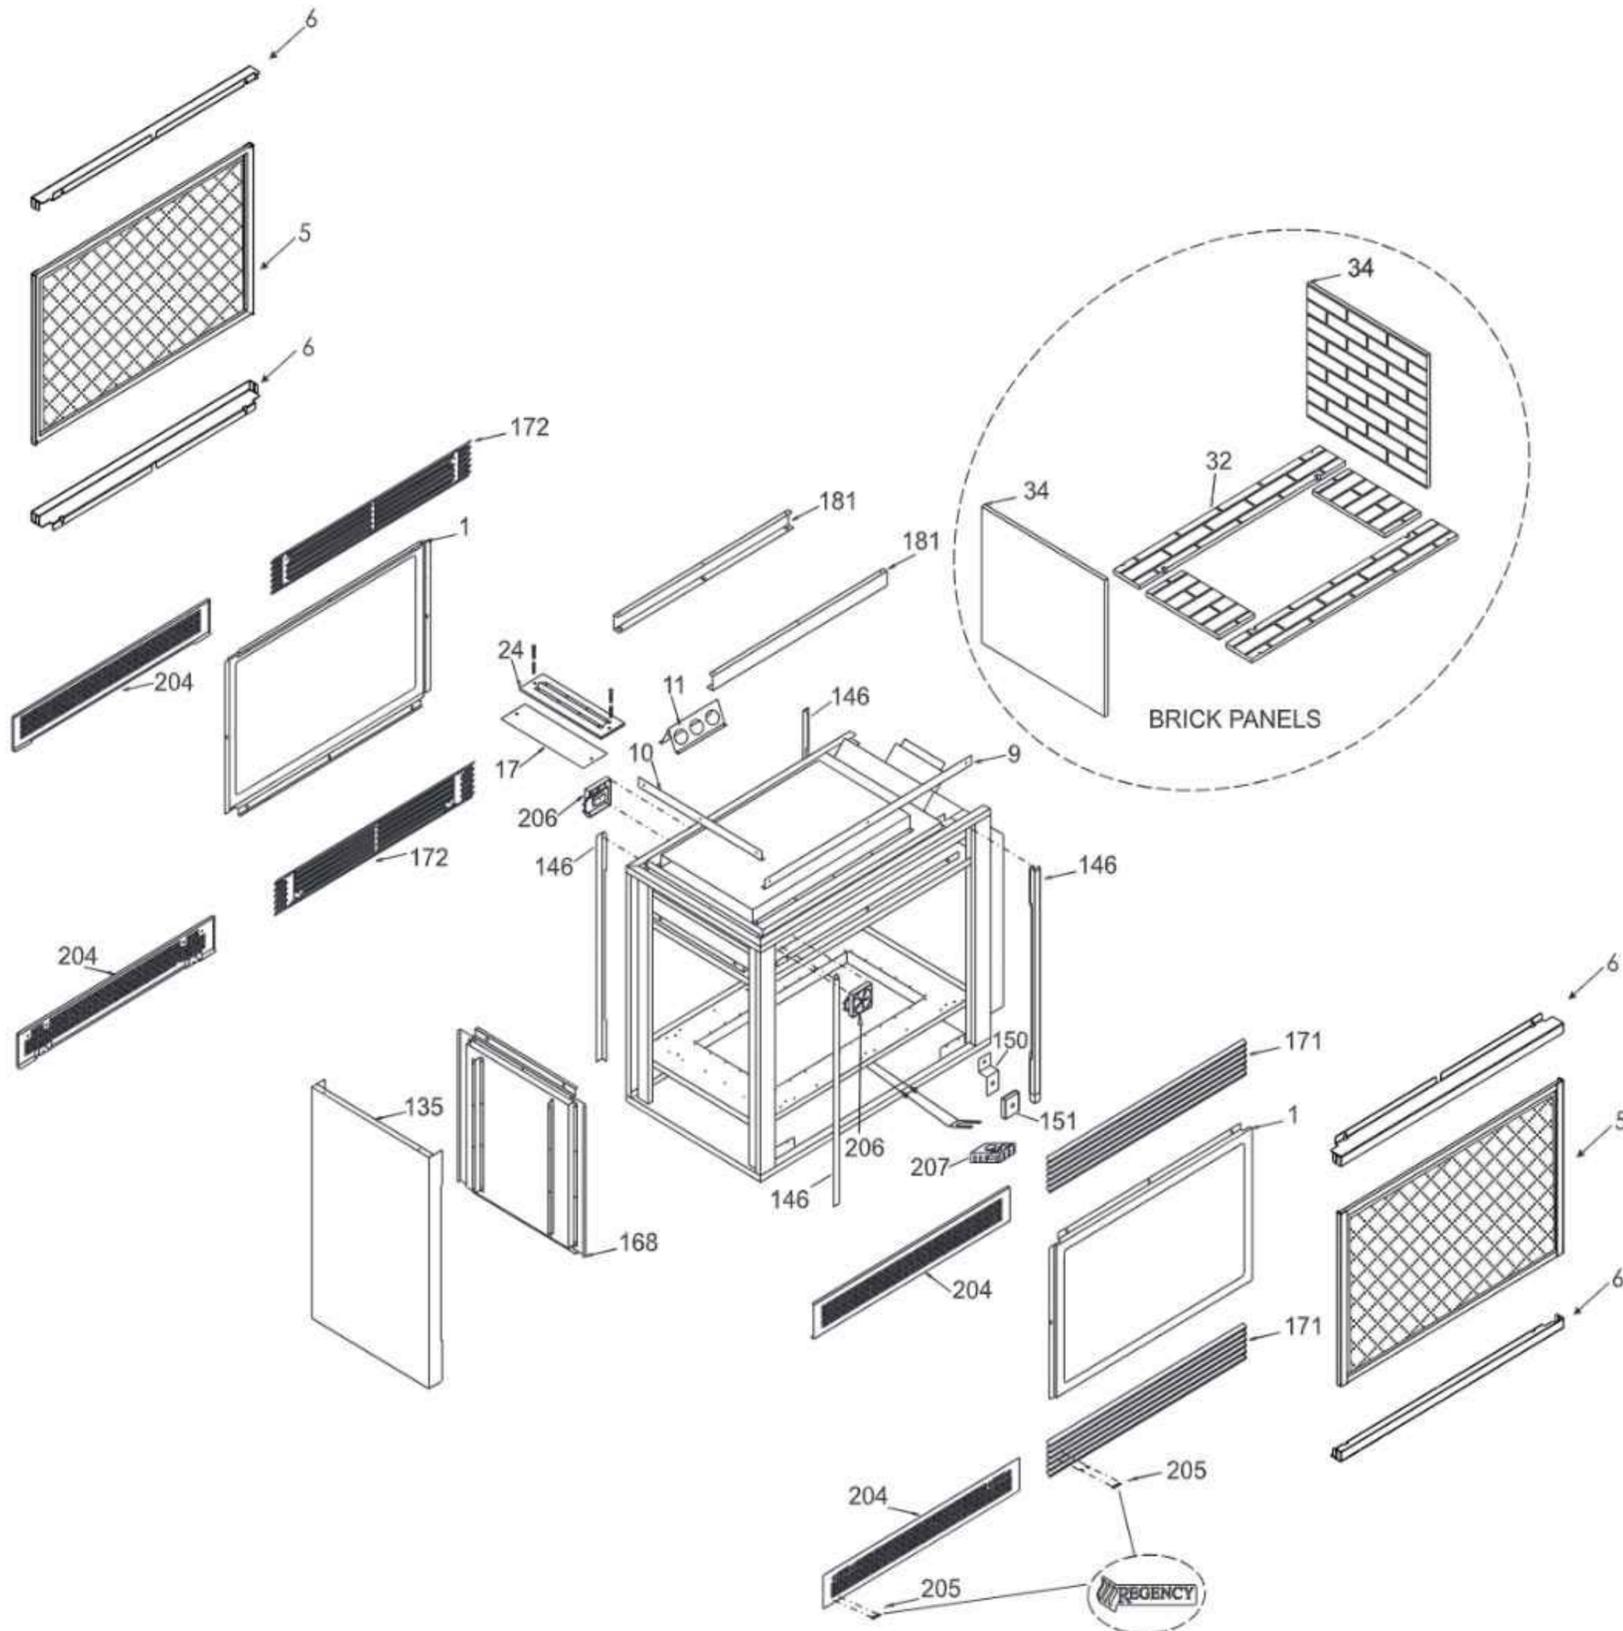



**P121-10/P131-10 BURNER ASSEMBLY & LOG SET**

|                                       | Part #    | Description                              |
|---------------------------------------|-----------|--|
|                                       | 360-930   | Log Set                                  |
| 41.                                   | *         | Front Right Log                          |
| 42.                                   | *         | Front Left Log                           |
| 43.                                   | *         | Middle Left Log                          |
| 44)                                   | *         | Middle Right Log                         |
|                                       | 363-574/P | Valve Assembly -NG                       |
|                                       | 363-576/P | Valve Assembly -LP                       |
| 56)                                   |           | 910-578 Valve Only -NG                   |
|                                       |           | 910-580 Valve Only -LP                   |
| 57)                                   | 360-090   | Gasket - Valve Tray                      |
| 58)                                   | *         | Valve Tray                               |
| 66)                                   | 910-038/P | Pilot Assembly - NG                      |
|                                       | 910-039/P | Pilot Assembly - LPG                     |
| 67)                                   | *         | Pilot Holder                             |
| 68)                                   | W840470   | Pilot Assembly Gasket                    |
| 79)                                   | 360-525   | Burner Assembly                          |
| 82)                                   | 360-027   | Grate Assembly                           |
|                                       | 904-690   | Orifice #31 - NG                         |
|                                       | 904-641   | Orifice #50 - LP                         |
|                                       | 936-170   | Orifice Gasket                           |
|                                       | 910-036   | Pilot Orifice NG                         |
|                                       | 910-037   | Pilot Orifice LP                         |
|                                       | 910-581   | Stepper motor NG                         |
|                                       | 910-582   | Stepper motor LP                         |
|                                       | 910-432   | Pilot tube with nuts                     |
|                                       | 910-096   | 3 way pilot hood                         |
|                                       | 910-341   | Thermopile                               |
|                                       | 910-386   | Thermocouple                             |
|                                       | 910-073   | DC Spark box                             |
|                                       | 910-074   | DC Spark box wire                        |
|                                       | 910-572   | Remote receiver                          |
|                                       | 911-127   | Remote receiver battery compartment door |
|                                       | 910-592   | GTMF Remote control Hand held            |
|                                       | 911-164   | Valve wiring harness                     |
|                                       | W840470   | Pilot assembly gasket                    |
| *Not available as a replacement part. |           |  |

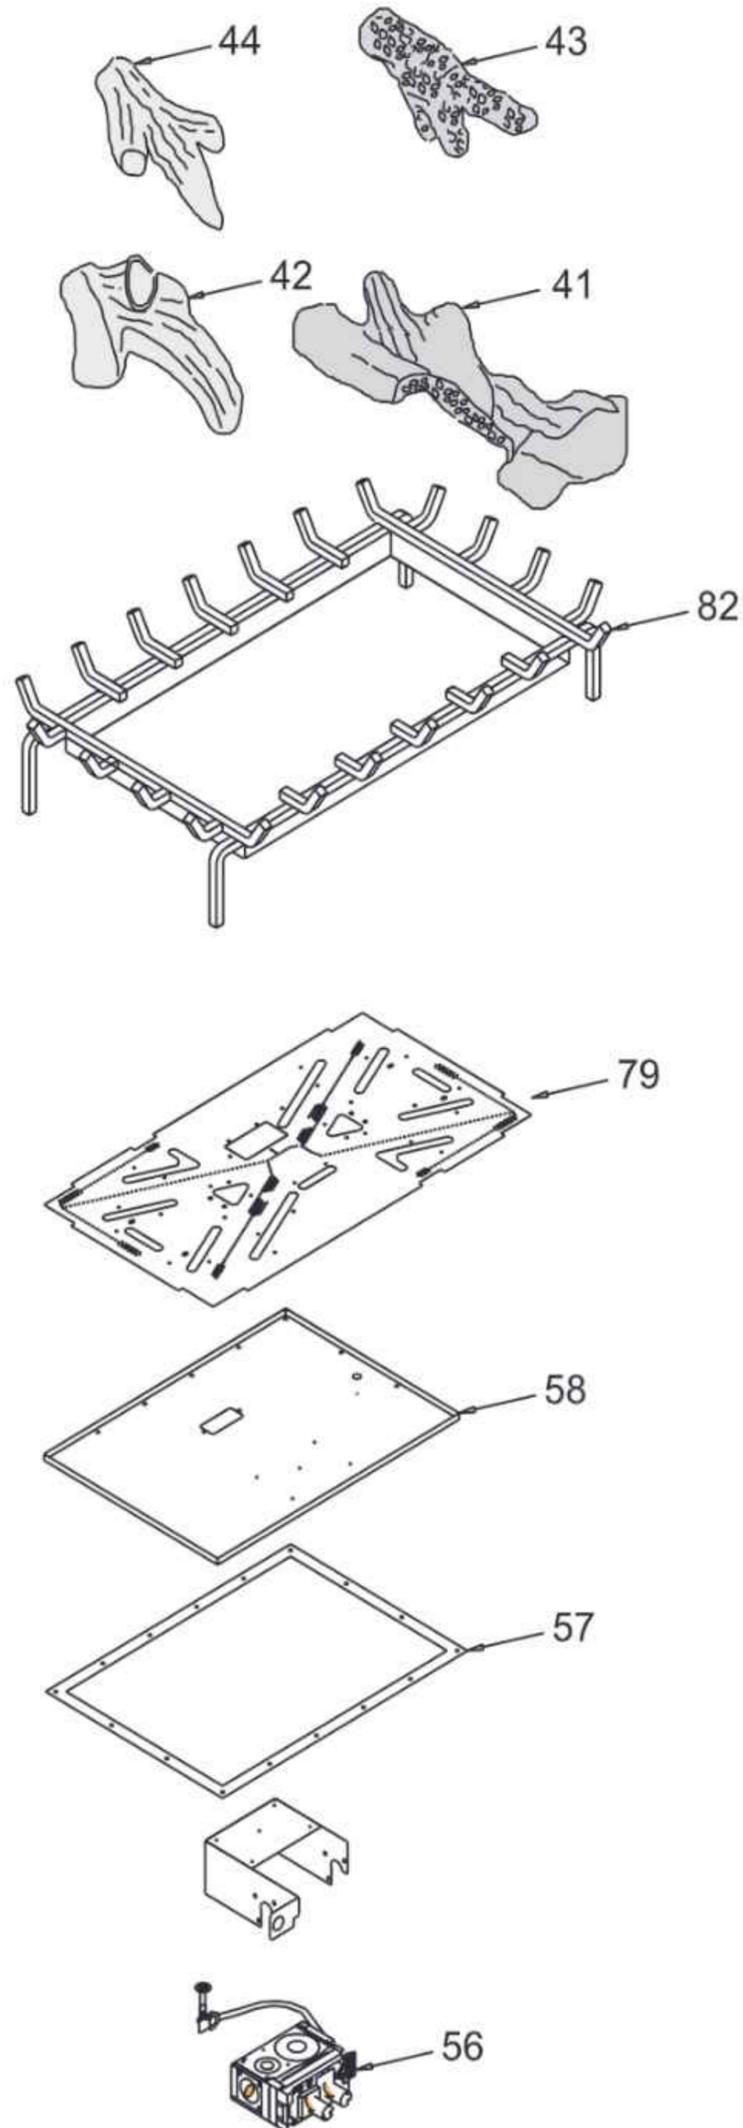

**Limited Lifetime Warranty**

FPI Fireplace Products International Ltd. (for Canadian customers) and Fireplace Products US, Inc. (for US customers) (collectively referred to herein as "FPI") extends this Limited Lifetime Warranty to the original purchaser of this Appliance provided the product remains in the original place of installation. The items covered by this Limited Lifetime Warranty and the period of such coverage are set forth in the table below.

\* The term "Limited Lifetime" in the table below is defined as **20 years** beginning the date when the Appliance was purchased. The "Limited Lifetime" warranty coverage period (**20 years**) reflects the minimum expected useful life of the designated Appliance or component under normal operating conditions. Some conditions apply (see below).

An Appliance in this policy is defined as an Indoor Gas Fireplace, Indoor Gas Insert, Indoor Gas Freestanding Stove. **This Appliance has only been certified and listed for use indoors.**

This Limited Lifetime Warranty starts on the day the Appliance was purchased.

**The Limited Lifetime Warranty is not transferable, amendable or negotiable under any circumstances.**

| Indoor Gas Products<br>Warranty Coverage<br>Parts and Labor   | Limited<br>Lifetime | 5 years | 2 years | 1 year | Supplier<br>Warranty | Subsidized<br>Labor<br>Coverage<br>(Years) |
|---|---------------------|---------|---------|--------|----------------------|--|
| *Firebox and Heat Exchanger   | ✓                   |         |         |        |                      | 3  |
| *Steel Burner Tube  | ✓                   |         |         |        |                      | 3  |
| *Glass Thermal breakage only  | ✓                   |         |         |        |                      | 3  |
| All Surrounds/Inlays Finishes   |                     | ✓       |         |        |                      | 3  |
| Brick Panels/Log sets/Ceramic Burners   |                     | ✓       |         |        |                      | 3  |
| All Castings  |                     | ✓       |         |        |                      | 3  |
| Valve assembly and all gas control components (Pilot assembly, flame sensors, Spark Electrode, Pilot Tubing, Orifices, Thermocouple, Thermopile)  |                     |         | ✓       |        |                      | 2  |
| All Other Electrical components (Ignition Control Boards, Wiring, Switches, Blowers, Blower Control Module, Battery Pack, Remote Control Systems) |                     |         | ✓       |        |                      | 2  |
| Enamel Panels   |                     |         | ✓       |        |                      | 1  |
| Venting/Venting Components  |                     |         | ✓       |        |                      | 1  |
| All Stainless steel surrounds   |                     |         |         | ✓      |                      | 1  |
| All Firebox Media (Crystals, Fire beads, Volcanic, Ceramic & Spa Stones)  |                     |         |         | ✓      |                      | 1  |
| All hardware  |                     |         |         | ✓      |                      | 1  |
| Mesh/Glass Safety Barriers  |                     |         |         | ✓      |                      | 1  |
| Accent Light Bulbs  |                     |         |         | ✓      |                      | 1  |
| Glass (Crazing)   |                     |         |         | ✓      |                      | 1  |

**Conditions:**

Warranty protects against defect in manufacture or FPI factory-assembled components only, unless herein specified otherwise.

Any part(s) found to be defective during the warranty period as outlined above will be repaired or replaced at FPI's option through an accredited distributor, dealer or pre-approved and assigned agent; provided that the defective part is returned to the distributor, dealer or agent for inspection if requested by FPI. Alternatively, FPI may, at its discretion, fully discharge all of its obligations under warranty by refunding the verified purchase price of the product to the original purchaser. The purchase price must be confirmed by the original Bill of Sale.

**The authorized selling dealer, or an alternative authorized FPI dealer if pre-approved by FPI, is responsible for all in-field diagnosis and service work related to all warranty claims. FPI is not responsible for results or costs of workmanship of unauthorized FPI dealers or agents in the negligence of their service work.**

At all times, FPI reserves the right to inspect reported in the field/on location complaints of products claimed to be defective before processing or authorizing any claim. Failure to allow this upon request will void the warranty.

All warranty claims must be submitted by the dealer servicing the claim, including a copy of the Bill of Sale (proof of purchase by you). All claims must be complete and provide full details as requested by FPI to receive consideration for evaluation. **Incomplete claims may be rejected.**

**Replacement Appliances to the original purchaser are limited to one per warranty term.**

Appliances must be installed according to all manufacturers' instructions as per the manual.

All Local and National required codes must be met.

The installer is responsible for ensuring the Appliance is operating as designed at the time of installation.

The original purchaser is responsible for the annual maintenance of the Appliance, as outlined in the owner's manual. As outlined below, the warranty may be voided due to problems caused by a lack of maintenance.

Purchased parts: Repair/replacement parts purchased by the consumer from FPI after the original coverage has expired on the Appliance will carry a **90-day** warranty, valid with a receipt only. Any item shown to be defective will be repaired or replaced at our discretion. No labor coverage is included with these parts.

As this is a **20-year** Limited Lifetime Warranty, if the Appliance needs to be replaced, the Appliance that was purchased at the time of sale might not be replaced with exactly the same model Appliance. In that case, FPI will replace your Appliance with one that is similar at the time of replacement under the terms of this Limited Lifetime Warranty, but **ONLY** in the event that an item covered by the Limited Lifetime Warranty is found to be defective. Please refer to the table on first page of this warranty for items covered by the Limited Lifetime Warranty. Product changes might be the result of the original Appliance being discontinued, changes in regulatory requirements, product advancements, etc., which are beyond the control of FPI. **This Limited Lifetime Warranty does not cover any installation costs, or costs associated with changes of required clearances for the replacement Appliance, hearth pads, mantles, facing and/or facing materials such as framing, completed walls made of drywall, wood, non-combustible board, tile, brick, stone, marble etc., venting/chimney systems, or components of the chimney system.**

If a suitable replacement is not available, FPI will refund **50%** of the purchase price of the Appliance and any applicable FPI accessories (faceplates, brick panels, media, etc.) purchased at the time of sale. **In no event will FPI refund any portion of the purchase price of, or reimburse costs associated with, any other items, including without limitation, installation of a new Appliance, changes of required clearances for a new Appliance, hearth pads, mantles, facing and/or facing materials such as framing, completed walls made of drywall, wood, non-combustible board, tile, brick, stone, marble etc., venting/chimney systems, or components of the chimney system. A copy of the receipt or bill of sale will be necessary to validate the purchase price.**

#### **Exclusions:**

This Limited Lifetime Warranty does not extend to paint, rust or corrosion of any kind due to a lack of maintenance or improper venting, combustion air provision, corrosive chemicals (i.e. chlorine, salt, air, etc.), door or glass gasketing.

Malfunction, damage or performance-based issues as a result of environmental conditions, location, chemical damages, downdrafts, installation error, an installation by an unqualified installer, incorrect chimney components (including but not limited to cap size or type), operator error, abuse, misuse, use of improper fuels, lack of regular maintenance and upkeep, acts of God, weather-related problems from hurricanes, tornados, earthquakes, floods, lightning strikes/bolts or acts of terrorism or war, which result in a malfunction of the Appliance are not covered under the terms of this Limited Lifetime Warranty.

FPI has no obligation to enhance or modify any Appliance once manufactured (i.e. as products evolve, field modifications or upgrades will not be performed on existing Appliances).

**This warranty does not cover dealer travel costs for diagnostic or service work. All labor rates paid to authorized dealers are subsidized, pre-determined rates. Dealers may charge you for travel and additional time beyond their subsidy.**

Any Appliance showing signs of neglect or misuse will not be covered under the terms of this warranty policy and may void this warranty, including Appliances with rusted or corroded fireboxes that have not been reported as rusted or corroded within **three (3)** months of installation/purchase.

Appliances which show evidence of being operated while damaged, or with problems known to the purchaser and causing further damages will void this warranty.

Appliances where the serial no. has been altered, deleted, removed or made illegible will void this warranty.

Minor movement, expansion and contraction of the steel is normal and is not covered under the terms of this warranty.

Freight damages for products or parts are not covered under the terms of the warranty.

Products made or provided by other manufacturers and used in conjunction with the FPI Appliance without prior authorization from FPI may void this warranty.

#### **Limitations of Liability:**

The original purchaser's exclusive remedy under this warranty, and FPI's sole obligation under this Limited Lifetime Warranty, express or implied, in contract or in tort, shall be limited to replacement, repair, or refund, as outlined above. IN NO EVENT WILL FPI BE LIABLE UNDER THIS WARRANTY FOR ANY INCIDENTAL OR CONSEQUENTIAL COMMERCIAL DAMAGES OR DAMAGES TO PROPERTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, FPI MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY SPECIFIED HEREIN. THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO DURATION OF THE EXPRESSED WARRANTY SPECIFIED ABOVE. IF IMPLIED WARRANTIES CANNOT BE DISCLAIMED, THEN SUCH WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some US states do not allow limitations on how long an implied warranty lasts, or allow exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Customers located outside the US should consult their local, provincial or national legal codes for additional terms, which may apply to this warranty.

#### **How to Obtain Warranty Service:**

Customers should contact the authorized selling dealer to obtain warranty service. In the event the authorized selling dealer is unable to provide warranty service, please contact FPI by mail at the address listed below. Please include a brief description of the problem and your address, email and telephone contact information. A representative will contact you to make arrangements for an inspection and/or warranty service.

##### Canadian Warrantor:

**FPI Fireplace Products International Ltd.**  
6988 Venture St.  
Delta, British Columbia  
Canada, V4G 1H4

##### U.S. Warrantor:

**Fireplace Products US, Inc.**  
PO Box 2189 PMB 125  
Blaine, WA  
United States, 98231

Or contact the Regency Customer Care Centre at 1-800-442-7432 (phone) / 604-946-4349 (fax)

#### **Product Registration and Customer Support:**

Thank you for choosing a Regency Fireplace. Regency strives to be a world leader in the design, manufacture, and marketing of hearth products. To provide the best support for your product, we request that you complete a product registration form at <http://www.regency-fire.com/Customer-Care/Warranty-Registration.aspx> within **ninety (90)** days of purchase.



**Product Registration and Customer Support:**

Thank you for choosing a Regency Fireplace. Regency strives to be a world leader in the design, manufacture, and marketing of hearth products. To provide the best support for your product, we request that you complete a product registration form found on our Web Site under Customer Care within ninety (90) days of purchase.

For purchases made in **CANADA or the UNITED STATES:**

<http://www.regency-fire.com/Customer-Care/Warranty-Registration.aspx>

For purchases made in **AUSTRALIA:**

<http://www.regency-fire.com.au/Customer-Care/Warranty-Registration.aspx>

You may also complete the warranty registration form below to register your Regency Fireplace Product and mail and/or fax it back to us, and we will register the warranty for you. It is important you provide us with all the information below in order for us to serve you better.

**Warranty Registration Form (or Register online immediately at the above Web Site):**

|  |  |
|--|--|
| <b>Warranty Details</b>                |  |
| Serial Number (required):              |  |
| Purchase Date (required) (mm/dd/yyyy): |  |
| <b>Product Details</b>                 |  |
| Product Model (required):              |  |
| <b>Dealer Details</b>                  |  |
| Dealer Name (required):                |  |
| Dealer Address:                        |  |
| Dealer Phone #:                        |  |
| Installer:                             |  |
| Date Installed (mm/dd/yyyy):           |  |
| <b>Your Contact Details (required)</b> |  |
| Name:                                  |  |
| Address:                               |  |
| Phone:                                 |  |
| Email:                                 |  |

For purchases made in **CANADA:**

**FPI Fireplace Products International Ltd.**  
6988 Venture St.  
Delta, British Columbia  
Canada, V4G 1H4

Phone: 604-946-5155  
Fax: 1-866-393-2806

For purchases made in the **UNITED STATES:**

**Fireplace Products US, Inc.**  
PO Box 2189 PMB 125  
Blaine, WA  
United States, 98231

Phone: 604-946-5155  
Fax: 1-866-393-2806

For purchases made in **AUSTRALIA:**

**Fireplace Products Australia Pty Ltd**  
1- 3 Conquest Way  
Hallam, VIC  
Australia, 3803

Phone: +61 3 9799 7277  
Fax: +61 3 9799 7822

For fireplace care and tips and answers to most common questions please visit our Customer Care section on our Web Site. Please feel free to contact your selling dealer if you have any questions about your Regency product.









*Installer: Please complete the following information*

**Dealer Name & Address:** \_\_\_\_\_

\_\_\_\_\_

**Installer:** \_\_\_\_\_

**Phone #:** \_\_\_\_\_

**Date Installed:** \_\_\_\_\_

**Serial No.:** \_\_\_\_\_