


P131-2 (PIER) MAIN ASSEMBLY

Part #	Description	Part #	Description	Part #	Description
1) 360-528	Door Assy Front - Tempered	98) 910-366	Switch Cover Plate	173) 360-932	Louver Side - Black (set)
360-946	Door Assy Front - Ceramic (Optional)	99) 910-363	Wall Switch	360-934	Louver Side - Black/Gold (set)
2) 360-529	Door Assy Side - Tempered	100) 910-367	Switch Receptacle Plastic Box	360-936	Louver Side - Black/Steel (set)
360-948	Door Assy Side- Ceramic (Optional)	910-882	Wire - Valve to Burner Switch	181) *	Extension Trim - Pier
9) 360-046	Nailing Strip - Top - Front	141) 360-031	Column Finishing Trim	204) 360-940	Dec. Grill Front - Black (set)
10) 360-047	Nailing Strip - Top - Side	146) 360-035	Finishing Trim	206) 910-171	Fan Axial 115V
11) 430-001	Standoff - Top	149) 360-122	Magnet Bracket - Corner	224) 360-942	Dec. Grill Side - Black (set)
17) 360-086	Gasket - Relief Door	150) 360-123	Magnet Bracket - Front	225) 948-216	Regency® Logo Plate
24) *	Relief Door Assembly	151) 904-258	Magnet	226) 910-412	Thermodisc
32) 362-528	Brick Panel Base (Set of 6)	171) 360-920	Louver Front - Black (set)	918-519	Manual
34) 902-603	Brick Panel - Side Std. Red	360-922	Louver Front - Black/Gold (set)		
		360-924	Louver Front - Black/Steel (set)		

*Not available as a replacement part.

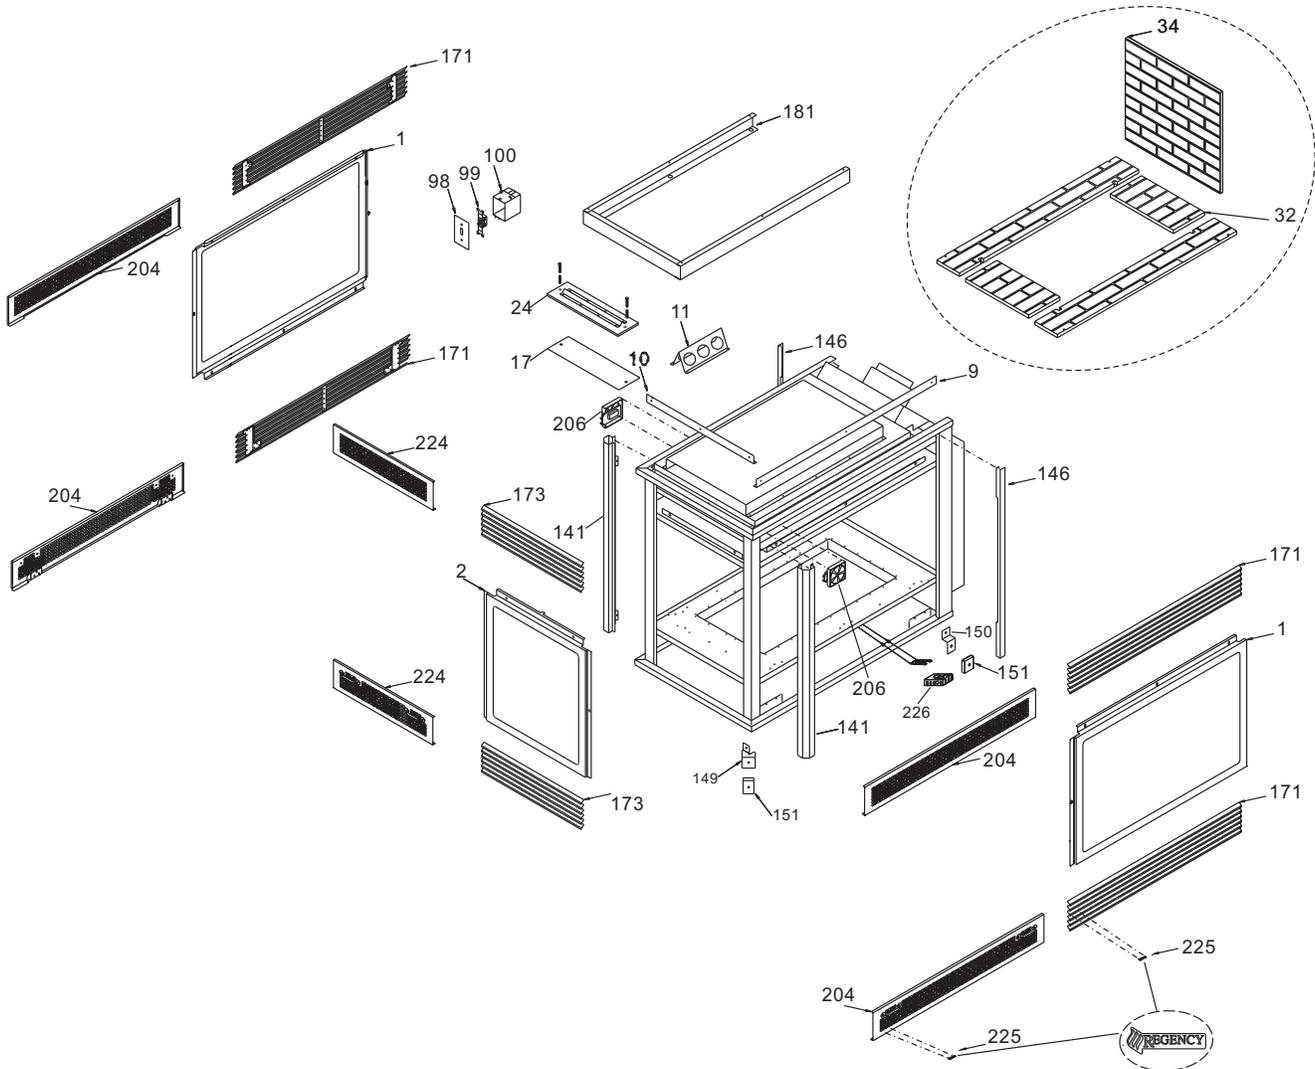

PARTS LIST

P121-2/P131-2 BURNER ASSEMBLY & LOG SET

Part #	Description
360-930	Log Set
41) *	Front Right Log
42) *	Front Left Log
43) *	Middle Left Log
44) *	Middle Right Log
360-574/P	Valve Assembly
56) 910-478	Valve S.I.T. - NG/LPG
57) 360-090	Gasket - Valve Tray
58) *	Valve Tray
66) 910-038	Pilot Assembly - NG
910-039	Pilot Assembly - LPG
67) *	Pilot Holder
68) W840470	Pilot Assembly Gasket
69) 910-190	Piezo Ignitor and Nut
79) 360-525	Burner Assembly
82) 360-027	Grate Assembly
904-690	Orifice #31 - NG
936-170	Orifice Gasket

*Not available as a replacement part.

