


REPAIR PARTS DIAGRAM-6037

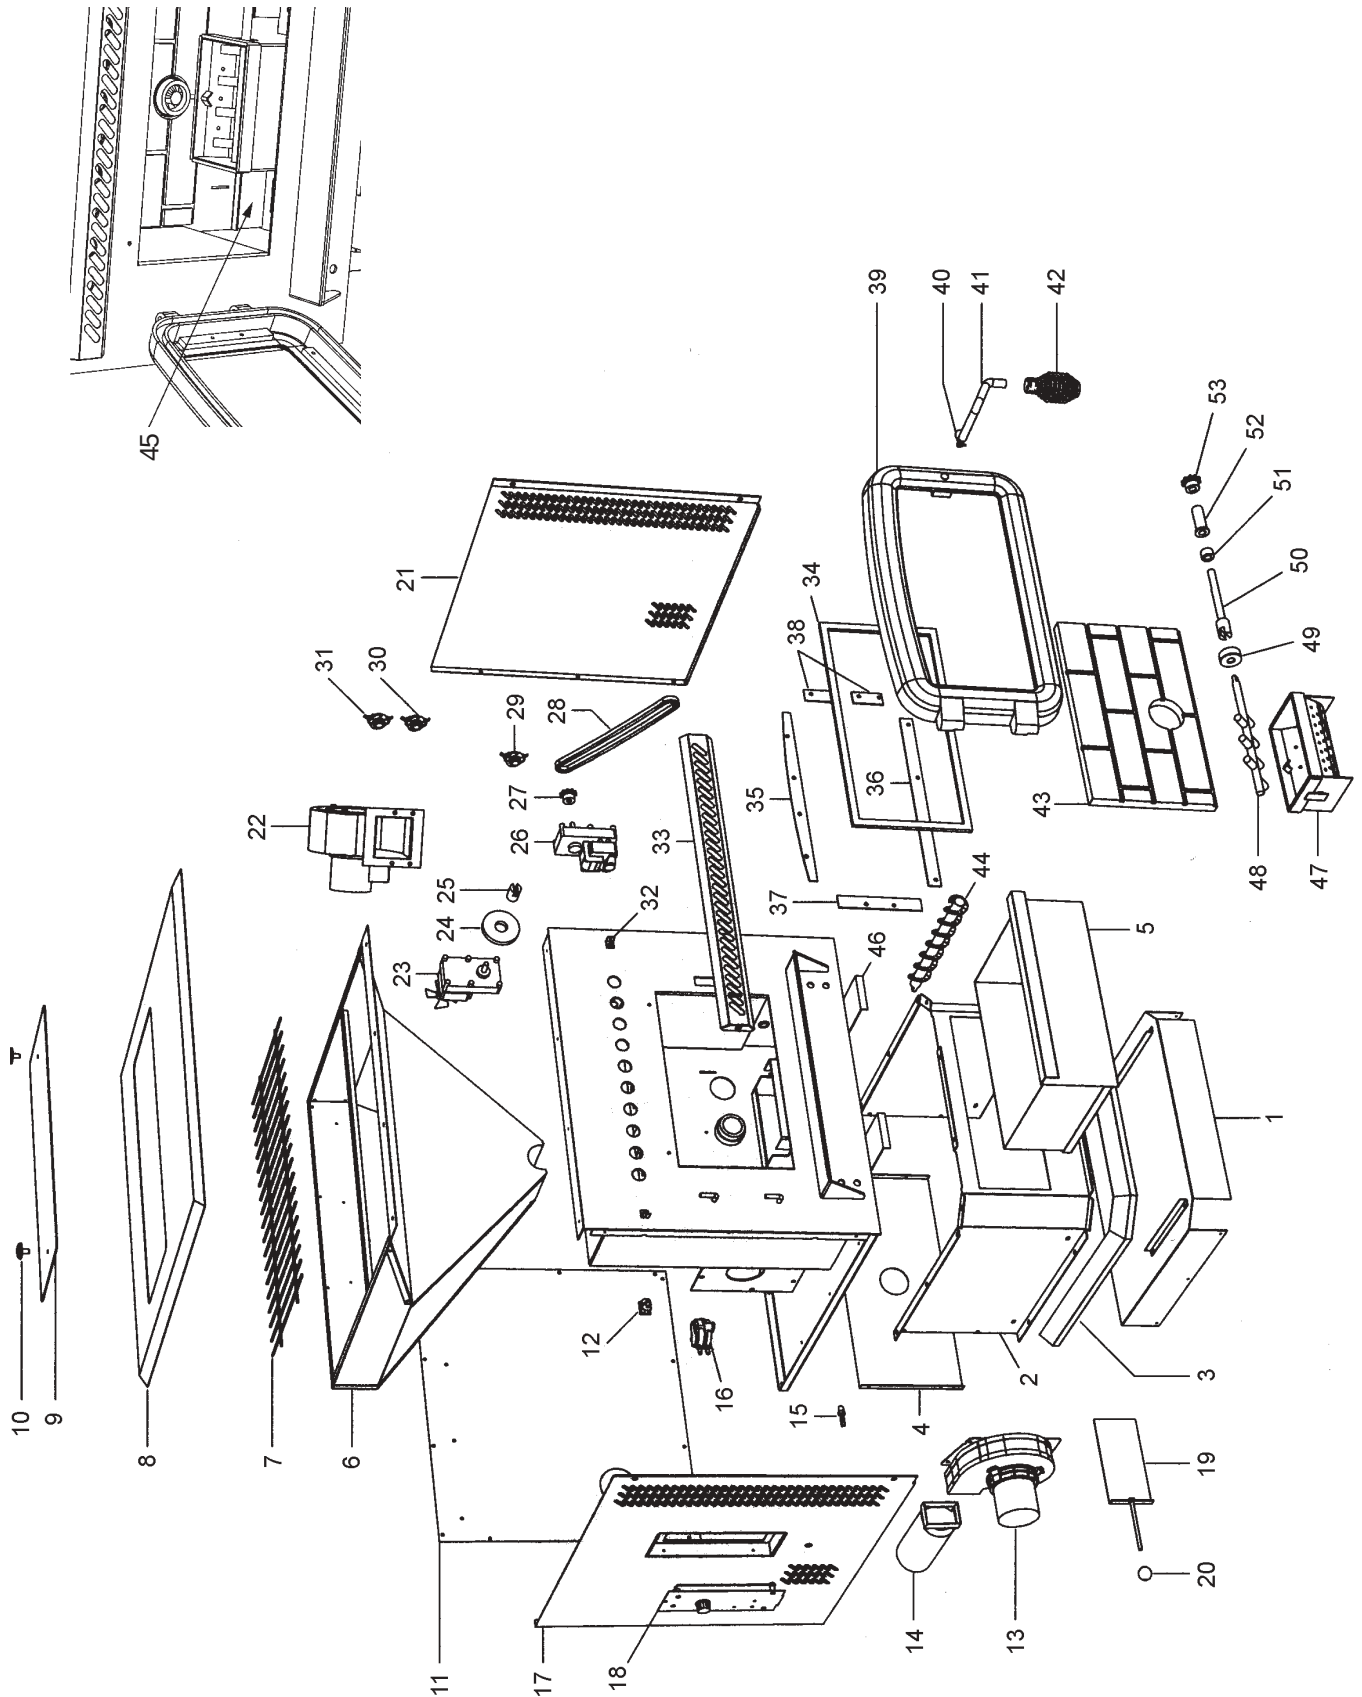

REPAIR PARTS LIST-6037

KEY	PART #	DESCRIPTION	QTY.
1	69437B	Ash Pan Guide Assy., Painted	1
2	25309B	Pedestal, Painted	1
3	25158B	Pedestal Trim, Painted	1
4	25317B	Pedestal Back, Painted	1
5	69364B	Ash Pan, Painted	1
6	69443	Hopper Assembly	1
7	891118	Safety Guard	1
8	25315B	Cabinet Top, Painted	1
9	25316B	Hopper Lid, Painted	1
10	89899	Brass Knob	2
11	25314B	Cabinet Back, Painted	1
12	80462	Power Supply Plug	1
N/S	80461	Power Supply Cord	1
13	80454	Exhaust Blower	1
14	86592	Exhaust Pipe	1
15	89586	Brass Nipple	1
16	80471	Pressure Switch	1
N/S	80312	Neoprene Tubing	3 ft.
N/S	80312	Neoprene Tubing	14 in.
17	69444B	Cabinet Side - Left, Painted	1
18	80470	Circuit Board	1
19	69383	Draft Adjustment Slide	1
20	891066	Knob	1
21	25312B	Cabinet Side - Right, Painted	1
22	80453	Distribution Blower	1
23	80456	Auger Motor	1
24	83511	Rubber Washer	1
25	891055	Coupling	1
26	80457	Agitator Motor	1
27	891083	Agitator Sprocket	1
28	891058	Chain	1
29	80455	Auger Safety Switch (F250 Thermodisc- 60T11)	1
30	80381	Low Limit Switch (F110 Thermodisc- 60T12)	1
31	80381	Distribution Blower Limit Switch (F110 Thermodisc- 60T12)	1
N/S	80477	Wiring Harness	1
N/S	80446	Wire (Green - 13") - Ground	1
32	25170	Gold Trim Bracket	2
33	891073	Gold Trim	1
34	891075	Glass & Gasket	1
35	891076	Top Glass Retainer	1
36	891079	Bottom Glass Retainer	1
37	891078	Right Side Glass Retainer	1
38	891077	Left Side Glass Retainer	2
39	891074	Door	1
40	891089	Roller Latch Stop	1
41	891084	Door Handle	1
42	89574	Spring Handle	1
N/S	891089	Spring Pin, Door	1
43	891064	Ceramic Brick	1
44	891054	Auger	1
45	25173	Cleanout, Firebox	2
46	25325B	Cleanout Slides, Painted	2
47	69363	Burn Pot	1
48	891059	Agitator	1
49	69358	Shaft Collar	1
50	69359	Drive Shaft Weldment	1
51	83510	Drive Shaft Set Coupling	1
52	891092	Agitator Bushing	1
53	891057	Drive Shaft Sprocket	1

FOR MODEL: 6037

N/S = NOT SHOWN