


PARTS LIST AND DIAGRAM - 1864

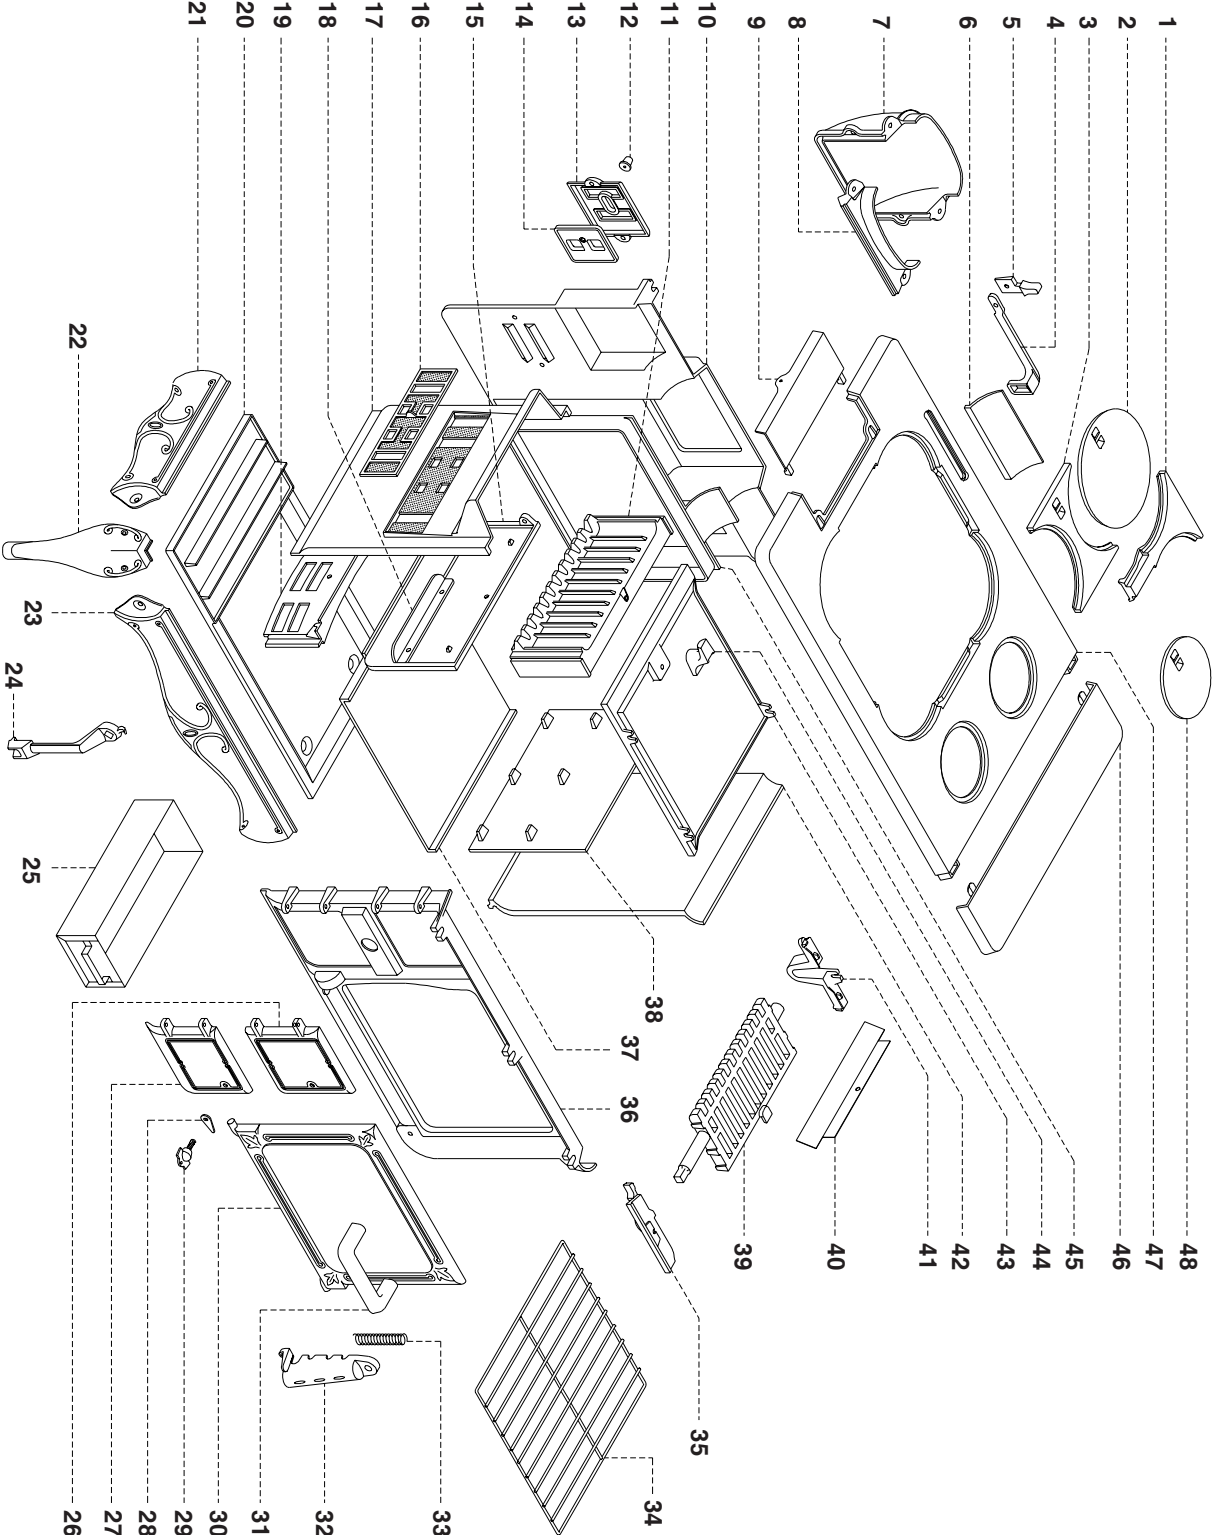

KEY	PART NO.	DESCRIPTION	QTY.
1	89998	1/4 Lid Support	2
2	89989	8" Cook Lid	4
3	891000	Lid Support	2
4	891001	Connecting Rod	1
5	891002	Damper Lever	1
6	891003	Damper	1
7	891004	Rear Flue Boot	1
8	891005	Front Flue Boot	1
9	891006	Fuel Cover	1
10	891007	Stove Back	1
11	891008	Right Side Grate	1
12	891009	Draft Control Knob	1
13	891010	Draft Frame	1
14	891011	Rear Draft Control	1
15	891012	Oven Left Side	1
16	891013	Side Draft Control	1
17	891014	Stove Left Side	1
18	891015	Ash Pan Guide	2
19	891016	Left Side Liner	1
20	891017	Stove Bottom	1
21	891018	Side Apron	2
22	891019	Leg	4
23	891020	Front/Rear Apron	2
24	891021	Master Handle	1
25	891022	Ash Pan	1
26	891023	Feed Door	1
27	891024	Ash Door	1
28	891025	Door Latch	1
29	891026	Door Handle	2
30	891027	Oven Door	1
31	891028	Oven Door Handle	1
32	891029	Spring Cover	1
33	891030	Door Spring	1
34	891031	Oven Rack	1
35	891032	Front Grate Support	1
36	891033	Stove Front	1
37	891034	Oven Bottom	1
38	891035	Oven Right Side	1
39	891036	Shaker Grate	1
40	891037	Ash Funnel	2
41	891038	Rear Grate Support	1
42	891039	Stove Right Side	1
43	891040	Oven Top	1
44	891041	Center Lid Support	1
45	891042	Oven Back	1
46	891043	Stove Top Extension	1
47	891044	Stove Top	1
48	891045	5-1/2" Cook Lid	2