

PARTS LIST – SR57E RANCHER WOOD & COAL RANGE

When ordering missing or replacement parts, always give the **Model Number** of the stove, **Part Number**, and **Part Description**. Use the illustrations and part lists provided to identify parts.

Part No.	Description	Qty.
1	Cook Lid	4
2	Collar Top.....	1
3	Top Plate.....	1
4	Removable Plate	2
5	Lid Support.....	1
6	Burn Chamber	1
7	Lower Chamber	1
8	Shaker Door	1
9	Base	1
10	Ash Door.....	1
11	Spin Draft.....	1
12	Spring Handle.....	1
13	Grate	1
14	Ash Pan	1
15	Legs	4
16	Lid Lifter.....	1
17	Hardware Pack	1
18	Draft Damper	1

