


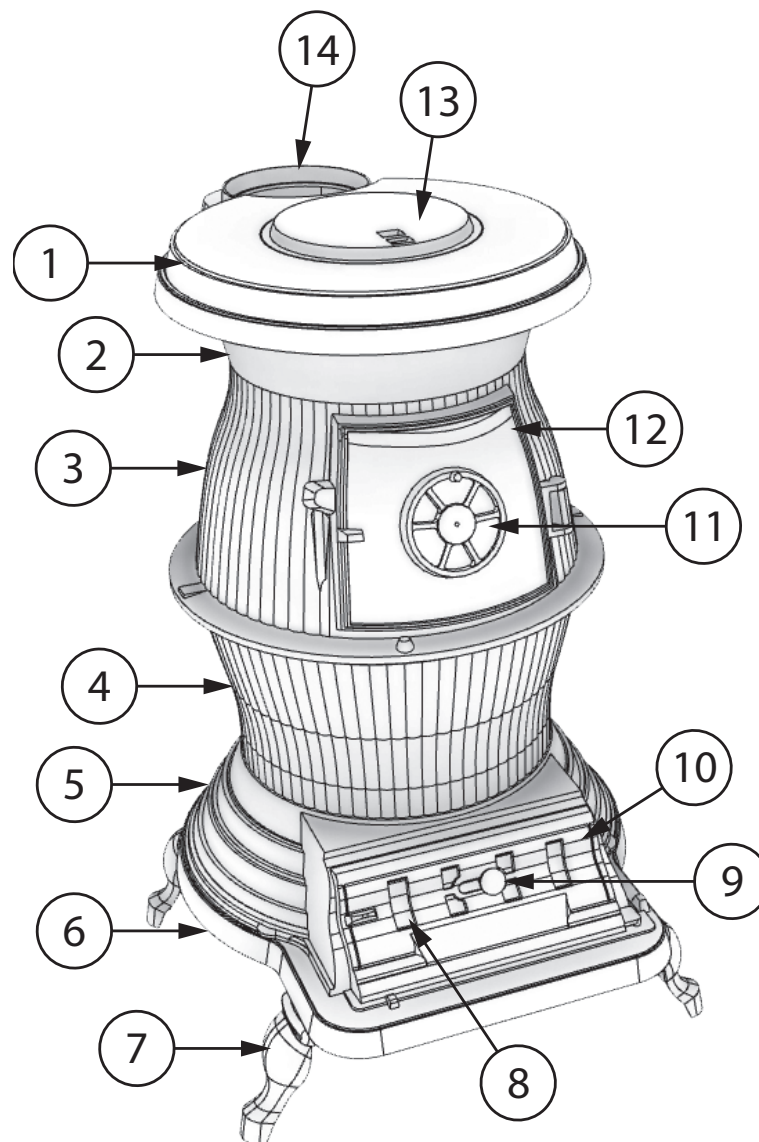

| Key | Part # | Description      | Qty |
|-----|--------|------------------|-----|
| 1   | 89979  | Top Plate        | 1   |
| 2   | 89980  | Upper Chamber    | 1   |
| 3   | 89981  | Feed Chamber     | 1   |
| 4   | 89982  | Burn Chamber     | 1   |
| 5   | 89983  | Lower Chamber    | 1   |
| 6   | 89984  | Base             | 1   |
| 7   | 89985  | Legs             | 4   |
| 8   | 89987  | Slide Draft      | 1   |
| 9   | 89988  | Slide Draft Knob | 1   |
| 10  | 89986  | Ash Door         | 1   |

|             |       |               |   |
|-------------|-------|---------------|---|
| 11          | 89992 | Spin Draft    | 1 |
| 12          | 89991 | Feed Door     | 1 |
| 13          | 89994 | Cook Lid      | 1 |
| 14          | 89993 | Collar Top    | 1 |
| *           | 89989 | Shaker Grate  | 1 |
| *           | 89990 | Spring Handle | 1 |
| * NOT SHOWN |       |               |   |

**IN ORDER TO MAINTAIN WARRANTY, COMPONENTS MUST BE REPLACED USING ORIGINAL MANUFACTURERS PARTS PURCHASED THROUGH YOUR DEALER OR DIRECTLY FROM THE APPLIANCE MANUFACTURER. USE OF THIRD PARTY COMPONENTS WILL VOID THE WARRANTY.**