



REPAIR PARTS

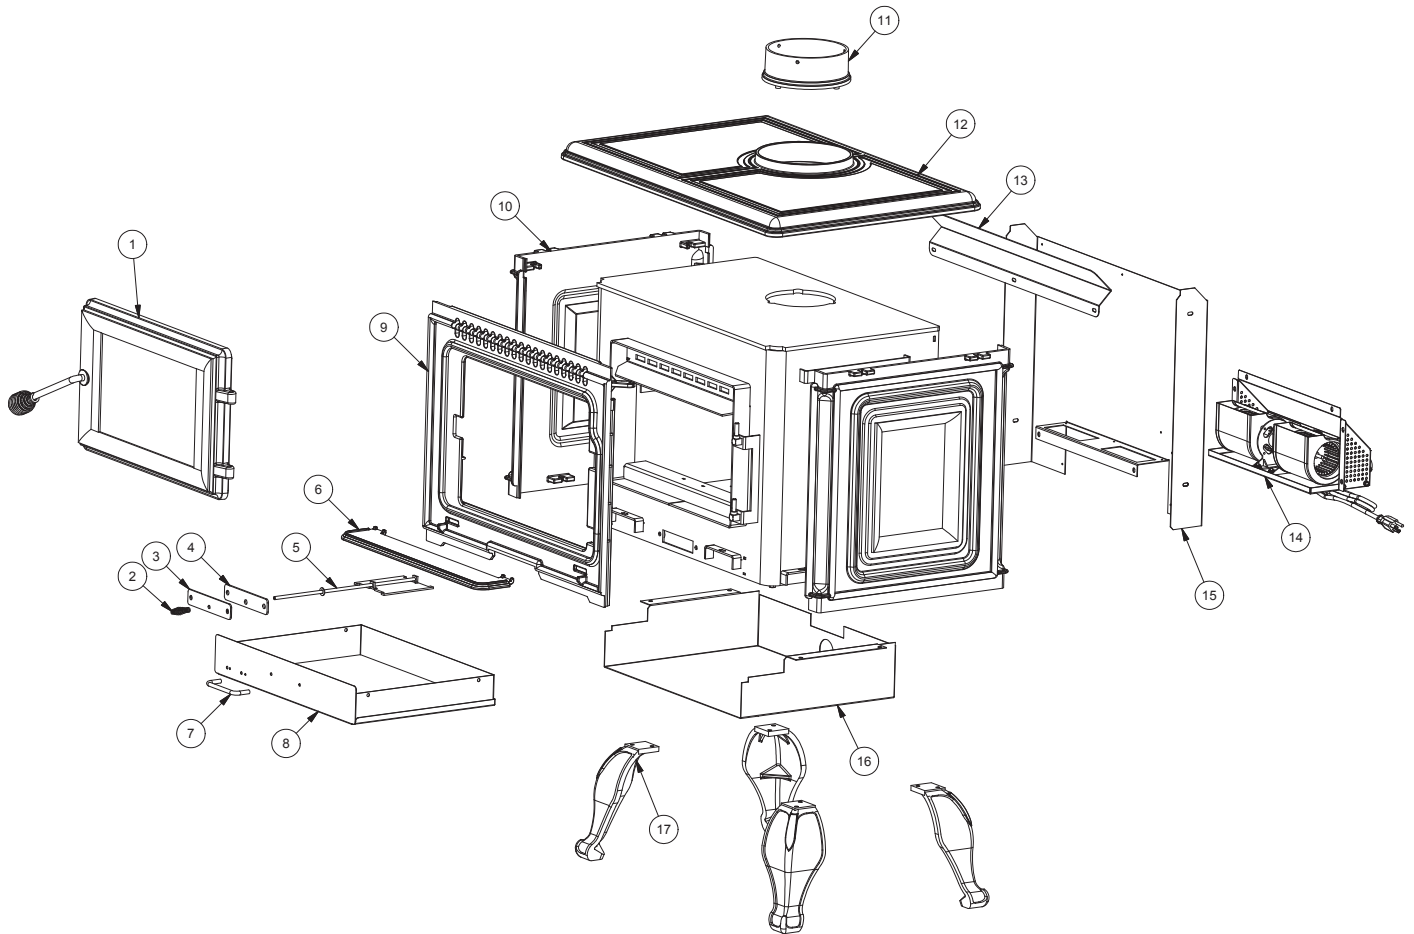

Key	Part No.	Description	Qty.
1	610061	Assy., Door Large Rect.	1
2	891331	Spring Handle - Brushed Nickel	1
3	26333	Cover Plate, Damper	1
4	88189	Gasket, Damper	1
5	69738	Weld., Damper Slide	1
6	40590	Hearth	1
7	891137	Handle, Brushed Nickel	1
8	69767	Ash Pan Weldment	1
9	40589	Front	1
10	40588	Side	2
11	40292A	6" Flue Collar	1
12	40587	Top	1
13	26934	Air Deflector	1
14	891841	Assembly, AFS Blower	1
15	26335	Heat Shield	1
16	69768	Weldment, Ash Pan Housing	1
17	40566	Leg, Cast Iron	4


In order to maintain warranty, components must be replaced using original manufacturers parts purchased through your dealer or directly from the appliance manufacturer.
Use of third party components will void the warranty.

REPAIR PARTS

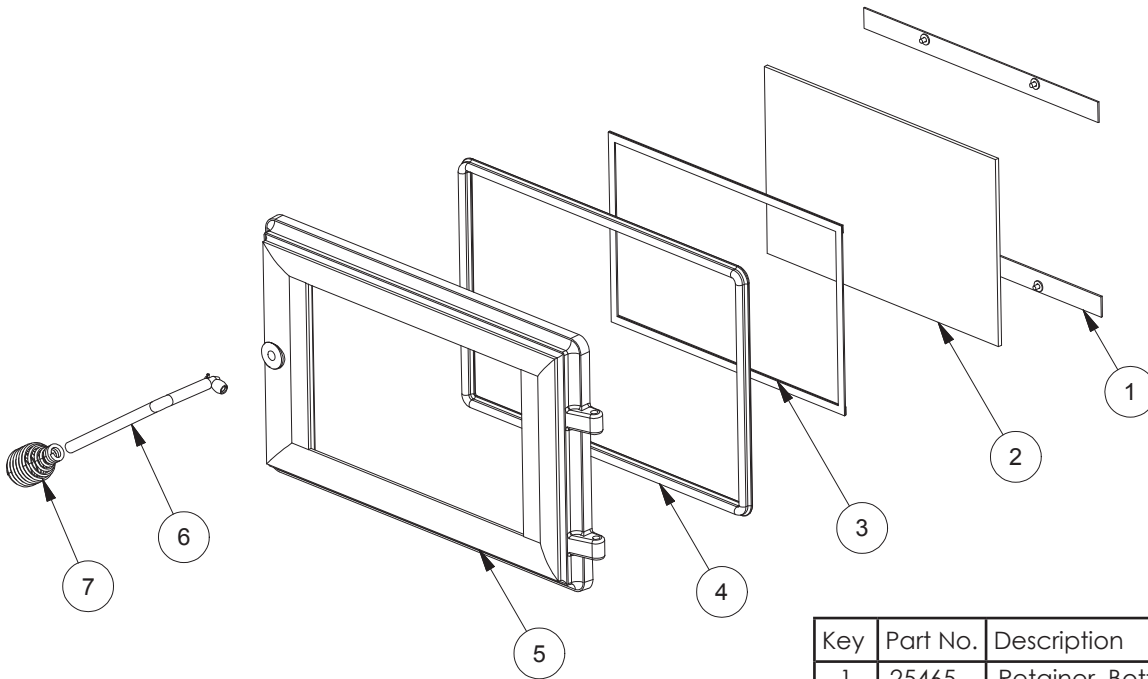

Key	Part No.	Description	Qty.
1	25465	Retainer, Bottom Glass	2
2	891813	Door Glass (40564)	1
3	88174	Gasket-Flat, Glass Retainer	4ft
4	88066	1/2 Rope Gasket	5ft
5	40639	Door,Rectangular - Large	1
6	892228	7" Handle	1
7	891135	Handle, Spring (Lg-Nickel)	1

Key	Part No.	Description	Qty.
1	891414A	Half Firebrick	2
2	89066A	Firebrick (4-1/2 x 9)	14
3	891783	Firebrick (3 x 4-1/2)	1
4	40561	Ash Plug	1
5	24103A	Firebrick, Half (4-1/2 X 4-1/2)	1
6	86645	Tube (Ø7/32), Secondary Air	2
7	86643	Tube (Ø5/32) , Secondary Air	1
8	88146	Board, Ceramic Fiber	1

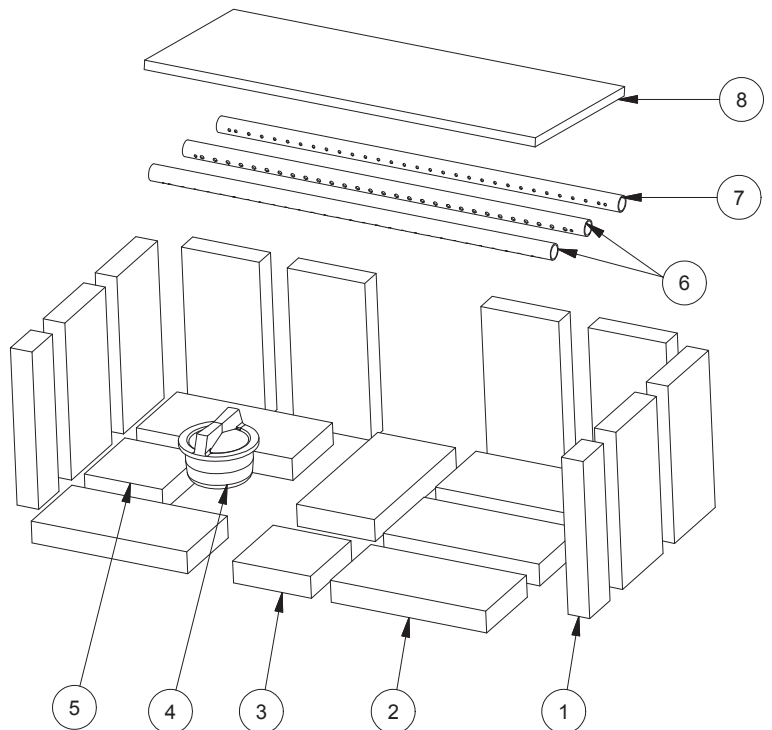

In order to maintain warranty, components must be replaced using original manufacturers parts purchased through your dealer or directly from the appliance manufacturer.
Use of third party components will void the warranty.