


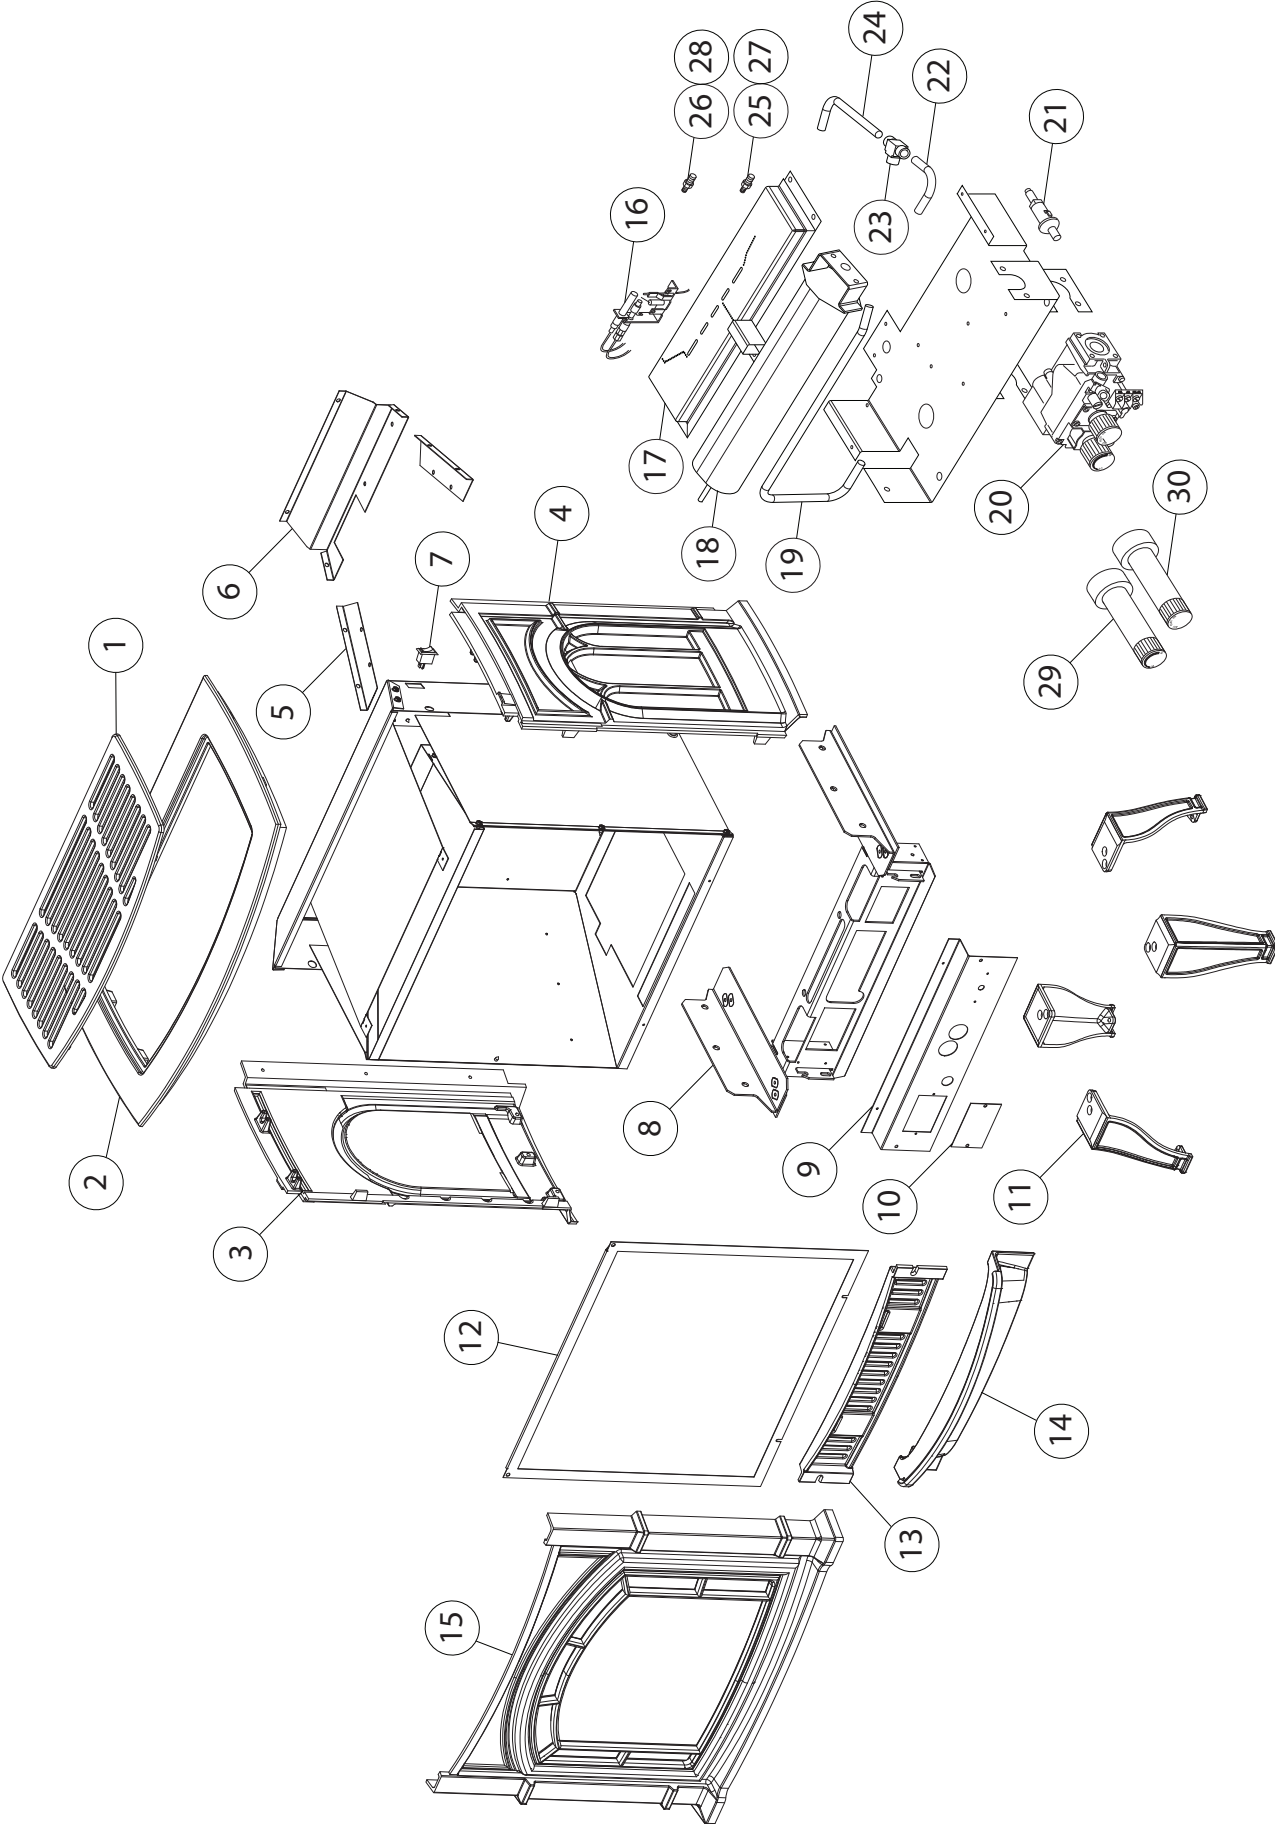

Key	Part #	Description	Qty
1	40861	VF Grate	1
2	40860	VF Top	1
3	40857	Left Side	1
4	40856	Right Side	1
5	27225	Side Log Retainer	2
6	27222	Rear Log Support	1
7	C42373	Rocker Switch	1
8	892537.13	Base Assembly	1
9	892537.7	Control Panel	1
10	892537.8	Control Cover	1
11	40854	Leg	1
12	610120	Front Screen Assy	1
13	40859	Ash Bar	1
14	40858	Control Cover	1
15	40855	Front	1
16	89921	ODS Pilot Assembly (NAT)	1
	89922	ODS Pilot Assembly (LP)	1
17	81211-06	Rear Burner	1
18	81211-05	Front Burner	1
19	81211-12	VF Valve Tube	1
20	81202	Control Valve (LP)	1
	81198	Control Valve (NAT)	1
21	89761	Piezo Ignitor	1
22	81212.14	On/Off Switch	1
23	81211-14	VF Front Burner Tube	1
24	81211-11	5/16 Union Tee	1
25	81211-13	VF Rear Burner Tube	1
26	81210-08	Upper Burner Orifices (Nat) #47	1
27	81210-15	Lower Burner Orifices (NAT) #47	1
28	81211-16	Upper Burner Orifices (LP) #56	1
29	81211-17	Lower Burner Orifices (LP) #55	1
30	81200	HI / LO Knob	1
31	81199	ON / OFF Knob	1

IN ORDER TO MAINTAIN WARRANTY, COMPONENTS MUST BE REPLACED USING ORIGINAL MANUFACTURERS PARTS PURCHASED THROUGH YOUR DEALER OR DIRECTLY FROM THE APPLIANCE MANUFACTURER. USE OF THIRD PARTY COMPONENTS WILL VOID THE WARRANTY.