


Replacement Parts Ashley AP5780

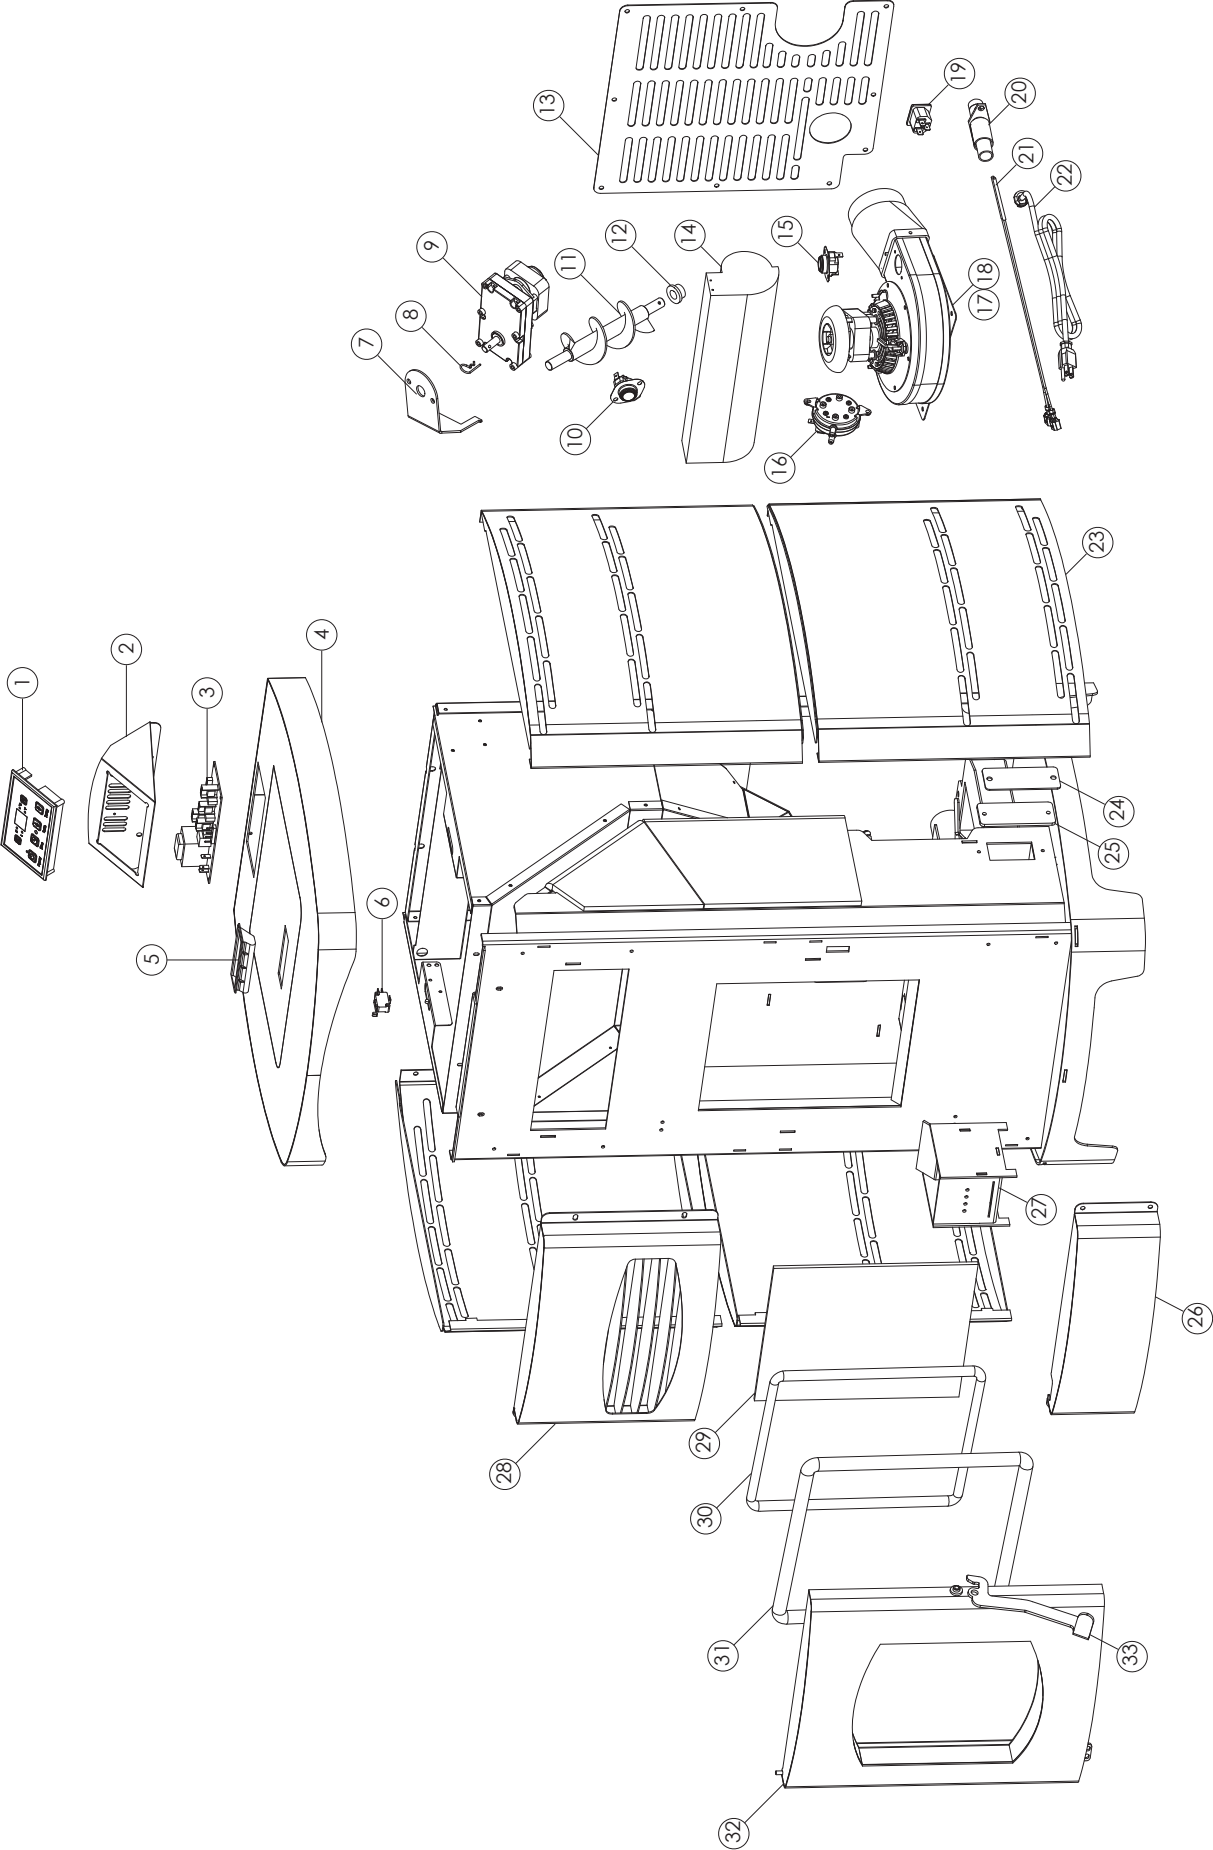

Replacement Parts

Key	Part No.	Description	Qty
1	80630	PCBA, Controller	1
2	892199	Housing, PCBA Controller	1
3	80631	PCBA	1
4	892771	Top Assembly	1
5	891148	Hopper Handle	1
6	80491	Hopper Switch	1
7	892188	Auger Motor Bracket	1
8	83529	Hair Pin	1
9	80488	Auger Motor	1
10	80599	T-disc Exhaust	1
11	892187	Auger	1
12	891132	Auger Bushing	1
13	892776	Vented Back Panel	1
14	80709	Convection Blower	1
15	80455	High Limit T-disc	1
16	80549	Vacuum Switch	1
17	80602	Exhaust Blower	1
18	88166	Gasket, Exhaust Blower	1
19	80462	3 Prong Receptacle	1
20	86633	Ignitor Tube	1
21	80607	Ignitor	1
22	80461	Power Cord	1
23	892764	Side Panels - Set of 2, Gloss Black	1
	892765	Side Panels - Set of 2, Polished Stainless	1
	892766	Side Panels - Set of 2, Brushed Stainless	1
24	892770	Ash Covers	2
25	88266	Ash Cover Gaskets	2
26	892773	Front Lower Plate	1
27	86624	Burn Pot	1
28	892774	Front Louver	1
29	892775	Door Glass	1
30	88267	Glass Gasket	41"
31	88082	Door Gasket	45"
32	892772	Door Assy.	1
33	892663	Door Handle	1

In order to maintain warranty, components must be replaced using original manufacturers parts purchased through your dealer or directly from the appliance manufacturer.
Use of third party components will void the warranty.