

# Model 1864

KEY NO.	DESCRIPTION	PART NO.
1	1/4 LID SUPPORT	40438
2	8" COOK LID	40439
3	LID SUPPORT	40419
4	CONNECTING ROAD	40440
5	DAMPER LEVER	40414
6	DAMPER	40413
7	REAR FLUE BOOT	40441
8	FRONT FLUE BOOT	40442
9	FUEL COVER	40406
10	STOVE BACK	40443
11	RIGHT SIDE GRATE	40444
12	DRAFT CONTROL KNOB	40445
13	DRAFT FRAME	40446
14	REAR DRAFT CONTROL	40447
15	OVEN LEFT SIDE	86586
16	SIDE DRAFT CONTROL	40448
17	STOVE LEFT SIDE	40449
18	ASH PAN GUIDE	40450
19	LEFT SIDE LINER	40451
20	STOVE BOTTOM	40452
21	SIDE APRON	40453
22	LEGS	40410
23	FRONT & REAR APRON	40454
24	MASTER HANDLE	40436

KEY NO.	DESCRIPTION	PART NO.
25	ASH PAN	86587
26	FEED DOOR	40421
27	ASH DOOR	40455
28	DOOR LATCH	86578
29	DOOR HANDLE	40456
30	OVEN DOOR	40426
31	OVEN DOOR HANDLE	891061
32	SPRING COVER	86580
33	DOOR SPRING	891062
34	OVEN RACK	891063
35	FRONT GRATE SUPPORT	40457
36	STOVE FRONT	40458
37	OVEN BOTTOM	86588
38	OVEN RIGHT SIDE	86590
39	SHAKER GRATE	40430
40	ASH FUNNEL	40459
41	REAR GRATE SUPPORT	40460
42	STOVE RIGHT SIDE	40461
43	OVEN TOP	40462
44	CENTER LID SUPPORT	40463
45	OVEN BACK	40464
46	STOVE TOP EXTENSION	40465
47	STOVE TOP	40405
48	5-1/2" COOK LID	40466