

| KEY NO. | DESCRIPTION | PART NO. |
|---------|------------------|----------|
| 1 | TOP PLATE | 40467 |
| 2 | UPPER CHAMBER | 40468 |
| 3 | FEED CHAMBER | 40469 |
| 4 | BURN CHAMBER | 40470 |
| 5 | LOWER CHAMBER | 40471 |
| 6 | BASE | 40472 |
| 7 | LEGS | 40428 |
| 8 | ASH DOOR | 40473 |
| 9 | SLIDE DRAFT | 40474 |
| 10 | SLIDE DRAFT KNOB | 40475 |
| 11 | SHAKER GRATE | 40476 |
| 12 | SPRING HANDLE | 40477 |
| 13 | FEED DOOR | 40420 |
| 14 | SPIN DRAFT | 40478 |
| 15 | COLLAR TOP | 40479 |
| 16 | COOK LID | 40432 |
| N/S | ASH PAN | 86575 |
| N/S | LID LIFTER | 40308 |