

|    | <b>PART#</b> | <b>DESCRIPTION</b>   |
|----|--------------|----------------------|
| 1  | 68898        | Flue Plate           |
| 2  | 23940        | Top                  |
| 3  | 23946        | Outer Back           |
| 4  | 23938        | Left Side            |
| 5  | 23924        | Bottom               |
| 6  | 23937        | Right Side           |
| 7  | C45110       | Fan Cover            |
| 8  | 80167        | Fan Assy.            |
| 9  | C45109       | Top Grill            |
| 10 | C45104       | Bottom Grill         |
| 11 | 23950        | Hinge                |
| 13 | 89670        | Glass and Seal Assy. |
| 14 | CL4549A      | Glass Holder         |
| 15 | 89658        | Door (Gold)          |
| 16 | C18500       | Door Handle          |
| 17 | C95660       | Wood Handle          |
| 18 | 80090        | Fan Speed Control    |
| 19 | 89676        | Leg Retainer         |
| 20 | C41255       | Speed Control Knob   |
| 21 | C99460       | Glass Rope           |
| 22 | C20910       | Set Screw            |
| 23 | 88073        | Fan Gasket           |
| 24 | C45575       | Snap Disc            |
| 25 | C04565       | Cover Plate          |
| 27 | C20500       | Screws               |