

	PART#	DESCRIPTION
1	23932	Burner Base
2	C43810	Piezo Ignitor
3	89653	N.G. valve
4	C43815	Thermopile
5	C43808	N.G. Pilot Orifice
	C43804	L.P. Pilot Orifice
6	86423	Pilot Tube Assy.
7	89685	Pilot Assy N.G.
8	68760	Lower Heat Shield
9	C43808	Bushing
10	C42373	On/Off Rocker Switch
11	89615	N.G. Brass Orifice
	89616	L.P. Brass Orifice
12	C45108	Burner Assy.
13	C93167	Top Right Log
14	C94164	Front Log
15	C93166	Rear Log
16	C94165	Top Left Log
17	68761	Upper Heat Shield
18	C45580	Spill Switch
19	80332	High Temp. Wire
20	23934	Spill Switch Bracket
21	C40965	Rubber Grommet
22	83437	Tek Screws
23	86503	Venturi
24	23933	Burner Support
25	C04575	Pilot Assy. Bracket
26	C04567	Switch Bracket
27	C04569	Piezo Bracket
	C94168	Radiant Embers