



# Stock Wiring Diagram



**Caution:** Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

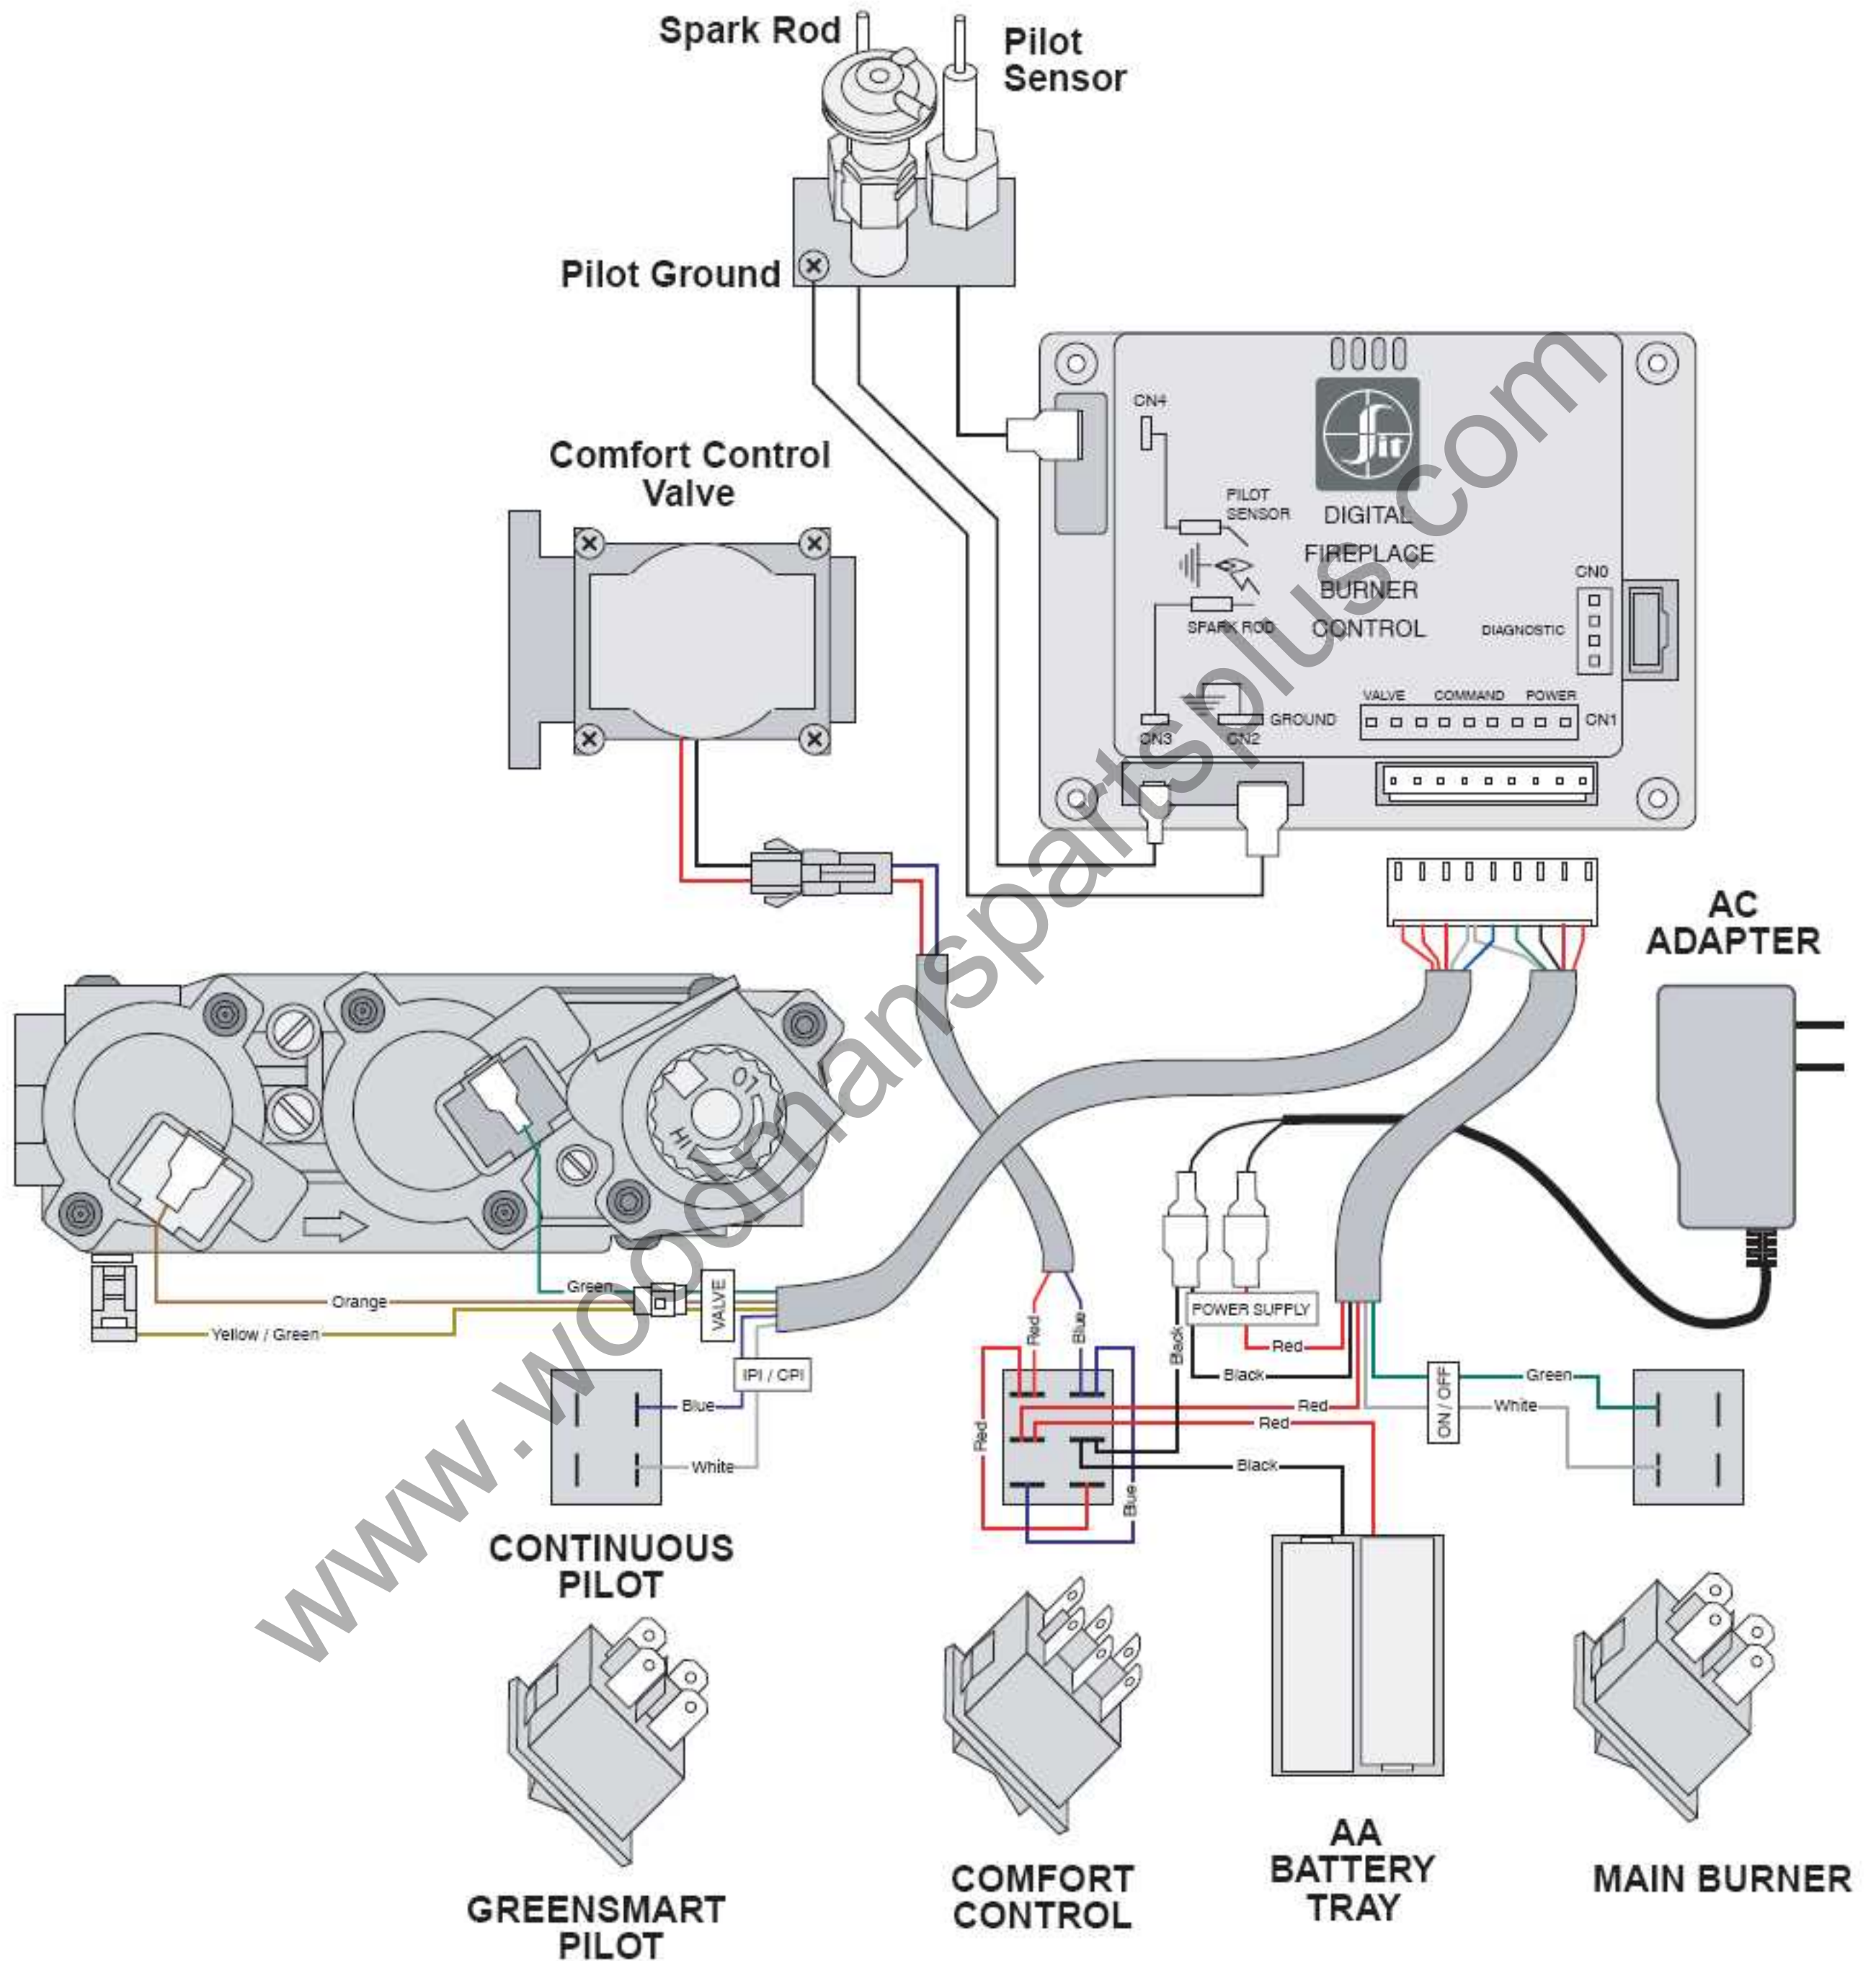


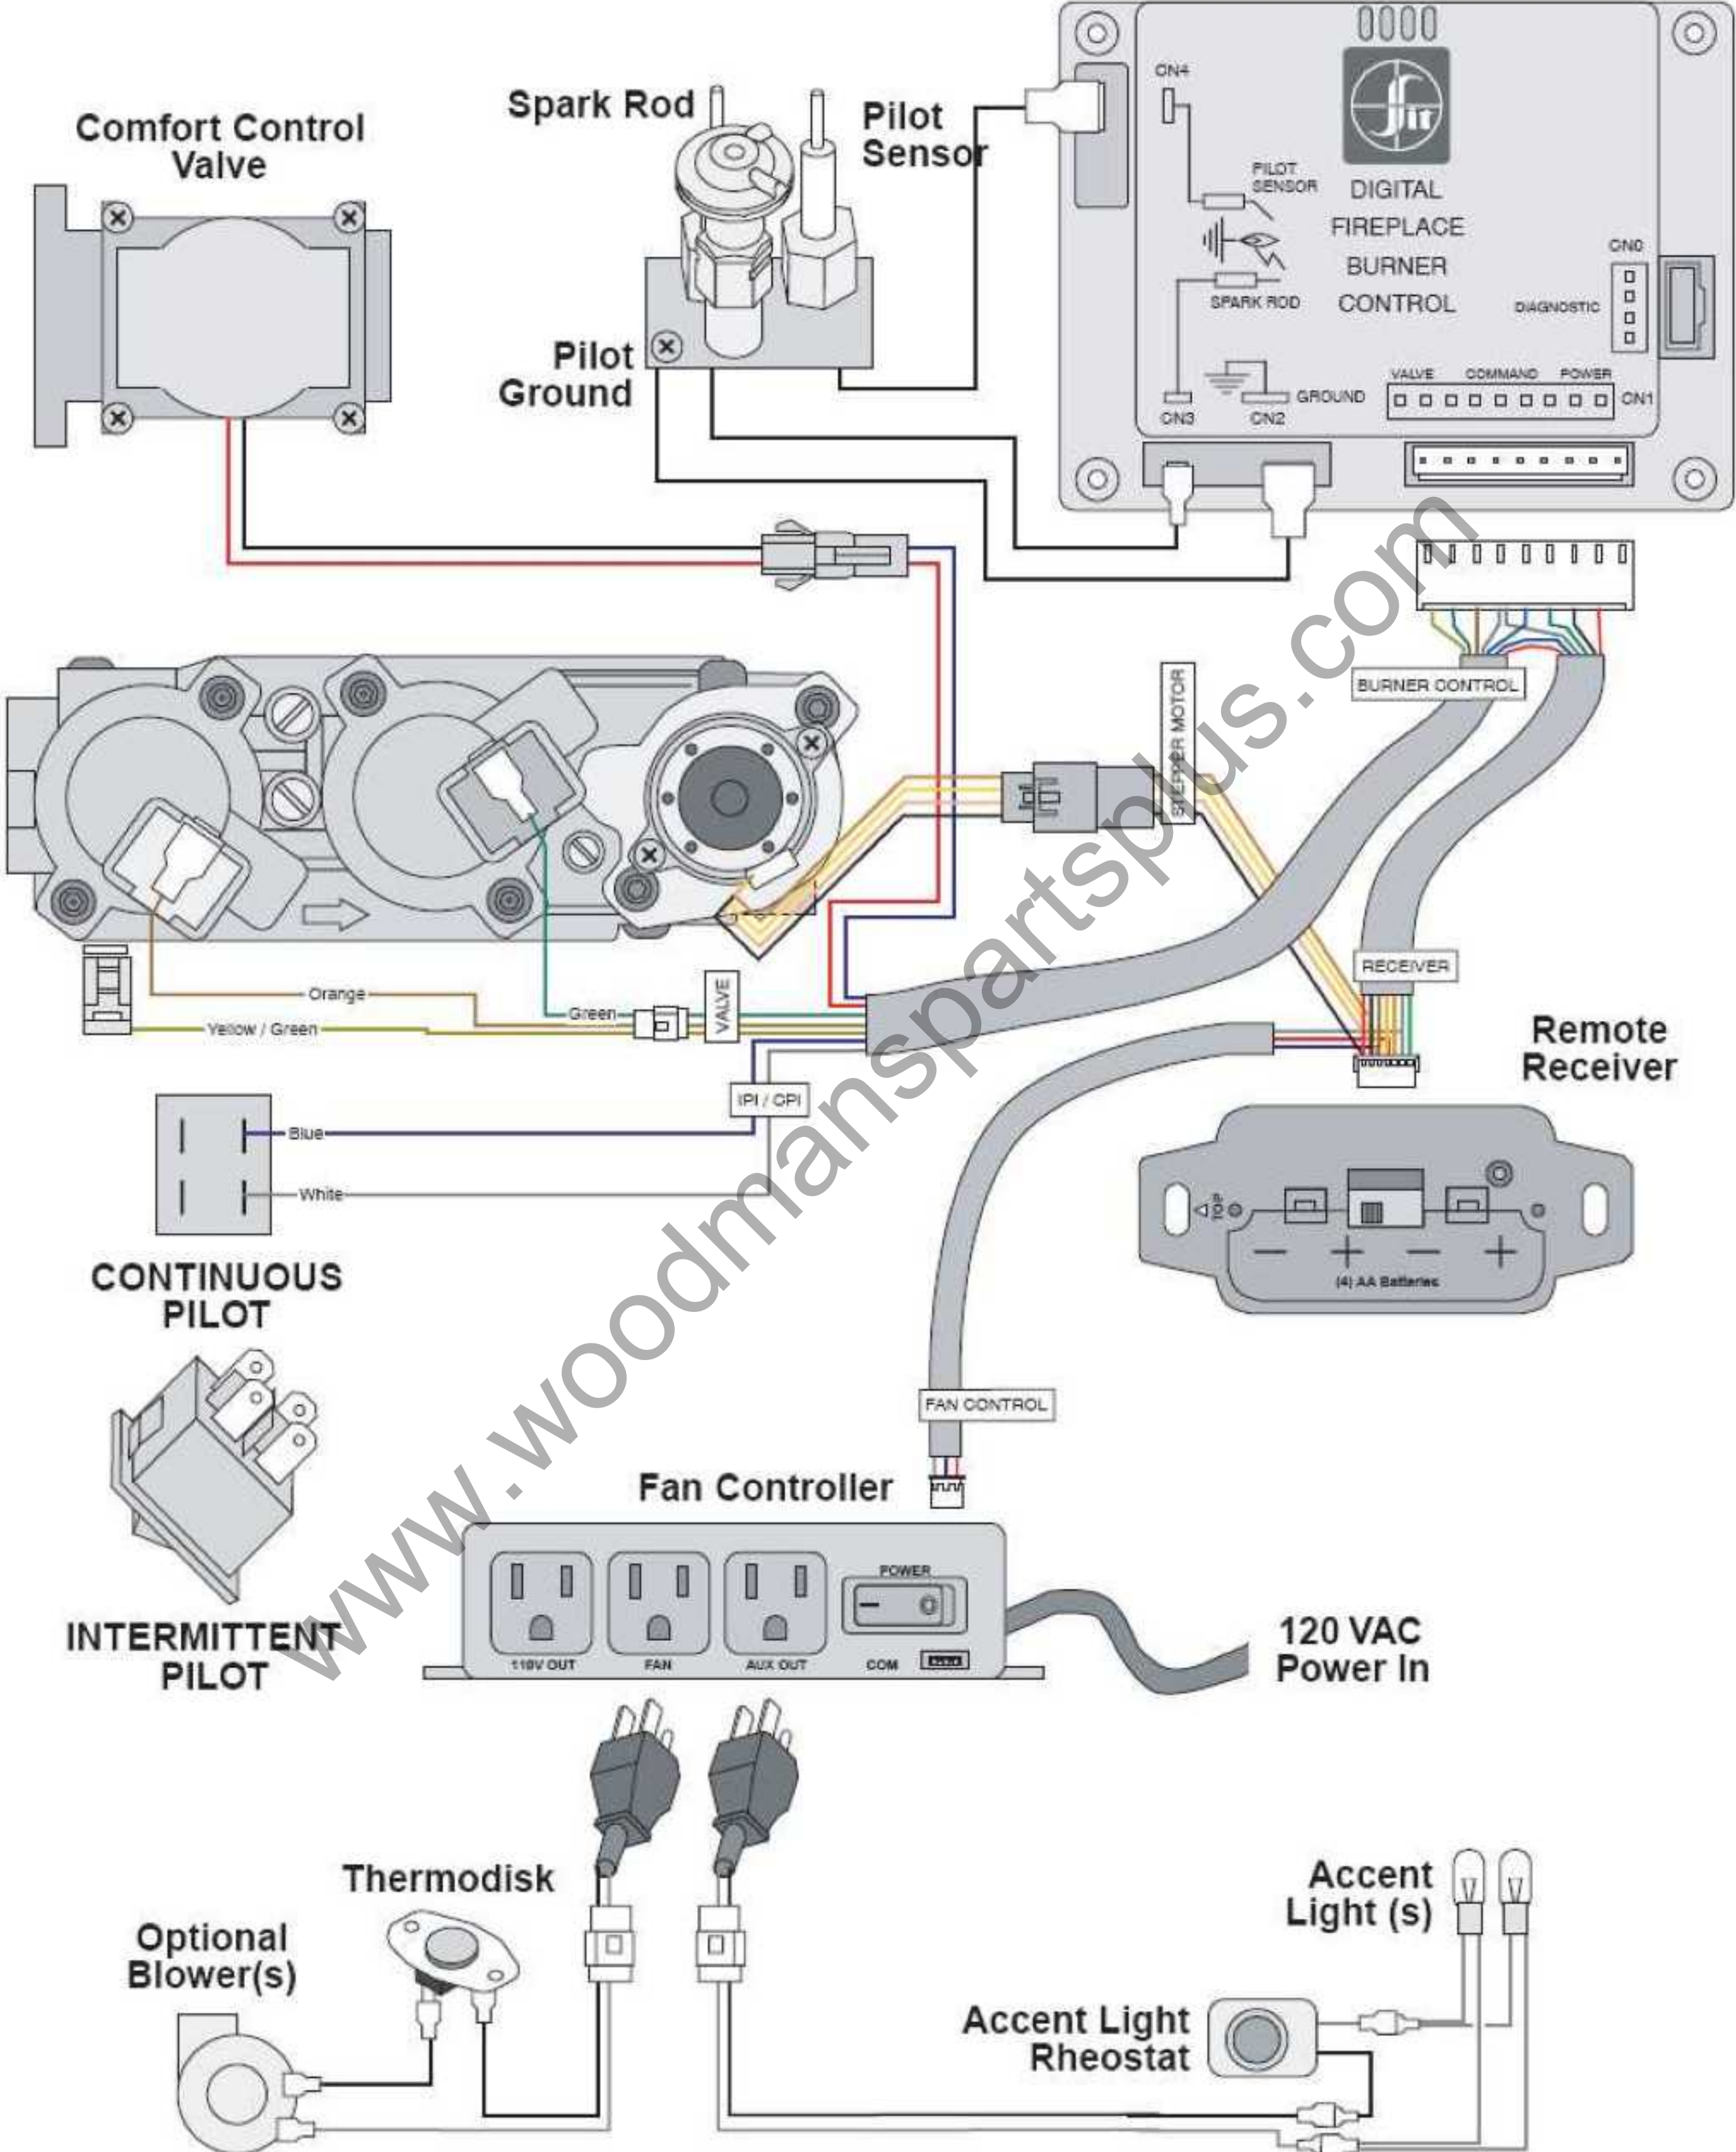

Comfort Control Valve

Spark Rod  
Pilot Sensor


Pilot Ground

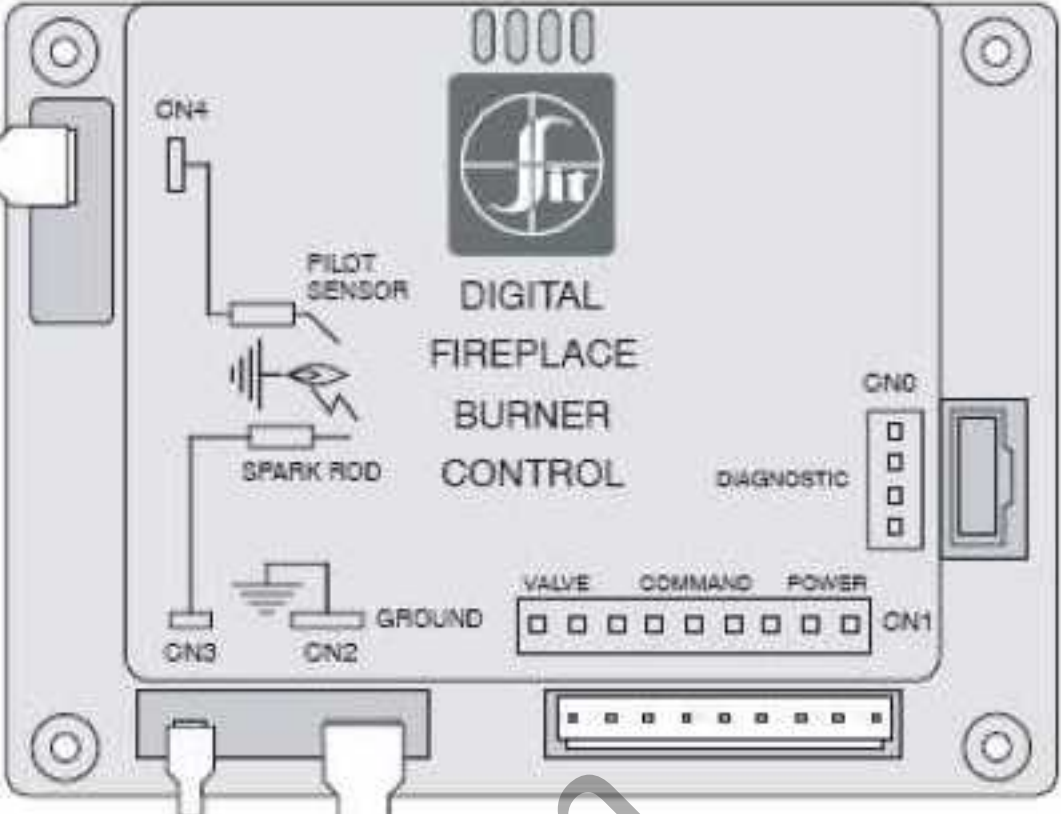

BURNER CONTROL

RECEIVER

Remote Receiver

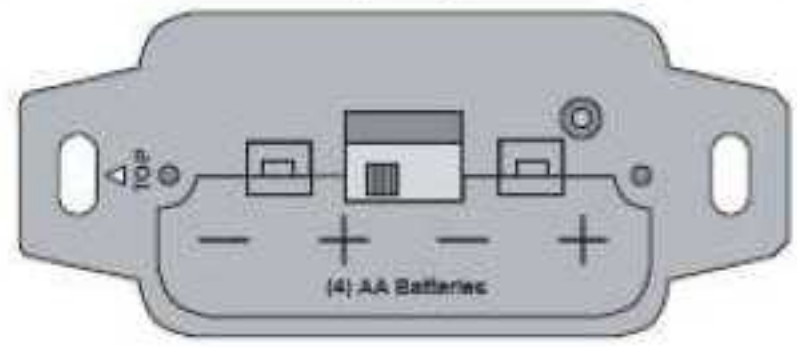

FAN CONTROL

Fan Controller

120 VAC Power In

CONTINUOUS PILOT

INTERMITTENT PILOT

www.woodmanspartsplus.com

Thermodisk

Optional Blower(s)

Accent Light (s)

Accent Light Rheostat