

Accent Light – Type III

Installation Instructions

94400120



INSTALL THE NICHE BEFORE THE ACCENT LIGHT (IF APPLICABLE)

Install the accent light after the optional niche (the accent light assembly interferes with niche placement).



INSTALL THE ACCENT LIGHT BEFORE THE BLOWER (IF APPLICABLE)

Install the blower after the accent light. Leave the control cover loose for blower rheostat installation.

Packing List:

- Accent Light Assembly
- Wiring Harness
- Rheostat (with knob and Nut)
- T4 Halogen Bulb

Bulb Type

- 35 Watt 120 Volt T4 Halogen Bulb (G6.35 Base)

Installation




Make sure power to the fireplace has been turned off prior to installation (disable the service breaker).



Do not connect 110-120 VAC to the gas control valve or wiring system of this fireplace.

1. Remove the burner (see the owner's manual for details). Remove the cover plate and gasket near the pilot assembly.

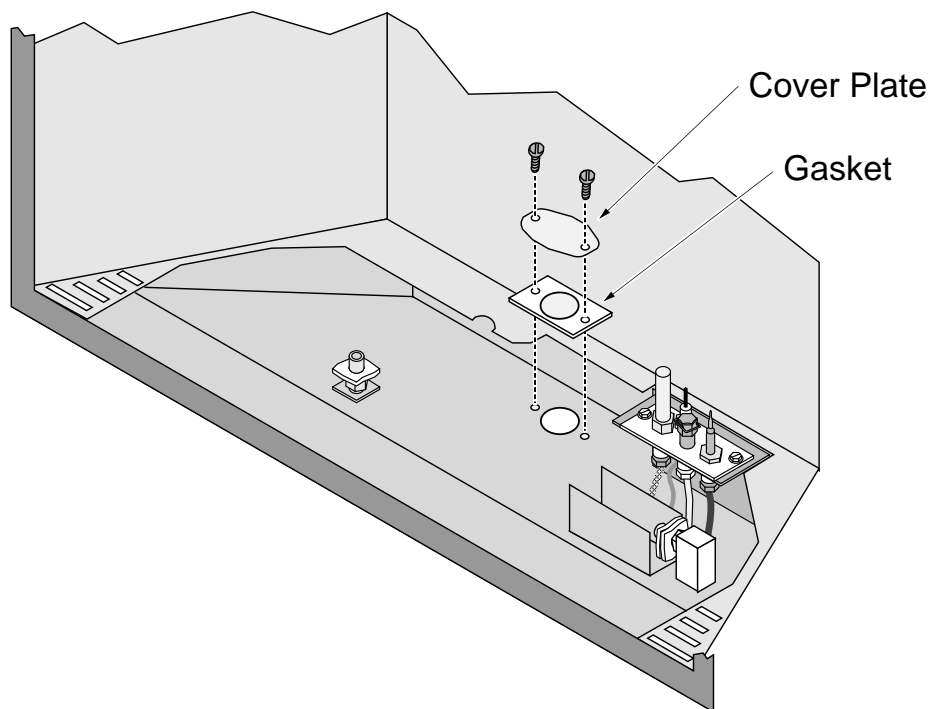




TRAVIS INDUSTRIES
HOUSE OF FIRE

Accent Light – Type III


Installation Instructions

94400120

2. Disassemble the accent light assembly (the pieces are held together with two tabs – you may need to grasp the base with pliers while removing the cover).

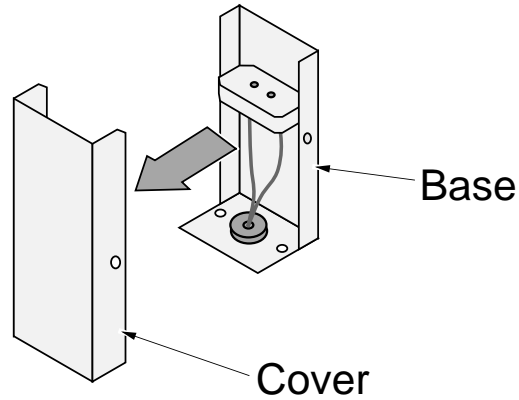

3. Insert the wires from the accent light through the gasket removed in step 1 then through the hole exposed in the burner tray. Attach the accent light base to the burner tray using the screws removed in step 1.

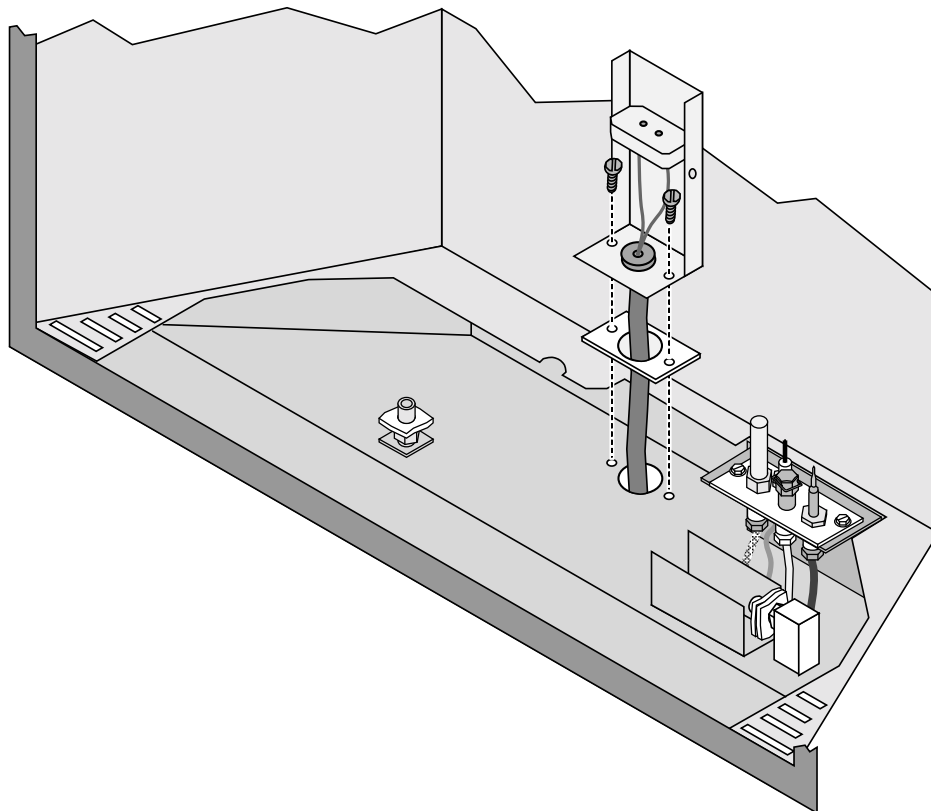




TRAVIS INDUSTRIES
HOUSE OF FIRE

Accent Light – Type III


Installation Instructions

94400120

4. Install the bulb (take care to not touch the bulb with your fingers – use the foam packing to hold the bulb). Attach the cover to the accent light base.

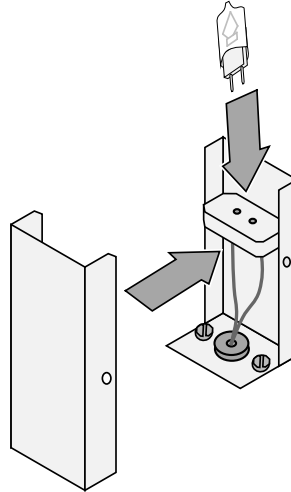

5. Remove the two screws holding the control cover in place.

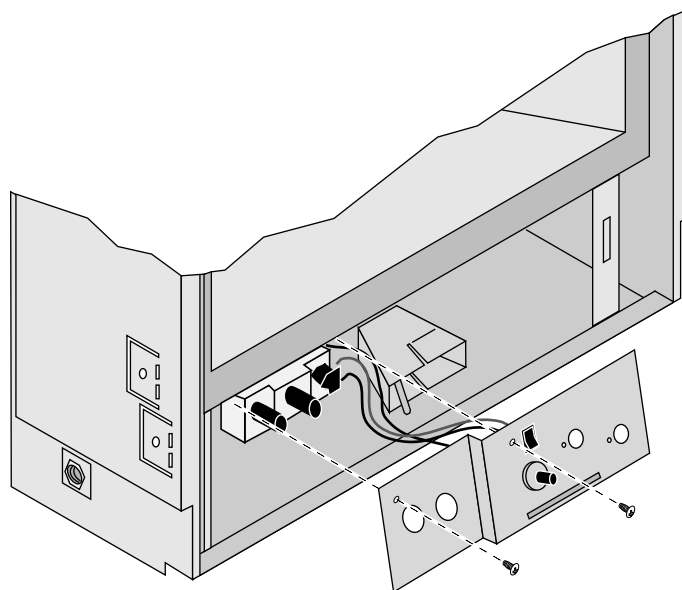



TRAVIS INDUSTRIES
HOUSE OF FIRE


Accent Light – Type III

Installation Instructions

94400120

6. Attach the wiring harness to the rheostat, accent light, and junction box following the directions below.

NOTE: If using the Omega remote, the rheostat and accent light wiring harness are not used (the accent light leads connect to the remote receiver – see the installation manual for details).

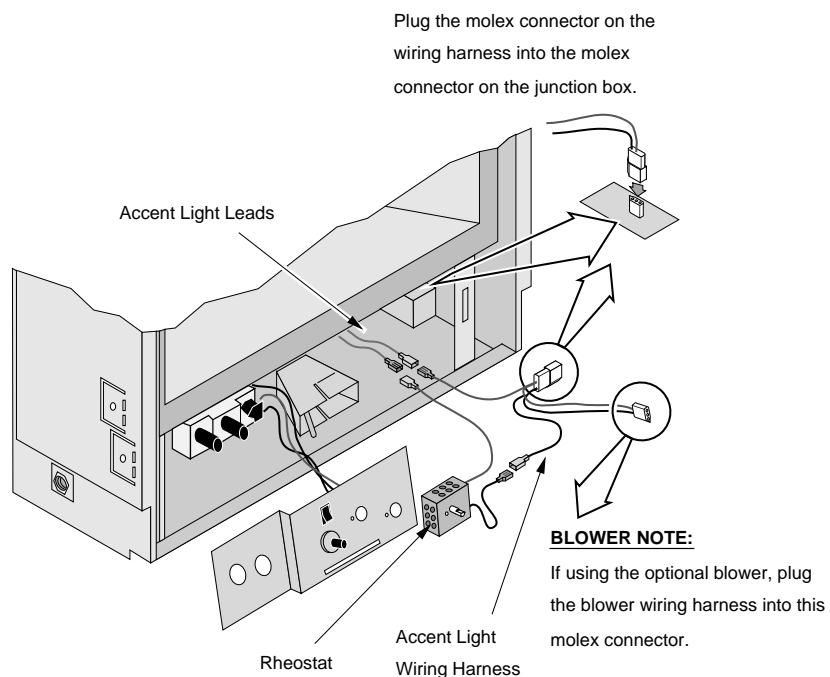

7. Attach the rheostat to the cover plate as shown below. Make sure the small white tab on the rheostat inserts through the corresponding small hole on the cover plate. Re-attach the cover plate, making sure all wiring is away from any hot or moving surfaces.

