

American Hearth Lincoln 26 Part List

INDEX NO.	PART NO.	DESCRIPTION
COMMON PART NUMBERS		
1	10554	NAILING FLANGE
2	17182	JUNCTION BOX ASSEMBLY
3	23461	TRIM - TOP
4	23462	TRIM - LEFT
5	23463	TRIM - RIGHT
6	23464	LOUVER ASSEMBLY - UPPER
7	23465	LOUVER ASSEMBLY - LOWER
8	23460	HOOD
9	23470	SCREEN FRAME ASSEMBLY
13	17235	BRACKET, LOG LOCATOR
15	R7624	AIR SHUTTER
17	R7572	JAMB NUT
19	P212	FITTING, ORIFICE
NS	R5668	IGNITOR WIRE
NS	15998	ROCK WOOL
VFD26F(M,P)20L(N,P)		
10	R5170	PILOT ASSEMBLY (LPG)
10	R5171	PILOT ASSEMBLY (NAT)
11	21590	PILOT BRACKET (LPG)
11	23106	PILOT BRACKET (NAT)
12	23449	PILOT SHIELD
14	R9022	BURNER TUBE
16	P182	ORIFICE (LPG)
16	P265	ORIFICE (NAT)
18	23473	BURNER BASE PLATE ASSEMBLY
20	R2423	CONNECTOR, MALE
21	23477	VALVE (NAT)
21	23487	VALVE (LPG)
22	23475	TUBING ASSEMBLY - SUPPLY
23	23476	TUBING ASSEMBLY
27	P239	NIPPLE, 3/8 NPT X 1 1/2
28	R2479	REGULATOR (NAT)
28	R2480	REGULATOR (LPG)
29	R2708	IGNITOR, PIEZO

INDEX NO.	PART NO.	DESCRIPTION
VFD26F(M,P)30L(N,P)		
10	R3623	PILOT ASSEMBLY (LPG)
10	R3624	PILOT ASSEMBLY (NAT)
11	21590	PILOT BRACKET (LPG)
11	23106	PILOT BRACKET (NAT)
12	23449	PILOT SHIELD
14	R9022	BURNER TUBE
16	P182	ORIFICE (LPG)
16	P288	ORIFICE (NAT)
18	23473	BURNER BASE PLATE ASSEMBLY
20	R2423	CONNECTOR, MALE
21	R3625	VALVE (LPG)
21	R3626	VALVE (NAT)
22	23493	TUBING ASSEMBLY - SUPPLY
23	23496	TUBING ASSEMBLY (LPG)
23	23492	TUBING ASSEMBLY (NAT)
24	R2083	REGULATOR, NAT PILOT (NAT)
25	23491	TUBING ASSEMBLY (NAT)
26	23450	VALVE BRACKET
29	R2708	IGNITOR, PIEZO
30	R3436	SWITCH, REMOTE/OFF/ON
NS	R10947	WIRE ASSEMBLY
VFD26F(M,P)30L10(N,P)		
10	R3623	PILOT ASSEMBLY (LPG)
10	R3624	PILOT ASSEMBLY (NAT)
11	21590	PILOT BRACKET (LPG)
11	23106	PILOT BRACKET (NAT)
12	23449	PILOT SHIELD
14	27426	BURNER TUBE
16	P214	ORIFICE (NAT)
16	P193	ORIFICE (LPG)
20	R2423	CONNECTOR, MALE
21	R9388	VALVE (NAT)
21	R9389	VALVE (LPG)
22	23493	TUBING ASSEMBLY - SUPPLY
23	23496	TUBING ASSEMBLY (LPG)
23	23476	TUBING ASSEMBLY (NAT)
24	27426	REGULATOR, NAT PILOT
25	23491	TUBING ASSEMBLY (NAT)
26	23450	VALVE BRACKET
29	R2708	IGNITOR, PIEZO
30	R3436	SWITCH, REMOTE/OFF/ON
NS	R10947	WIRE ASSEMBLY

INDEX NO.	PART NO.	DESCRIPTION
VFD26F(M,P)70L(N,P)		
10	R11327	PILOT ASSEMBLY (LPG)
10	R11328	PILOT ASSEMBLY (NAT)
11	30703	PILOT BRACKET (LPG)
14	R9022	BURNER TUBE
16	P182	ORIFICE (LPG)
16	P288	ORIFICE (NAT)
18	30704	BURNER BASE PLATE ASSEMBLY
20	R6207	ELBOW NPT x TUBE
21	R11126	VALVE (LPG)
21	R11125	VALVE (NAT)
22	30981	TUBING ASSEMBLY - INLET
23	33808	TUBING ASSEMBLY (LPG)
23	33807	TUBING ASSEMBLY - PILOT (NAT)
24	R7063	REGULATOR, NAT PILOT (NAT)
25	30984	TUBING ASSEMBLY - VALVE (NAT)
26	29377	VALVE BRACKET
30	R2522	SWITCH, REMOTE/OFF/ON
31	B100100	NIPPLE - NPT x TUBE
32	R11332	24" SENSOR WIRE
33	R11333	24" IGNITOR WIRE
34	29699	SWITCH BRACKET
35	R11122	BATTERY HOLDER
36	R11123	WIRE HARNESS
37	R2667	5-1/2" BLACK WIRES (QTY 2)
38	R11128	AC ADAPTER
39	R11127	DFC CONTROL BOARD
NS	R7591	FLEX WITH SHUT OFF

INDEX NO.	PART NO.	DESCRIPTION
VFD26F(M,P)70L10(N,P)		
10	R11327	PILOT ASSEMBLY (LPG)
10	R11328	PILOT ASSEMBLY (NAT)
11	30703	PILOT BRACKET (LPG)
14	27426	BURNER TUBE
16	P214	ORIFICE (NAT)
16	P193	ORIFICE (LPG)
18	30704	BURNER BASE PLATE ASSEMBLY
20	R6207	ELBOW NPT x TUBE
21	R11210	VALVE (NAT)
21	R11211	VALVE (LPG)
22	30981	TUBING ASSEMBLY - INLET
23	33808	TUBING ASSEMBLY (LPG)
23	33807	TUBING ASSEMBLY - PILOT (NAT)
24	R7063	REGULATOR, NAT PILOT (NAT)
25	30984	TUBING ASSEMBLY - VALVE (NAT)
26	29377	VALVE BRACKET
30	R2522	SWITCH, REMOTE/OFF/ON
31	B100100	NIPPLE - NPT x TUBE
32	R11332	24" SENSOR WIRE
33	R11333	24" IGNITOR WIRE
34	29699	SWITCH BRACKET
35	R11122	BATTERY HOLDER
36	R11123	WIRE HARNESS
37	R2667	5-1/2" BLACK WIRES (QTY 2)
38	R11128	AC ADAPTER
39	R11127	DFC CONTROL BOARD
NS	R7591	FLEX WITH SHUT OFF
5 PIECE LOG ASSEMBLY		
41	R7587	REAR LOG
42	R7586	MIDDLE LOG
43	R7585	FRONT LEFT LOG
44	R7554	FRONT RIGHT LOG
45	R7588	Y-TWIG

NS - NOT SHOWN