

Atlanta Sears Combi 311.841560 Parts List

Note that the quantities listed here below are the standard amounts that are found in each unit and not the number of items you need to order.

Item No.	Description	Part No.
1	Cabinet	401070
2	Side Hearth	300146
3	Front Hearth	300145
4	Grill	206803
5	Left Front Door	206797
6	Right Front Door	206798
7	Side Door	206802
8	Fire Brick Split (17 Req)	154400
9	Fire Brick Soap (5 Req)	403003
10	Draft Register (3 Req)	203815
11	Draft Baffle (3 Req)	203858
12	½-13 Screw (3 Req)	101960
13	Door Seal Rope (3 Req)	154165
14	Leg (4 Req)	203813
15	Handle Casting (2 Req)	206807
16	Door Handle Cap (2 Req)	300149
17	Wood Door Handle (2 Req)	300150
18	¼" Flat Washer (2 Req)	102560
19	Handle Screw (2 Req)	101810
20	Door Latch (2 Req)	301663
21	¼" Lock Washer (2 Req)	102260
22	¼ x 1 Screw (2 Req)	101585
23	3/8" Nut (4 Req)	102205
24	Hinge Pin (6 Req)	102398
25	Spark Arrestor	401053
26	¼ Joint Stove Pipe	149830
27	Floor Leveler (4 Req)	147220