

BREF30/36/42, BREF30/NH36NH/42NH Electric Fireplace

For Units EFHM4H0, EFHM4J0, EFHM1M0, EFNM1H0, EFNM1J0, EFNM1M0

Ref.	Description	BREF30	BREF30NH	BREF36	BREF36NH	BREF42	BREF42NH
1.	Log Set Complete	10007423	10007423	10007423	10007423	10007664	10007664
2.	Heater Element	10004584	--	10004584	--	10004584	--
3.	Motor, AC, w/Terminals	10004262	10004262	10004262	10004262	10004262	10004262
4.	Rocker Switch (Illuminated)	10001393	10001393	10001393	10001393	10001393	10001393
5.	Thermostat - Heater Control	10002987	--	10002987	--	10002987	--
6.	Fan w/Bracket Assembly	10004695	--	10004695	--	10004695	--
7.	Sensor, 230°F Manual Reset	10004720	--	10004720	--	10004720	--
8.	Knob - Heater Controls	10001639	--	10001639	--	10001639	--
9.	Plate Control Assembly	10007610	10007830	10007443	10007608	10007443	10007608
10.	Screen Tinted Plastic (Not Shown)	10007612	10007612	10007430	10007430	10006391	10006391
11.	Ember Lava Rock	10007461	10007461	10007461	10007461	10007667	10007667
12.	Flame Generator Assembly	10003350	10003350	10003350	10003350	10004847	10004847
13.	Support Plate	10007434	10007434	10007434	10007434	10007673	10007673
14.	Plate Log Support Assembly	10007447	10007447	10007447	10007447	10007666	10007666
15.	Socket Light Bulb Lower Assembly	10006453	10006453	10006453	10006453	10006453	10006453
16.	Limit Control, 175/20 DIF	10001172	--	10001172	--	10001172	--
17.	Transmitter	10007005	--	10007005	--	10007005	--
18.	Receiver	10007452	--	10007452	--	10007452	--
19.	CFM Wire Req'd (not shown)	10006382	10007639	10006382	10007639	10006382	10007639
20.	Screen Assembly	7554299	7554299	7554338	7554338	7554340	7554340
21.	Screen Rod	3993138	3993138	10007433	10007433	10007433	10007433
22.	One Piece Screen Pull (2 per Fireplace)	7554239	7554239	7554239	7554239	7554239	7554239
23.	Cable Clip (4 per Fireplace)	7512135	7512135	7512135	7512135	7512135	7512135

NOTE: Items 17 and 18 (Transmitter and Receiver) must be replaced as a set.

partsplus.com