

CABINET ASSEMBLY - THERMOSTAT

Item No.	Description	Part Number
1	Cabinet Top Assembly.....	510368
2	Cabinet Back Assembly.....	X510370
3	Cabinet, Right Side.....	X510373
4	Cabinet Door.....	X510372
5	Knob, Cabinet Door.....	510127
6	Door Strike.....	510366
7	Bottom Front Panel Assembly.....	X510374
8	Cabinet, Left Side.....	X510376
9	Front Frame Assembly.....	X510367
10	Knob, Thermostat.....	510180
11	Plate, Thermostat Trim.....	510325
12	Cotter Key.....	121267
13	Washer, Flat.....	120479
14	Spring, Thermostat.....	510182
15	Disc, Friction (Inside).....	510222
16	Housing, Thermostat.....	510187
17	Disc, Friction (Outside).....	510185
18	Thermostat Assembly (Bimetal).....	X510530
19	Adjustment Nut.....	121382
20	Adjustment Screw.....	121405
21	Rod, Thermostat.....	510207

Woodmanspartsplus.com

Item No.	Description	Part Number
22	Firebox Assembly Complete.....	X510545
23	Gasket, Flue Collar.....	.510335
24	Flue Collar.....	.510166
25	Plate, Secondary Air Adjustment	.510164
26	Pin, Hinge (Cast Door).....	.510197
27	Door, Load.....	.510167
*27A	Gasket, Load Door.....	.070394
28	Latch, Door.....	.510169
29	Handle, Door.....	.510168
30	Eyelet Screw.....	.510578
31	Pull Handle (Wood).....	.510577
32	Shield, Handle.....	.510654
33	Retainer, Firebrick, Side.....	.510575
34	Clamp, Smoke Baffle.....	.510583
35	Smoke Baffle.....	.510258
36	Grate Support.....	.510267
37	Firebrick.....	.510161
38	Retainer, Firebrick.....	.51
39	Rear Support Assembly.....	X51
40	False Bottom.....	.51
41	Retainer, Shaker Back.....	.510255
42	Shaker Grate, Right.....	.510252
43	Retainer, Shaker, Front.....	.510254
44	Gear, Shaker.....	.510253
45	Grate.....	.510250
46	Shaker Grate, Left.....	.510251
47	Scoop Assembly.....	X510269
48	Heat Liner, Right Side.....	.510155
49	Ash Pan.....	.510428
51	Handle, Grate Shaker.....	.510256
52	Door, Ash.....	.510170
*52A	Gasket, Ash Door.....	.070393
53	Pin, Draft Door.....	.510165
54	Draft Door Assembly.....	X510418
55	Manifold, Draft.....	.510162
56	Heat Shield, Floor.....	.510657