

CF9030

	Part #	Part Description	QTY
1	50002625	BOTTOM PANEL ASSY	1
2	50001317	LEG ASSY	4
22	50001845	GREASE CUP	1
23	50001319	GREASE CUP HOLDER	1
24	50000072	ELECTRODE SHORT - MAIN	1
25	50000071	ELECTRODE LONG - MAIN	2
26	50000177	LID BUMPERS	4
27	50001418	SUPPORT SHELF BLACK - Left rear & right front	2
28	50001419	SUPPORT SHELF BLACK - Right rear & left front	2
29	50001482B	FRONT LIP	1
30	50000358	IGNITOR ASSY - 3 TERM. & IGNITOR KNOB incl.	1
31	50002529B	SIDE SHELF	2
32	50001390	HARDWARE BAG	1
N/A	50001643	TEMPERATURE GAUGE	1
N/A	50001533	VC LOGO	1
N/A	50003432	CONSOLE REPAIR KIT	1
N/A	VC303-3496	BBQ COVER	1
N/A	VC703-1244	26 ROTISSERIE KIT	1
3	50002768	FRONT PANEL - BLUE	1
4	50000090	CASTER (POP IN)	4

N/A	50001318	CASTER INSERT	4
5	50001462	BASE ASSY	1
6	50003512	LID ASSY - REAR. Also send p/n 50000355.	1
7	50001300B	FLASH TUBE	1
8	50001302	GREASE PAN SUPPORT	2
9	50000892	BURNER GASKET	3
10	50003100	BURNER TUBE with SHORT ELECTRODE	1
N/A	50003133	BURNER TUBE with LONG ELECTRODE	2
N/A	50003457	BURNER REPAIR KIT	3
11A	50001439	VALVE ASSY NG	1
11B	50001438	VALVE ASSY LP	1
12	50001440	CONSOLE ASSY 9030	1
13A	50003647	REGULATOR LP	1
13B	50000198	12 NATURAL GAS HOSE	1
14	50000355	PIVOT PIN & BOLT SET - Send with lid assembly	1
15	50002606	LID ASSY - FRONT. Also send p/n 50000355.	1
16	50001301	GREASE PAN	1
17	50001314	COOKING GRIDS (SET OF 2)	1
18	50001327	BEZEL	3
19	50001455	CONTROL KNOB	3
20	50000877	HEAT PLATE (ENAMEL)	3
21	50001311	WARMING RACK (ENAMEL)	1