

CF9055_3A

REF #	Part #	Part Description	QTY
1	50001643	TEMPERATURE GAUGE	1
2	50000177	LID BUMPER	4
N/A	50001845	GREASE CUP	1
26	50001328	CONTROL KNOB	4
27	50001196	CONSOLE	1
N/A	50003100	BURNER TUBE with SHORT ELECTRODE	2
N/A	50003133	BURNER TUBE with LONG ELECTRODE	2
N/A	50003457	BURNER REPAIR KIT	4
29	50000986B	SHELF S/S - FRONT LEFT	1
30	50000892	BURNER GASKET	4
31	50001167	BASE ASSY	1
32	50000879B	FLASH TUBE	1
33	50001226	COOKING GRIDS (SET OF 3)	1
34	50000877	HEAT PLATE (ENAMEL)	4
35	50000802	WARMING RACK (ENAMEL)	1
36	50003514	LID ASSY REAR - Also send p/n 50000355.	1
37	50001452	LID ASSY FRONT - Also send p/n 50000355.	1
N/A	50003432	CONSOLE REPAIR KIT	1
N/A	VC303-3576	BBQ COVER	1

CF9055_3A

N/A	VC703-1284	29 ROTISSERIE KIT	1
N/A	VCGP1A	GRIDDLE - replaces one cooking grid.	1
3	50000355	PIVOT PIN & BOLT SET - Send with lid assembly	1
5	50001413B	SHELF TOP	2
6	50001327	KNOB BEZEL	4
7	50001418	SUPPORT SHELF BLACK - Left rear & right front	2
N/A	50001419	SUPPORT SHELF BLACK - Right rear & left front	2
8	50000984B	SHELF S/S - FRONT RIGHT	1
9	50000523	ELECTRODE MAIN LONG	2
10	50000431	ELECTRODE MAIN SHORT	2
11	50001456	REGULATOR - LP	1
12A	50000801	VALVE ASSY - LP	1
12B	50000850	VALVE ASSY - NG	1
13	50000816	IGNITOR KIT (Push Button Included)	1
14	50000198	12 HOSE - NG	1
15	50001221	DRAWER SUPPORT RIGHT	1
16	50000785	CABINET END ASSY RIGHT	1
17	50001339	CABINET PANEL - LOWER	1
18	50001467B	DOOR	2
19	50000313	DOOR HANDLE	2
20	50000090	CASTER (POP IN)	4
21	50000784	CABINET END ASSY LEFT	1

CF9055_3A

22	50001222	DRAWER SUPPORT LEFT	1
23	50000788	CABINET PANEL UPPER	1
24	50000952	PLATE - FRONT COVER	1
25	50002155	GREASE PAN	1

WoodmansPartsPlus.com